


11.8 ft x 18 ft Modern Lounge Pavilion

Installation and Operating Instructions – YM12590

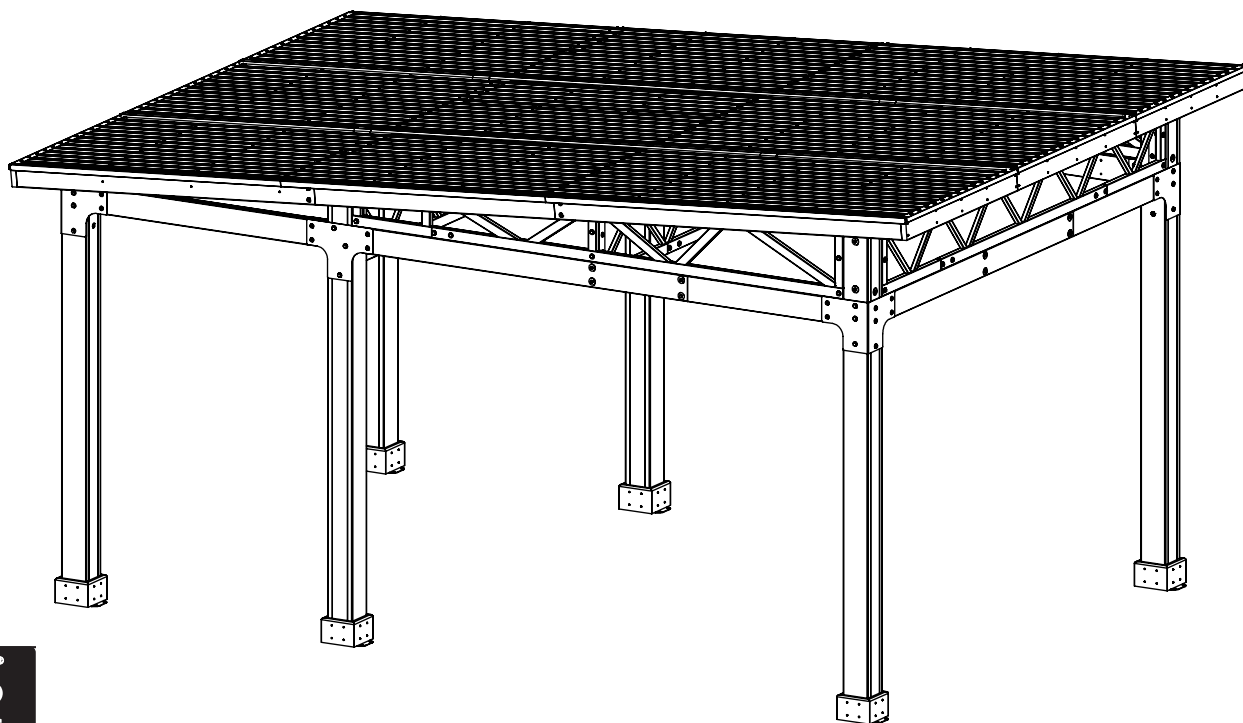

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY
THIS ITEM IS INTENDED FOR OUTDOOR DOMESTIC USE ONLY.
NOT FOR COMMERCIAL USE.

HEIGHT:
2.8 m / 9.2 ft

Revised 03-06-2026

YARDISTRY®

Yardistry – North America
Toll Free Customer Support:

1.888.509.4382

Mon - Fri, 8:30 am - 5:00 pm EST
(excl. holidays)


English and French Spoken

For extended hours see our website:

www.yardistrystructures.com

info@yardistrystructures.com

Patents Pending

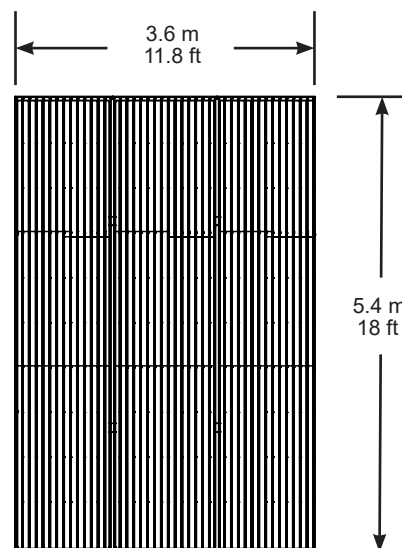

Important Safety Notice!

Yardistry components are intended for privacy, decorative and ornamental use only.

Product is NOT INTENDED for the following:

- A safety barrier to prevent unsupervised access to pools, hot tubs, spas or ponds.
- As load bearing support for a building, structure, heavy objects or swings.
- Used in structures that trap wind, rain or snow that would create extra load on the product.

Accumulated snow must be removed from roof.

DO NOT climb or walk on roof for any reason.

Permanent structures may require a building permit. As the purchaser and or installer of this product you are advised to consult local planning, zoning and building inspection departments for guidance on applicable building codes and/or zoning requirements.

Wood is NOT flame retardant and will burn. Grills, fire pits and chimineas are a fire hazard if placed too close to a Yardistry structure. Consult user's manual of the grill, fire pit or chiminea for safe distances from combustible materials.

Wear gloves to avoid injury from possible sharp edges of individual elements before assembly.

During installation, follow all safety warnings provided with your tools and use OSHA approved safety glasses. Some structures may require two or more people to install safely.

Check for underground utilities before digging or driving stakes into the ground!

During assembly it is important to closely follow the instructions. Complete the assembly on a solid, level surface and follow the instructions to square up, level and anchor the structure. This will reduce the gaps at wood connections during assembly.

General Information

General Information: Wood components are manufactured with premium outdoor lumber (c.lanceolata) which is protected with factory applied water-based stain. Knots, small checks (cracks) and weathering are naturally occurring and do not affect the strength of the product. Annual application of a water-based water repellent sealant or stain is important and will help reduce weathering and checks.

www.yardistrystructures.com

Questions?

Call toll free or write us at:

1 (888) 509-4382

support@yardistrystructures.com

Regular Hours: Mon - Fri, 8:30 am - 5:00 pm EST
(excl. holidays)

English and French Spoken

(For extended hours see our website)

www.yardistrystructures.com

Patents Pending

Limited Warranty

Yardistry warrants that this product is free from defect in materials and workmanship for a period of one (1) year from the original date of purchase. In addition, for any product with lumber, all lumber is warranted for five (5) years against rot and decay. This warranty applies to the original owner and registrant and is non-transferable.

Regular maintenance is required to assure the integrity of your product and is a requirement of the warranty. This warranty does not cover any inspection costs.

This Limited Warranty does not cover:

- Labor for replacement of any defective item(s);
- Incidental or consequential damages;
- Cosmetic defects which do not affect performance or integrity;
- Vandalism; improper use or installation; acts of nature, including but not limited to wind, storms, hail, floods, excessive water exposure;
- Minor twisting, warping, checking or any other natural occurring properties of wood that do not affect performance or integrity.

Yardistry products have been designed for safety and quality. Any modifications made to the original product could damage the structural integrity of the product leading to failure and possible injury. Yardistry cannot assume any responsibility for modified products. Furthermore, modification voids any and all warranties.

This product is warranted for RESIDENTIAL USE ONLY. Yardistry disclaims all other representations and warranties of any kind, express or implied.

This Warranty gives you specific legal rights. You may have other rights as well which vary from state to state or province to province. This warranty excludes all consequential damages, however, some states/provinces do not allow the limitation or exclusion of consequential damages, and therefore this limitation may not apply to you.

AUSTRALIA: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Instructions for Proper Maintenance

Your Yardistry structure is designed and constructed of quality materials. As with all outdoor products it will weather and wear. To maximize the enjoyment, safety and life of your structure it is important that you, the owner, properly maintain it.

HARDWARE:

- Check metal parts for rust. If found, sand and repaint using a non-lead paint complying with 16 CFR 1303.
- Inspect and tighten all hardware after completion of assembly; after first month of use; and then annually. Do not over-tighten as to cause crushing and splintering of wood.
- Check for sharp edges or protruding screw threads, add washers if required.

WOOD PARTS:

- Applying a water repellent or stain (water-based) on a yearly basis is important maintenance to maintain maximum life and performance of the product.
- Check all wood members for deterioration, structural damage and splintering. Sand down splinters and replace deteriorated wood members. As with all wood, some checking and small cracks in grain is normal
- Some gapping may occur at some wood connections.

Assembly Guides

Tools Required: (Not included)

- | | | |
|------------------------------|--------------------|------------------------|
| • Tape Measure | • 8 ft Step Ladder | • 6 ft Step Ladder x 2 |
| • Carpenters Level | • Safety Glasses | • Square |
| • Standard or Cordless Drill | • Adult Helper | • Ratchet |
| • Claw Hammer | • Safety Gloves | • 7/16", 1/2" & 9/16" |
| • 7/16" & 9/16" Wrench | • Hard Hat | Socket |

Symbols:

Throughout these instructions symbols are provided in the top, right-hand corner of the page.




- Use Help, where this is shown, 2, 3 or 4 people are required to safely complete this step. To avoid injury or damage to the assembly make sure to get some help.



- Use a measuring tape to assure proper location



- Pre-drill a pilot hole before fastening screw or lag to prevent splitting of wood.

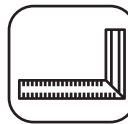

- Check the assembly is square before tightening bolts



- Check that the assembly is level



- One or more ladders are required to safely complete this step.

If you dispose of your Yardistry structure: Please disassemble and dispose of your unit so that it does not create any unreasonable hazards at the time it is discarded. Be sure to follow your local waste ordinances.

Assembly Tips

Following are some helpful tips to make the assembly process smooth and efficient.

PRE-ASSEMBLIES:

(i.e. Post and Beam Assemblies, Roof Rafter Assembly, etc)

- Work on a raised, solid and flat surface such as a table or saw horse.
- Keep all connections flush where shown in the instructions.
- When assembling the beams keep parts flat, straight and snug when connecting.

METAL PARTS:

- Roofing material may have sharp edges, wear safety gloves.
- Remove all plastic covering, on both sides of the metal panels, directly before installing each piece.
- Place roofing material on a non-abrasive surface before and after assembly as it can bend, dent and scratch easily.
- The roofing screws can easily crush the roof panels and roof edges when using a power drill. We recommend hand tightening the roofing screws so they sit snug and tight to the roofing material.

Sealant Application Tips, Warning and First Aid Information

SEALANT:

- All surfaces to be clean, dry, dust and grease free before application with temperatures above 5°C (41°F), no warmer than 35°C (95°F).
- Cut tip off sealant tube, attach supplied nozzle and use a caulking gun to apply small beads. See below images.
- Apply sealant in small beads and smooth as required.
- To smooth sealant into the joint use a glove covered finger, putty knife, etc. Smooth sealant to create a continuous water-tight seal.
- Clean excess with a cloth or paper towel before it skins over.
- An initial bond will set in approximately 20 minutes and fully set in 24 hours.

WARNING:

- CAUSES SERIOUS EYE AND SKIN IRRITATION. Always wear safety glasses and rubber gloves when using product.
- KEEP OUT OF REACH OF CHILDREN.
- Prolonged or repeated exposure MAY CAUSE ORGAN DAMAGE. Provide ample ventilation.


FIRST AID:

- If ingested, DO NOT INDUCE VOMITING. Seek immediate medical attention.
- Eye contact: immediately flush eyes with water for at least 15 minutes. Remove contact lenses if present.
- Skin contact; wash thoroughly with soap and water. If eye/skin irritation persists or respiratory symptoms occur or develop, seek medical attention.


Use of this product can expose you to chemicals including Methanol, which is known to the State of California to cause birth defects and other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

Dispose of contents and container in accordance with local regulations.


*Step 1: Cut off
tip of tube*

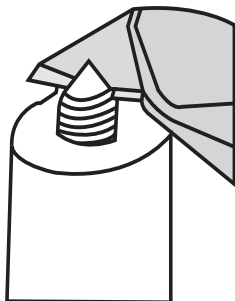

*Step 2: Attached
supplied nozzle*

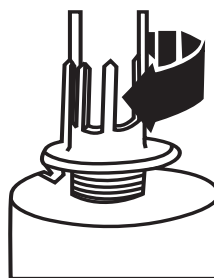

*Step 3: Put tube
in caulking gun*

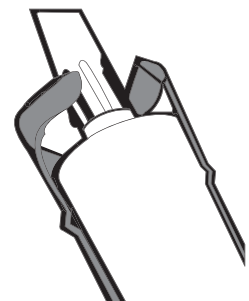

Permanent Installation Examples

Note: It is critically important you start with square, solid and level footings, concrete pad or deck to attach your Pavilion.

We supply Post Mounts with this structure which gives you the flexibility to permanently install your structure to a pre-existing or new wood or concrete surface.


- The hardware to attach the Post Mount to the structure is included.
- The hardware to mount the structure permanently will need to be purchased separately at your local hardware store.

If you are mounting to concrete footers see below for the correct locations and placement. Please double check for possibility of any underground utilities such as gas, telephone, cable or sprinkler lines.

Following are some examples of how to mount the structure to wood or concrete surfaces.


Refer to your local building and city codes, ordinances, neighborhood covenants, or height restrictions regarding this type of structure for guidance on acceptable installation requirements.

Concrete Footer


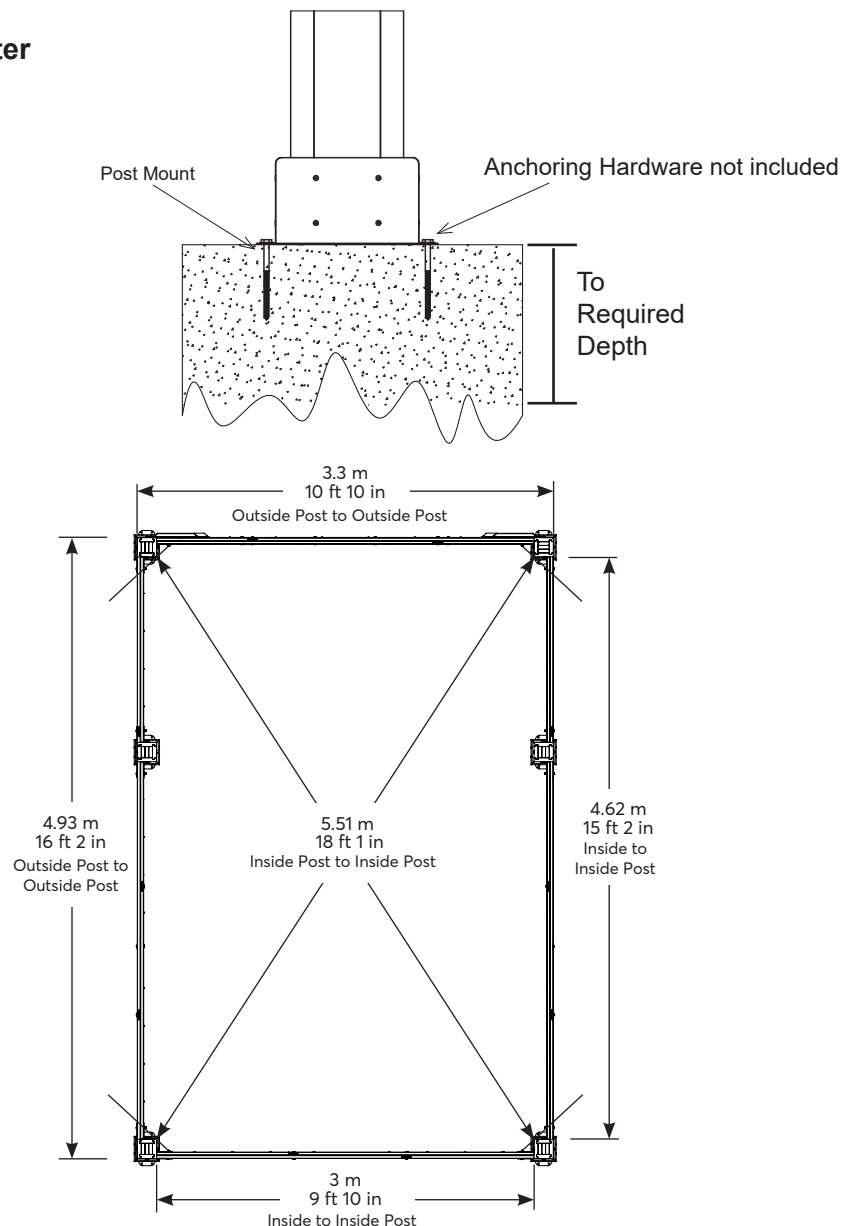


Permanent Installation Examples cont.

Concrete Patio (min. 5.25 m (17 ft 2-11/16 in) x 3.62 m (11 ft 10-1/2 in)) with 6 in (15.24 cm) clearance on all sides

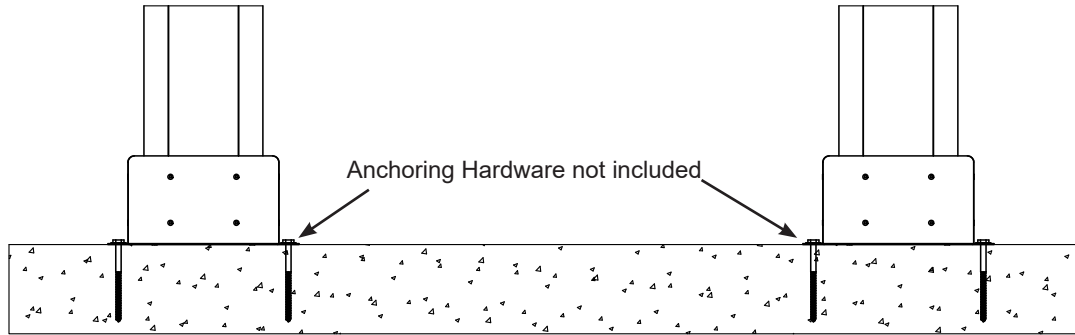

Wood Deck (min. 5.25 m (17 ft 2-11/16 in) x 3.62 m (11 ft 10-1/2 in)) with 6 in (15.24 cm) clearance on all sides

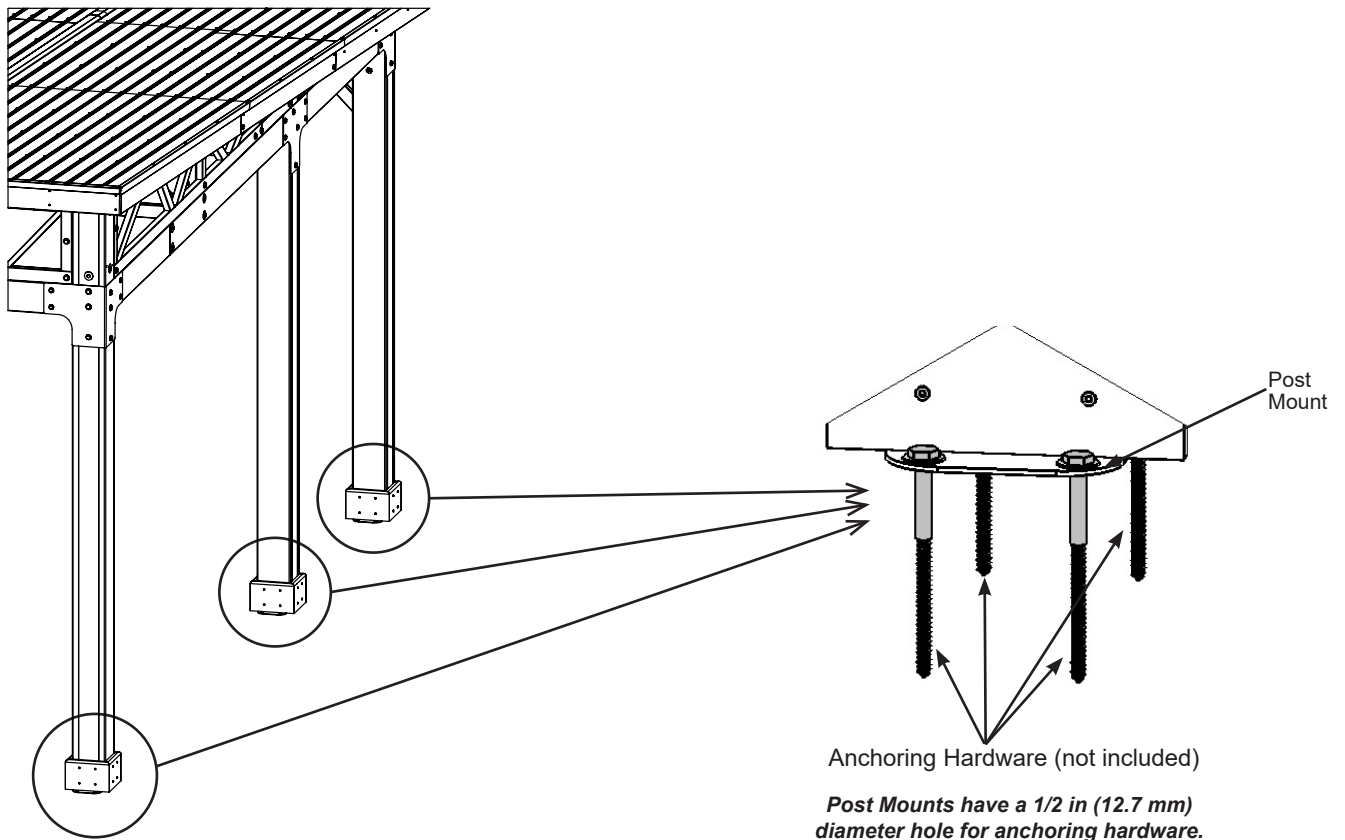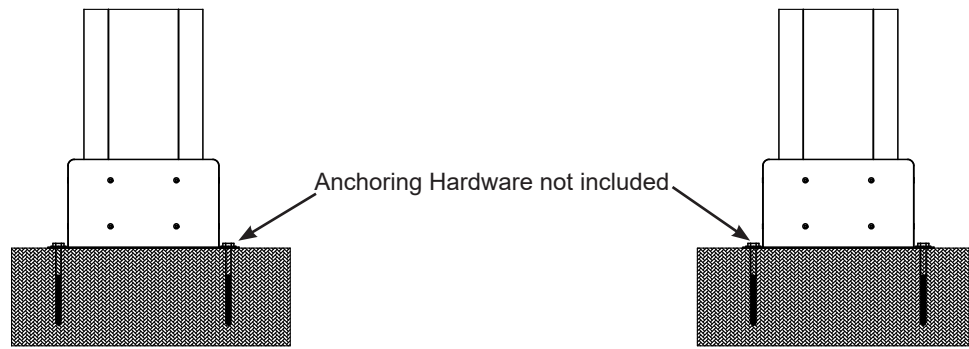

Part Identification (Dimensions are approximate and are shown to assist in the identification of parts for assembly. Actual dimensions may be smaller or larger.)

2pc. (2701) - Side Inside Beam A - 2044.2 mm (80 1/2") - FSC



(Y50229-2701)

2pc. (2702) - Side Inside Beam B - 1022.8 mm (40 1/4") - FSC




(Y50229-2702)

2pc. (2703) - Side Inside Beam C - 1466.8 mm (57 3/4") - FSC



(Y50229-2703)

24pc. (422) - Plinth - 190.5 mm (7 1/2") - FSC



(Y50229-422)

2pc. (2704) - Side Outside Beam A - 1153.2 mm (45 3/8") - FSC



(Y50229-2704)

2pc. (2705) - Side Outside Beam B - 2323.5 mm (91 1/2") - FSC

(Y50229-2705)




2pc. (2706) - Side Outside Beam C - 1552.5 mm (61 1/8") - FSC




(Y50229-2706)

1pc. (2707) - Front Inside Beam A - 1943.4 mm (76 1/2") - FSC



(Y50229-2707)

1pc. (2708) - Front Inside Beam B - 1123.6 mm (44 1/4") - FSC



(Y50229-2708)

1pc. (2709) - Front Outside Beam A - 2175 mm (85 5/8") - FSC



(Y50229-2709)


1pc. (2710) - Front Outside Beam B - 1203.2 mm (47 3/8") - FSC



(Y50229-2710)

Part Identification (Dimensions are approximate and are shown to assist in the identification of parts for assembly. Actual dimensions may be smaller or larger.)

1pc. (2711) - Rear Inside Beam A - 2269.4 mm (89 3/8") - FSC **(Y50229-2711)**




1pc. (2712) - Rear Inside Beam B - 797.6 mm (31 3/8") - FSC



(Y50229-2712)

1pc. (2713) - Rear Outside Beam A - 953.2 mm (37 1/2") - FSC




(Y50229-2713)

1pc. (2714) - Rear Outside Beam B - 2425 mm (95 1/2") - FSC

(Y50229-2714)



4pc. (2715) - Rafter Short Bottom Holes - 1828 mm (71 15/16") - FSC



(Y50229-2715)

5pc. (2716) - Rafter Short Bottom - 1828 mm (71 15/16") - FSC




(Y50229-2716)

6pc. (2717) - Eave Support - 266 mm (10 1/2") - FSC




(Y50229-2717)

2pc. (2718) - Fascia Middle Roof - 1254.7 mm (49 3/8") - FSC



(Y50229-2718)

4pc. (2719) - Fascia - 1172 mm (46 1/8") - FSC



(Y50229-2719)


2pc. (2720) - Rafter Long Bottom Side - 2050 mm (80 11/16") - FSC

(Y50229-2720)




4pc. (2721) - Rafter Long Bottom - 2050 mm (80 11/16") - FSC

(Y50229-2721)



4pc. (2722) - Rafter Long Top Holes - 2125.2 mm (83 11/16") - FSC

(Y50229-2722)



Part Identification (Dimensions are approximate and are shown to assist in the identification of parts for assembly. Actual dimensions may be smaller or larger.)

5pc. (2723) - Rafter Long Top - 2125.2 mm (**83 11/16"**) - FSC

(Y50229-2723)




6pc. (2724) - Rafter Middle B - 1604 mm (**63 1/8"**) - FSC

(Y50229-2724)



4pc. (2725) - Rafter Middle Holes - 1622 mm (**63 7/8"**) - FSC

(Y50229-2725)



5pc. (2726) - Rafter Middle - 1622 mm (**63 7/8"**) - FSC

(Y50229-2726)




2pc. (2727) - Rafter Short Top Side - 1921.2 mm (**75 5/8"**) - FSC

(Y50229-2727)



4pc. (2728) - Rafter Short Top - 1921.2 mm (**75 5/8"**) - FSC

(Y50229-2728)



12pc. (2729) - Roof Eave Support Thin - 266 mm (**10 1/2"**) - FSC

(Y50229-2729)




18pc. (2730) - Strap Side Roof - 1172 mm (**46 1/8"**) - FSC

(Y50229-2730)




9pc. (2731) - Strap - 1254.7 mm (**49 3/8"**) - FSC

(Y50229-2731)




Part Identification (Dimensions are approximate and are shown to assist in the identification of parts for assembly. Actual dimensions may be smaller or larger.)

1pc. (2823) - Front Post
Bottom Right - 2564 mm
(100 15/16") - FSC




(Y70229-2823)

1pc. (2744)
- Back Post A
2395.5 mm (94 5/16")
- FSC




(Y70229-2744)

1pc. (2745)
- Back Post B
2395.5 mm (94 5/16")
- FSC




(Y70229-2745)

1pc. (2746)
- Front Post Bottom Left
- 2564 mm (100 15/16")
- FSC




(Y70229-2746)

2pc. (2750)
- Mid Post - 2525.7 mm
(99 7/16") - FSC




(Y70229-2750)

2pc. (2748) - Front Post Top
- 478.7 mm (18 7/8") - FSC




(Y70229-2748)

Hardware Identification (Dimensions are approximate and are shown to assist in the identification of parts) for assembly. Actual dimensions may be smaller or larger.

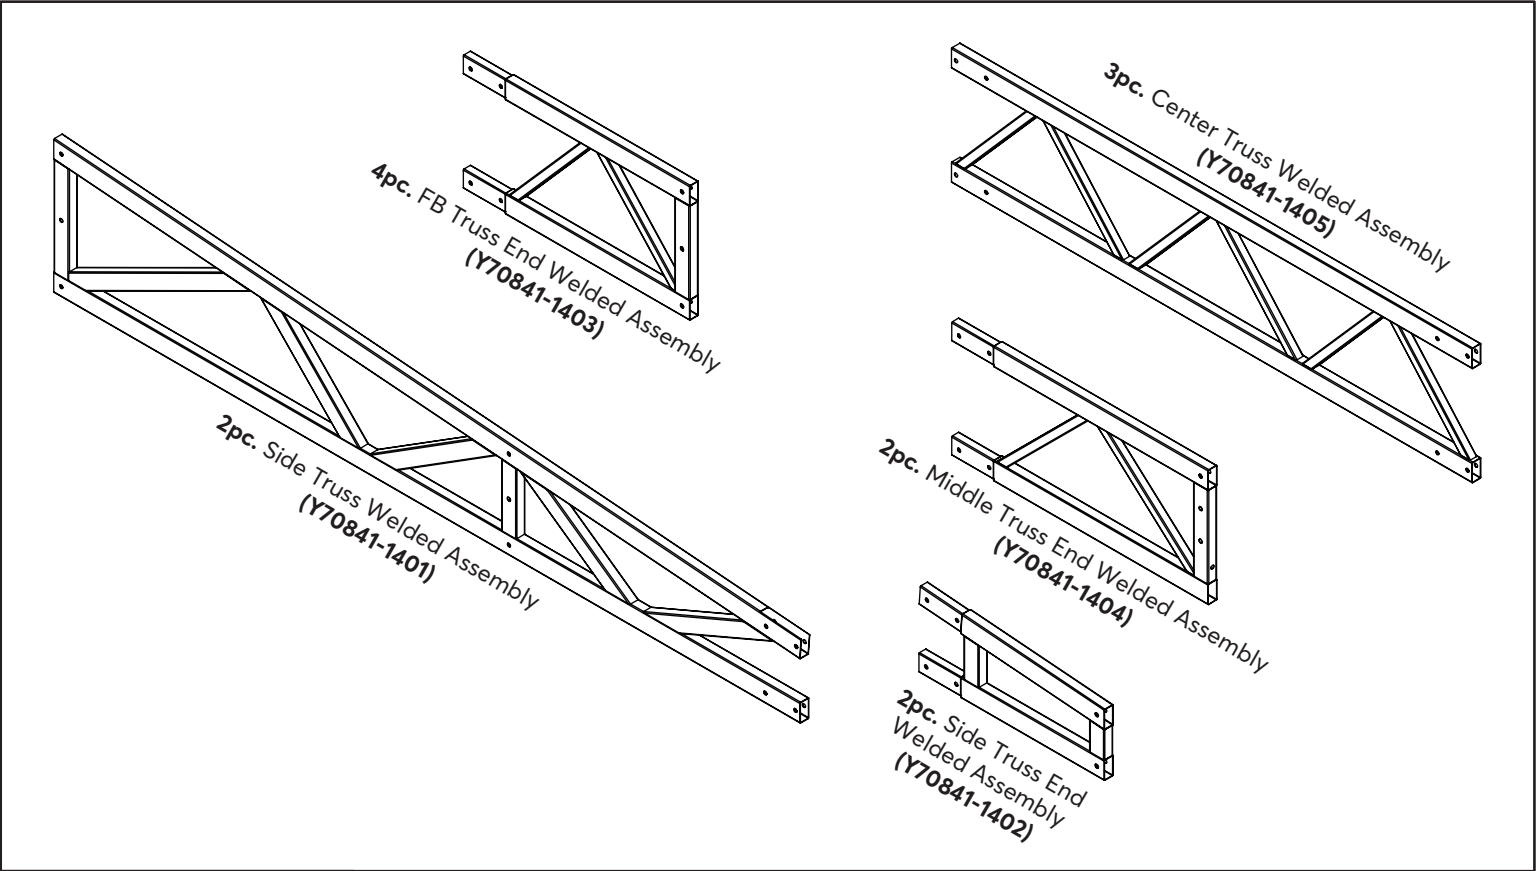


1pc. - Lounge Roof Panel Set (Y70836-1407)

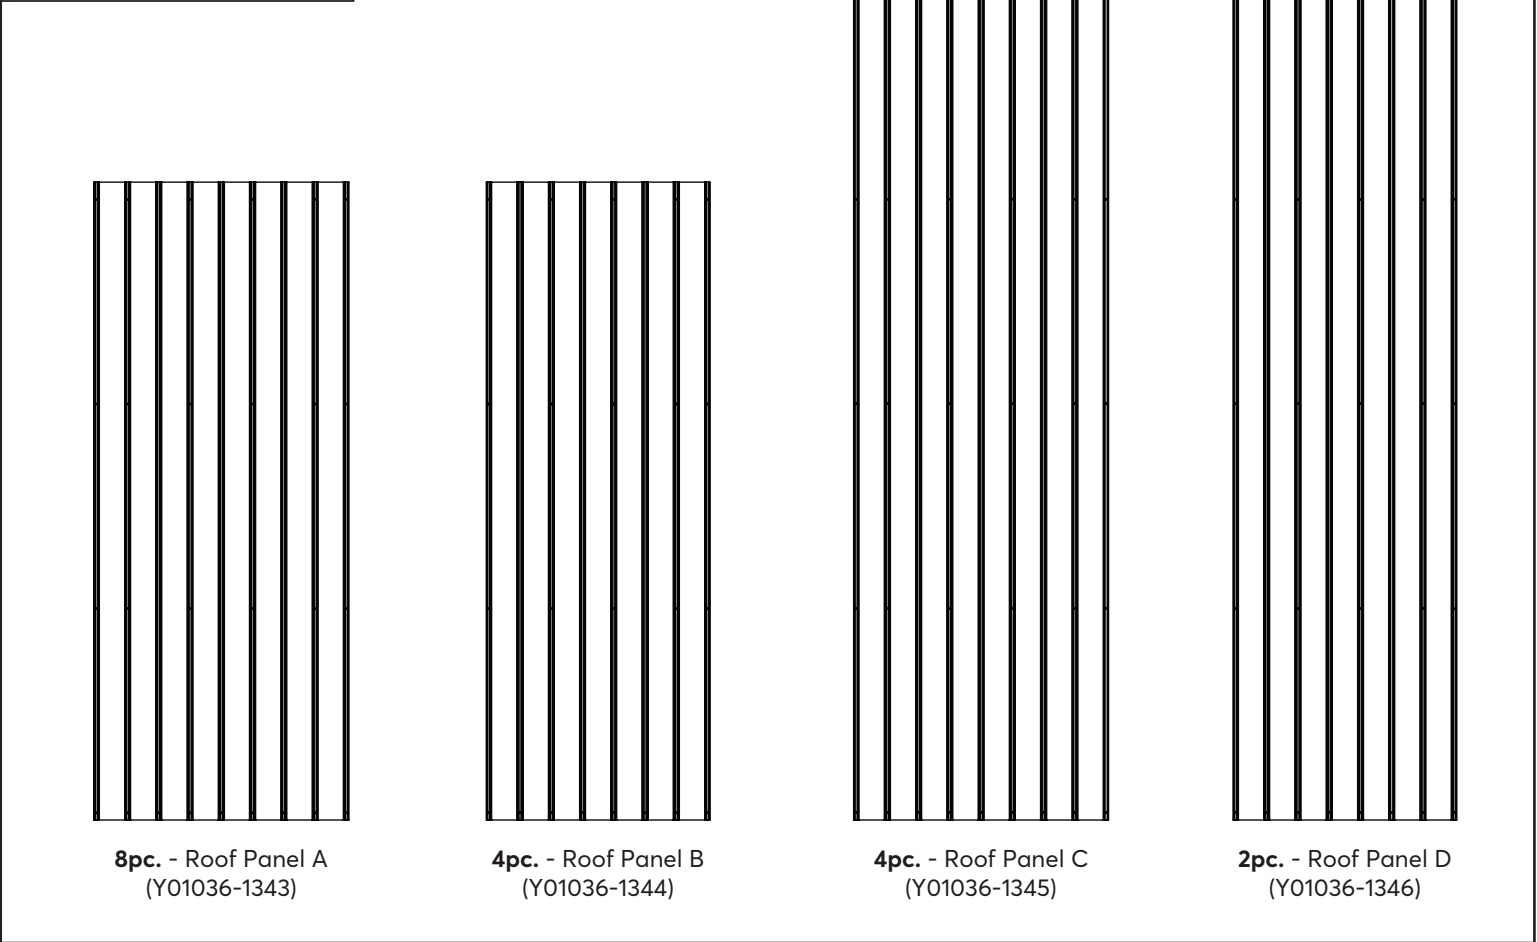


Hardware Identification (Dimensions are approximate and are shown to assist in the identification of parts) for assembly. Actual dimensions may be smaller or larger.

1pc.
Saddle Bracket Set (14pk)
(Y70818-889)




Y00418-889

3pc.
Post Mount Set (4pk)
(Y70818-216)

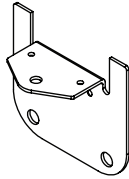


Y00418-109

1pc. Back Truss End Bracket Set
(Y70818-1442)

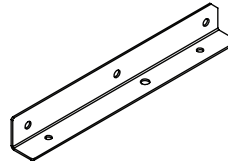


2pc.
Back Truss End Bracket A
(Y00418-1372)

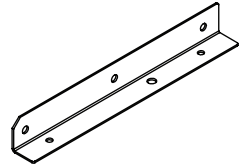


2pc.
Back Truss End Bracket B
(Y00418-1382)

1pc.
Mid Post Bracket Set (2pk)
(Y70818-1440)

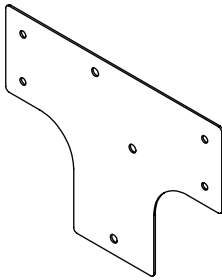


(Y00418-1370)

2pc.
Post Bracket Set (2pk)
(Y70818-1441)

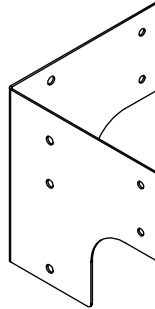


(Y00418-1371)

1pc.
Mid Truss Mount Channel Set (2pk)
(Y70818-1443)

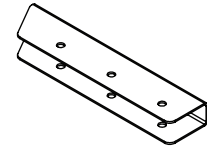


(Y00418-1373)

2pc.
Post Inside Bracket Set (4pk)
(Y70818-1444)

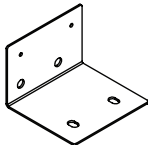


(Y00418-1374)

1pc.
Mid Post Inside Bracket Set (4pk)
(Y70818-1445)




(Y00418-1375)

1pc.
Front Truss End Bracket Set (2pk)
(Y70818-1446)

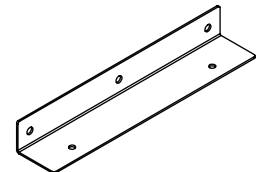


(Y00418-1376)

1pc.
Side Truss Bracket Set (2pk)
(Y70818-1447)



(Y00418-1377)

1pc.
Side Truss Long Bracket Set (2pk)
(Y70818-1448)

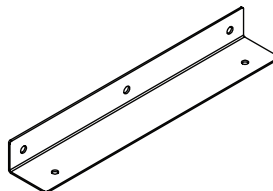


(Y00418-1378)

1pc.
Roof to Beam Bracket Set (7pk)
(Y70818-1449)




(Y00418-1379)

Hardware Identification (Dimensions are approximate and are shown to assist in the identification of parts for assembly. Actual dimensions may be smaller or larger.)

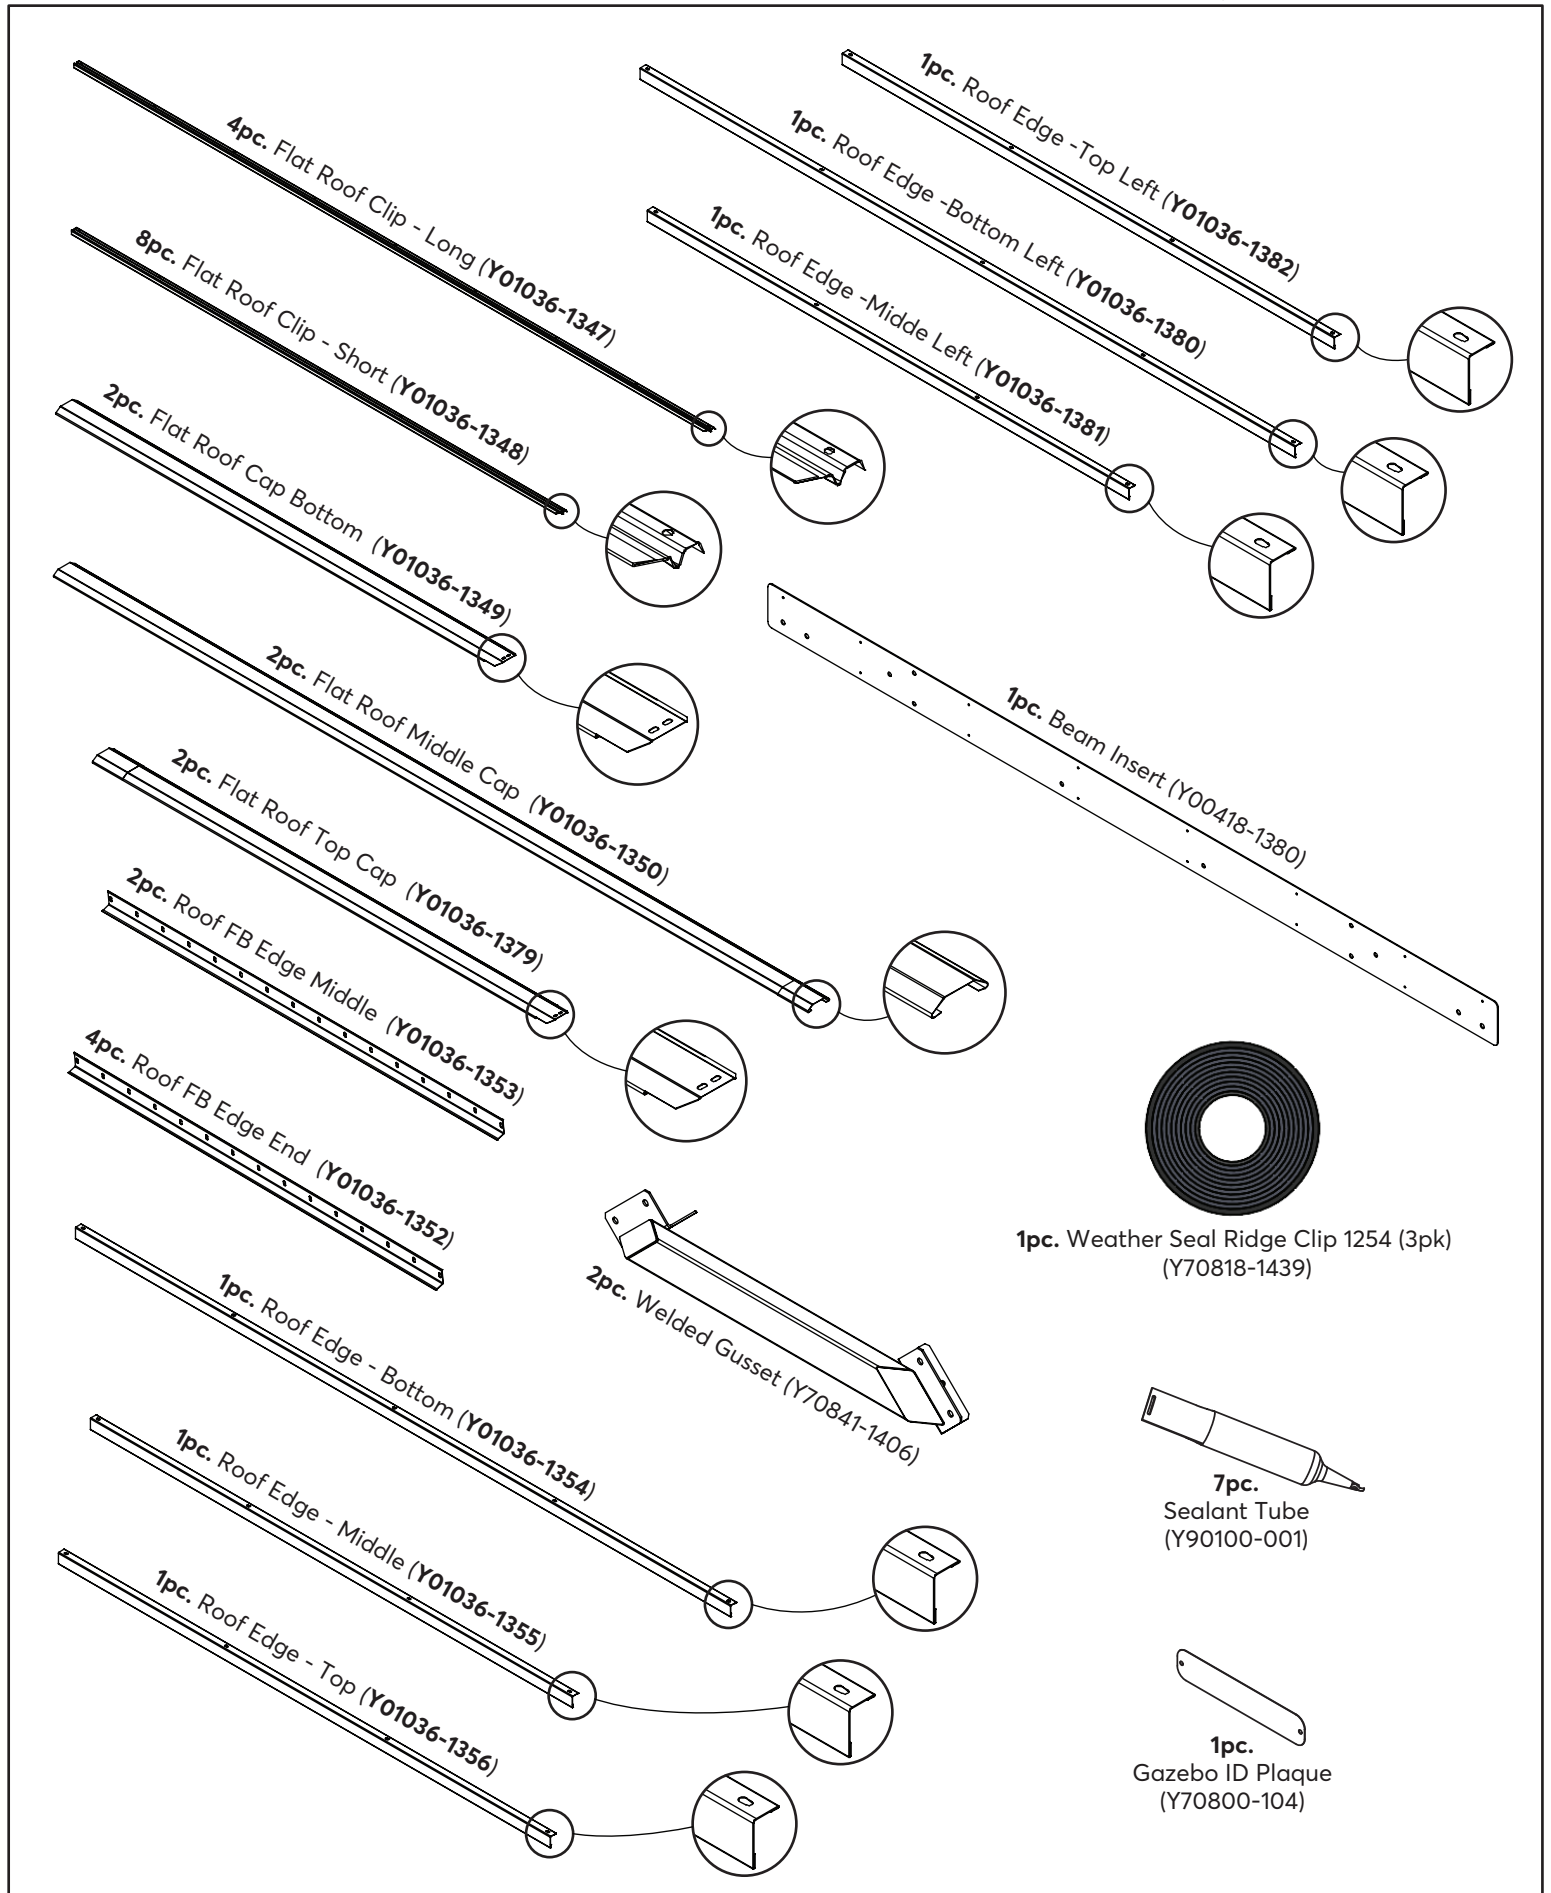


Hardware Identification (Dimensions are approximate and are shown to assist in the identification of parts for assembly. Actual dimensions may be smaller or larger.)

108pc. **(S3)** - Wood Screw #8 x 2-1/2" - (Y06091-522)




1pc. Hex Driver - (Y00400-004)

14pc. **(S10)** - Pan Screw #8 x 1" - (Y06418-510)




1pc. #2 x 2" Robertson Driver - (Y00400-005)

42pc. **(S12)** - Pan Screw #10 x 1-1/4" - (Y06418-711)




1pc. 1/8" Drill Bit - (Y00400-002)

464pc. **(S15)** - Wood Screw #8 x 1-3/4" - (Y06091-513)


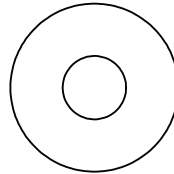


90pc. **(FW2)** - 5/16" Flat Washer
(Y05118-203)

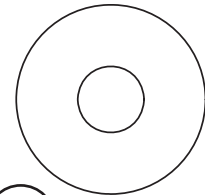


104pc. **(FW4)** - 3/8" Flat Washer
(Y05118-801)

70pc. **(S34)** - Pan Screw #12 x 1-1/4"
(Y06418-611)

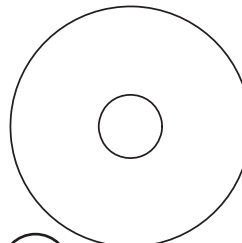

126pc. **(FW12)** - 1/4-5/16 x 1-1/4"
Large Washer
(Y05118-311)

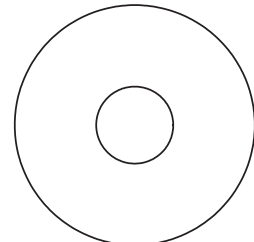


12pc. **(FW11)** - 3/8 x 1-1/4" Large Washer
(Y05118-811)


436pc. **(R0)** - Hex Roofing Screw #8x 1"
(Y06736-510)




14pc. **(LN1)** - 1/4" Lock Nut
(Y08318-203)




34pc. **(LN2)** - 5/16" Lock Nut
(Y08318-303)




96pc. **(LN3)** - 3/8" Lock Nut
(Y08318-803)

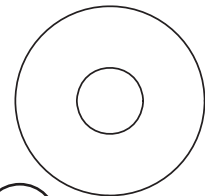


86pc. **(FW18)** - 3/8" Flat Washer,
1/8 Thick - (Y05118-804)

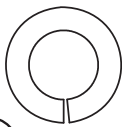


10pc. **(LW3)** - 3/8" Lock Washer
(Y05318-800)



104pc. **(LW2)** - 5/16" Lock Washer
(Y05318-300)

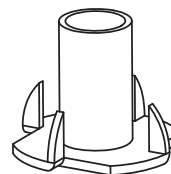


104pc. **(TN2)** - 5/16" T-Nut
(Y08518-300)

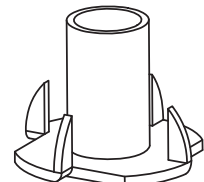


10pc. **(TN3)** - 3/8" T-Nut
(Y08518-800)

Hardware Identification (Dimensions are approximate and are shown to assist in the identification of parts for assembly. Actual dimensions may be smaller or larger.)


16pc. **LS5** - Hex Lag Screw 5/16 x 2-1/2"
- (Y06218-322)

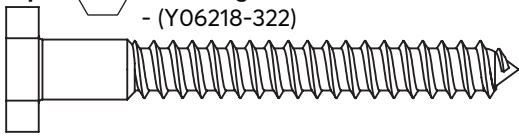


8pc. **G2** - Hex Bolt 5/16 x 1"
- (Y07718-310)

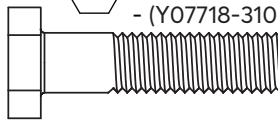


72pc. **G3** - Hex Bolt 5/16 x 1-1/4"
- (Y07718-311)

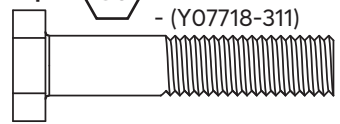


14pc. **H12** - Hex Bolt 1/4 x 3" - (Y07718-230)




8pc. **G8** - Hex Bolt 5/16 x 2" - (Y07718-320)




2pc. **G5** - Hex Bolt 5/16 x 4-1/2" - (Y07718-342)

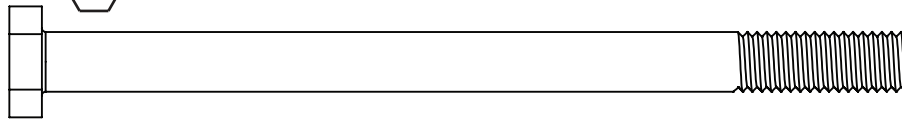


8pc. **G7** - Hex Bolt 5/16 x 6-3/4" - (Y07718-363)




4pc. **G24** - Hex Bolt 5/16 x 6-1/4" - (Y07718-361)




12pc. **G27** - Hex Bolt 5/16 x 2-1/4" - (Y07718-321)



6pc. **G28** - Hex Bolt 3/8 x 8" - (Y07718-880)

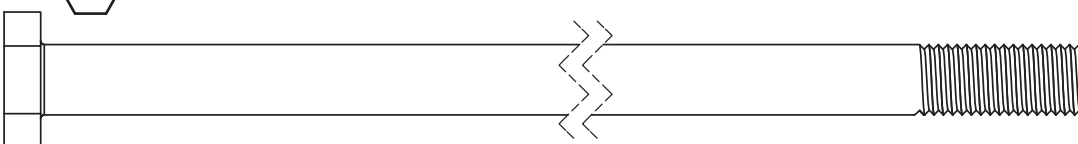


24pc. **G34** - Hex Bolt 5/16 x 2-3/4" - (Y07718-323)

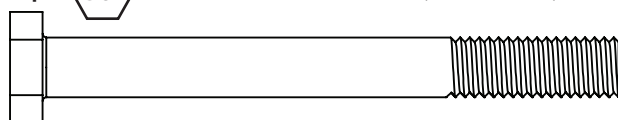


Hardware Identification (Dimensions are approximate and are shown to assist in the identification of parts for assembly. Actual dimensions may be smaller or larger.)


32pc. **G47** - Hex Bolt 3/8 x 1 3/4" - (Y07718-813)

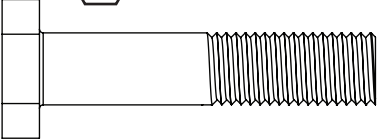


34pc. **G48** - Hex Bolt 3/8 x 2" - (Y07718-820)

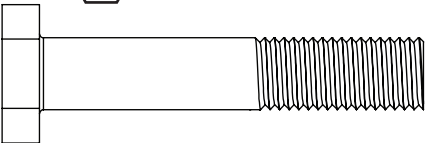




10pc. **G17** - Hex Bolt 3/8 x 6" - (Y07718-860)

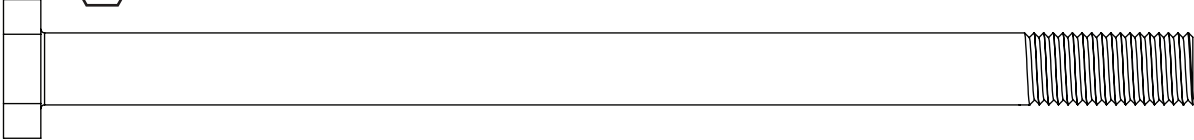

24pc. **G50** - Hex Bolt 3/8 x 6 3/4" - (Y07718-863)

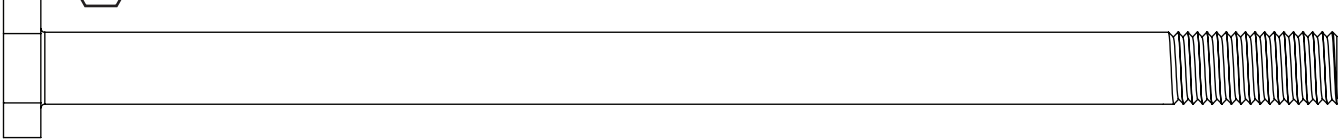

Step 1: Inventory Parts - Read This Before Starting Assembly

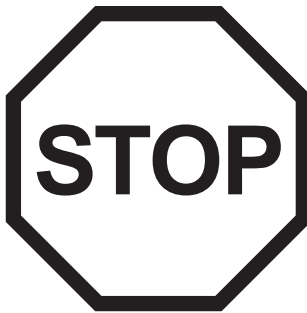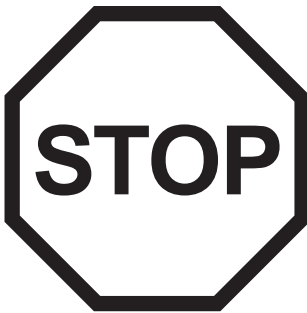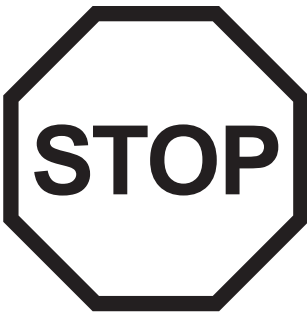

- A.** This is the time for you to inventory all your hardware, wood and accessories, referencing the parts identification sheets. This will assist you with your assembly.
- Each step indicates which bolts and/or screws you will need for assembly, as well as any flat washers, lock washers, t-nuts or lock nuts.
- B.** If there are any missing or damaged pieces or you need assistance with assembly please contact the consumer relations department directly. Call us before going back to the store.

1-888-509-4382

Regular Hours: Mon - Fri, 8:30 am - 5:00 pm EST (excl. holidays)
English and French Spoken



support@yardistrystructures.com

- C.** Read the assembly manual completely, paying special attention to ANSI warnings; notes; and safety/maintenance information on pages 1 - 4.
- Follow the instructions in order.
 - This structure is designed to be assembled and installed ideally by four people, DO NOT attempt to install alone.
 - Consider the slope of elevation where you plan to install the structure. Also, check for gas, telephone, other utilities or sprinkler line locations prior to excavating any holes.
- D.** Before you discard your cartons fill out the form below.
- The carton I.D. stamp is located on the end of each carton.
 - Please retain this information for future reference. You will need this information if you contact the Consumer Relations Department.

PRODUCT NUMBER: YM12590

CARTON I.D. STAMP: __ __ __ __ __ 14459 __ (Box 1)	CARTON I.D. STAMP: __ __ __ __ __ 14459 __ (Box 4)
CARTON I.D. STAMP: __ __ __ __ __ 14459 __ (Box 2)	CARTON I.D. STAMP: __ __ __ __ __ 14459 __ (Box 5)
CARTON I.D. STAMP: __ __ __ __ __ 14459 __ (Box 3)	CARTON I.D. STAMP: __ __ __ __ __ 14459 __ (Box 6)

2 Post Assemblies

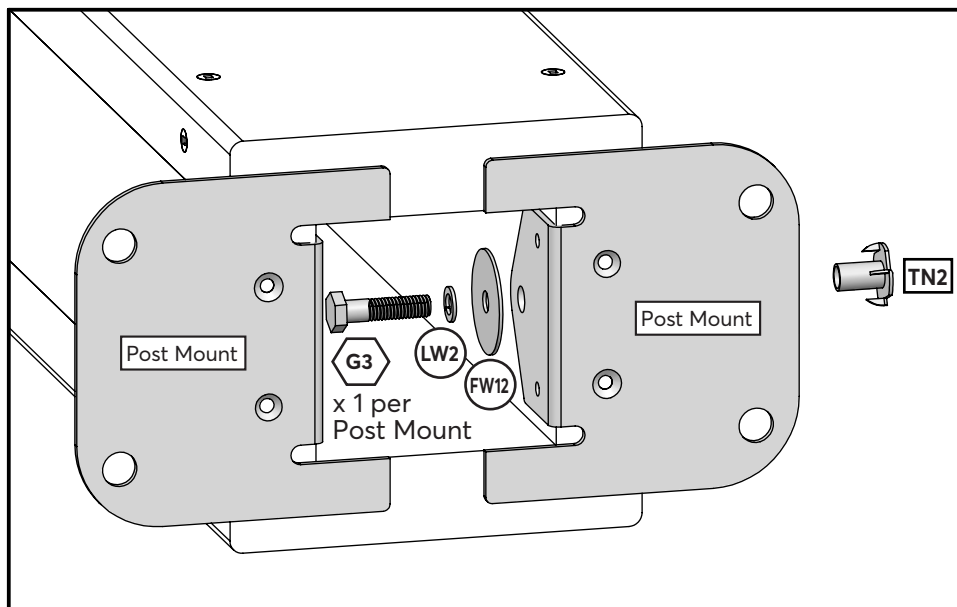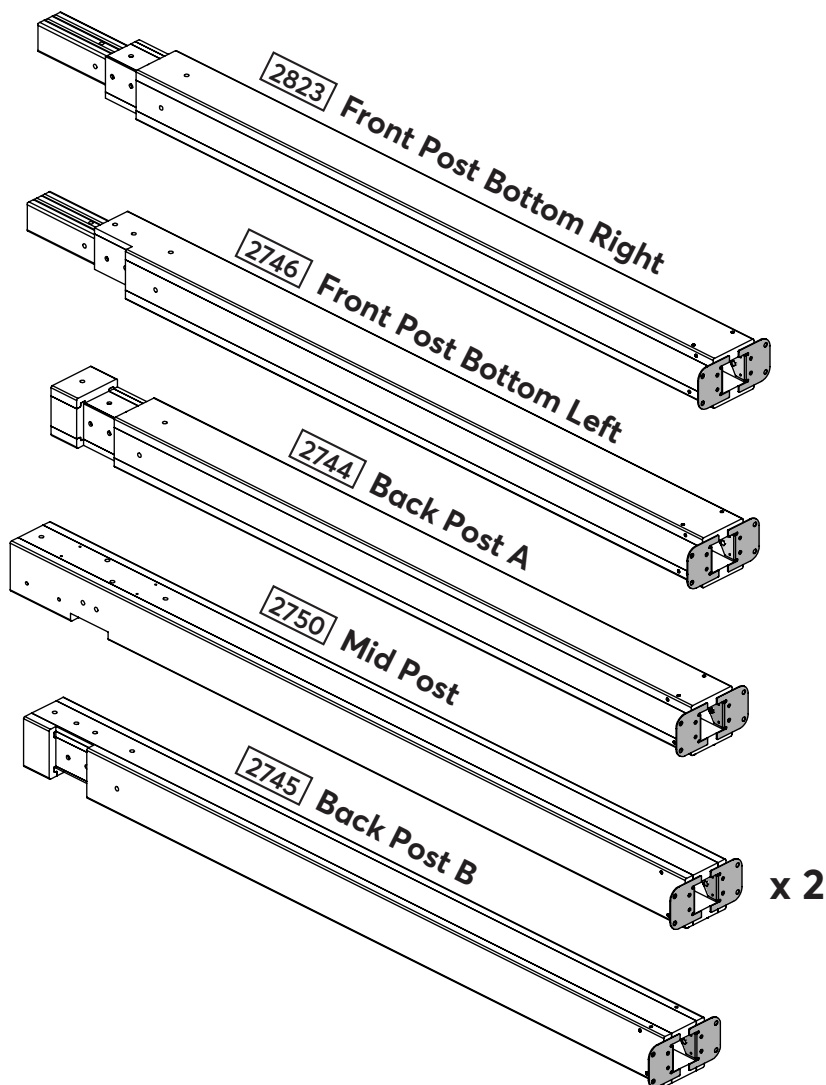

Bottom View

Wood Parts



1 x 2744 2 x 2750
 1 x 2745 1 x 2823
 1 x 2746

Hardware

12 x G3 (LW2, FW12, TN2)

Components

12 x Post Mount

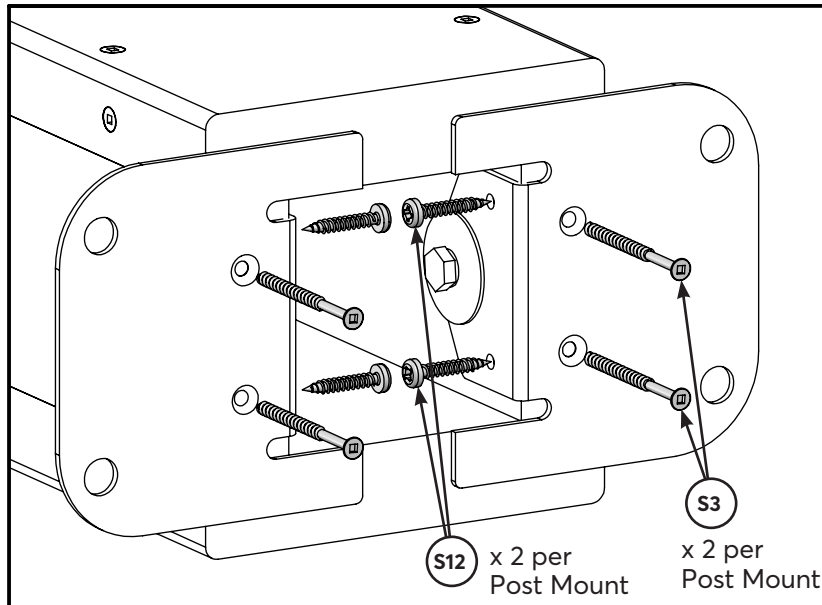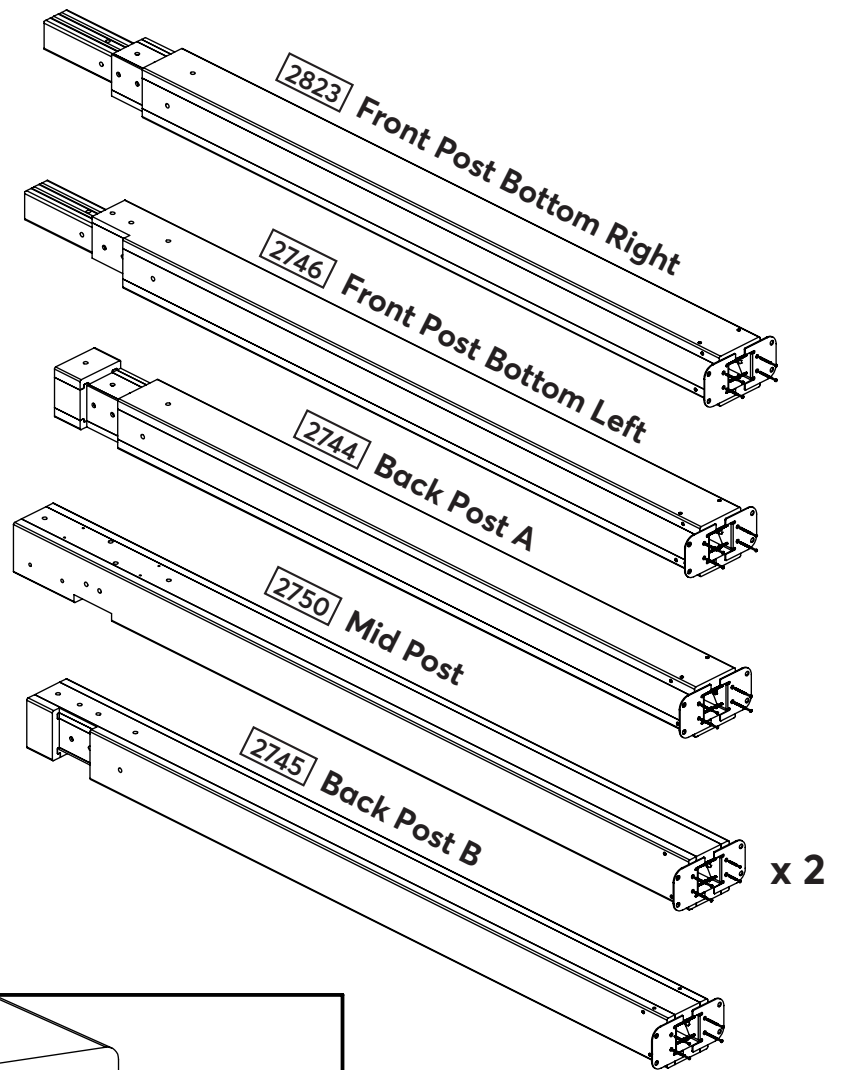

Hardware

24 x S3

24 x S12

2823 Front Post Bottom Right

2746 Front Post Bottom Left

2744 Back Post A

2750 Mid Post

2745 Back Post B

x 2

422

422

422

422

422

S15 x 4 per Plinth

Flush to the bottom


Rotated View

24 x 422

96 x (S15)

5 Back Beam Assembly

Do not tighten bolts until Step 7.
Note hole orientation.

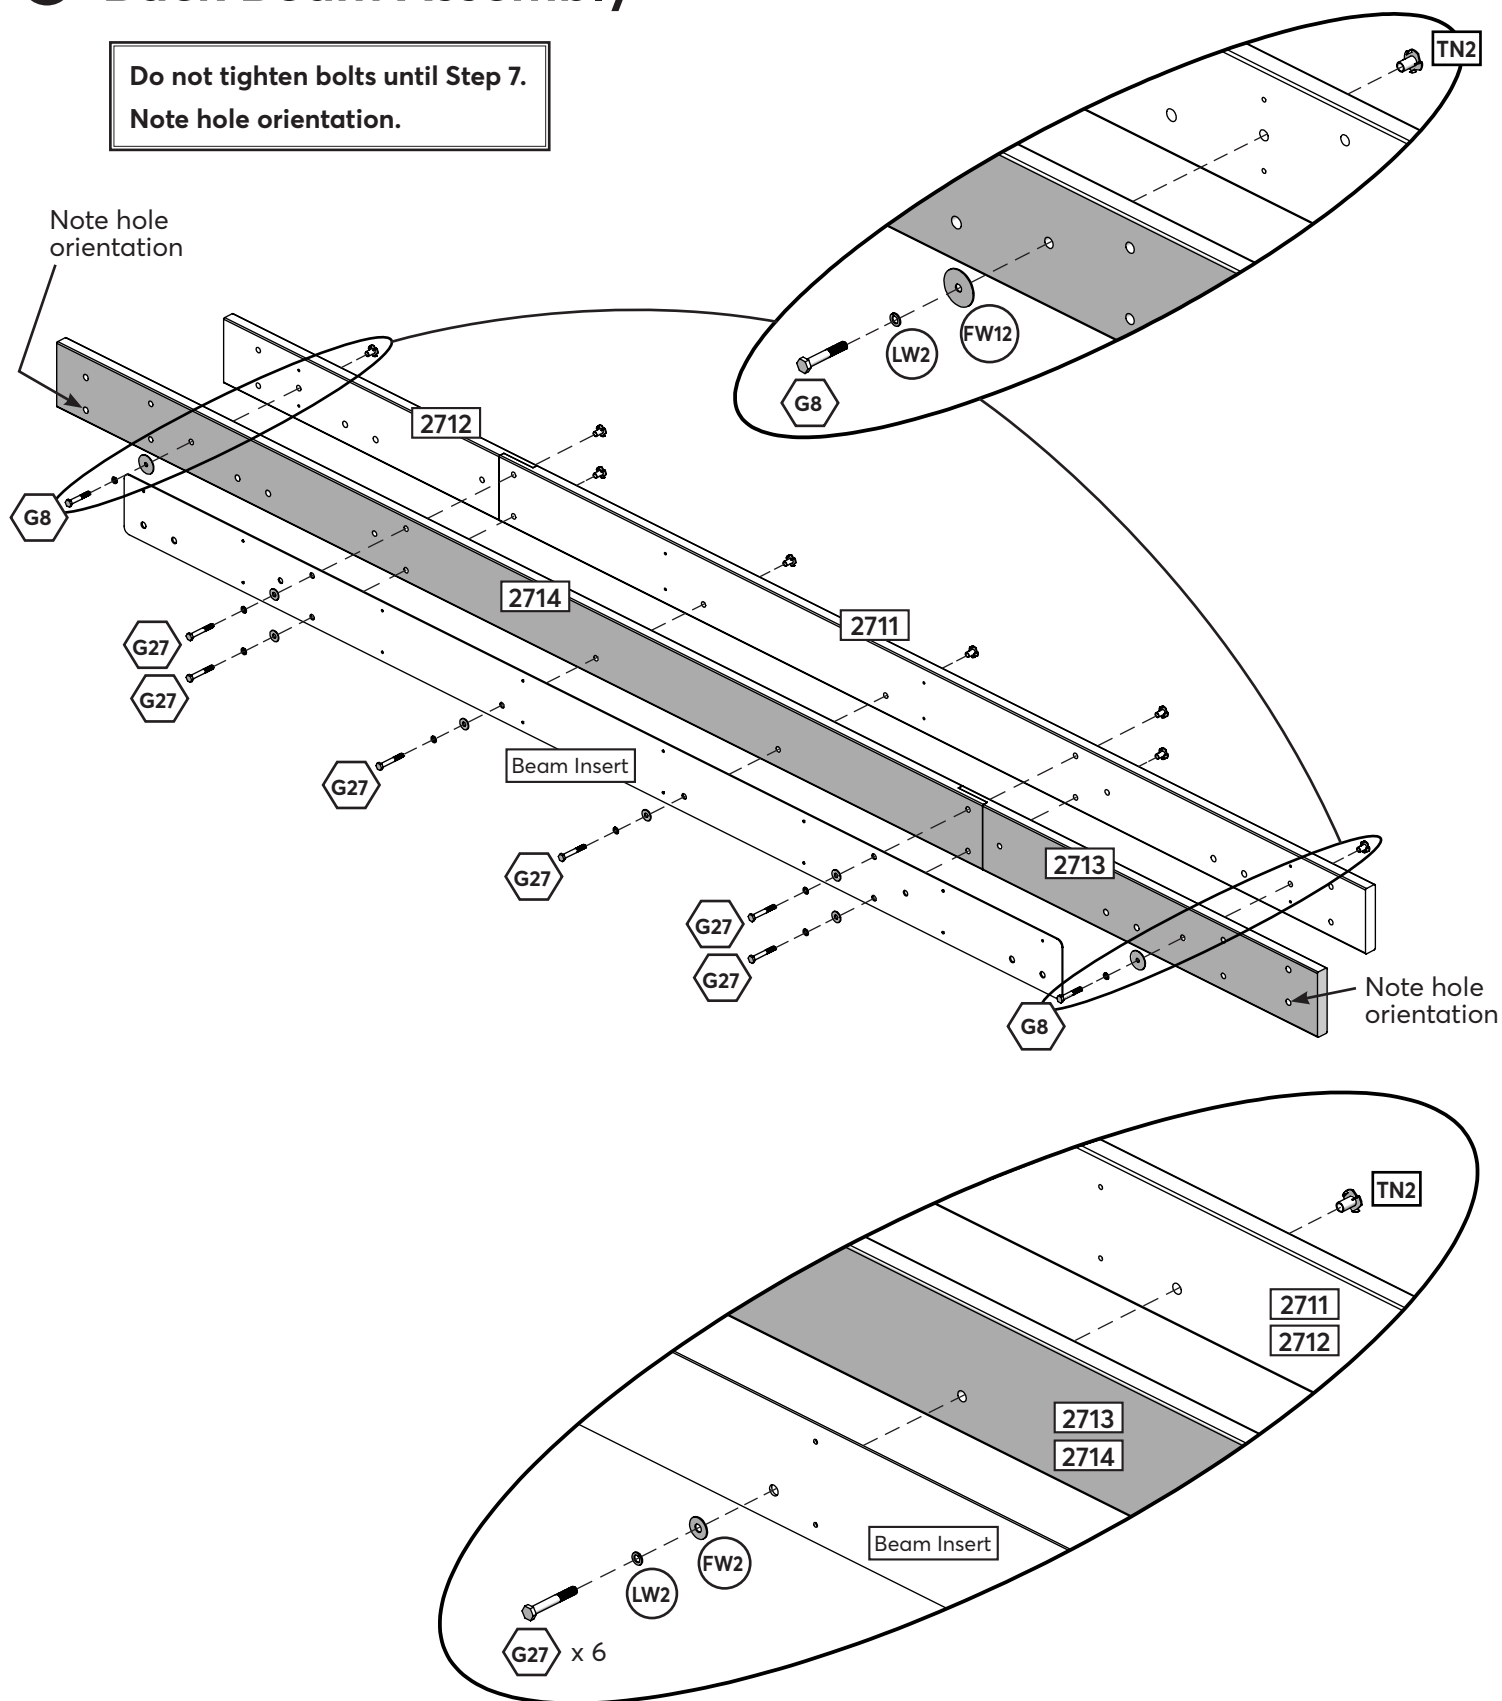

Wood Parts

1 x 2711 1 x 2714
1 x 2712
1 x 2713

Hardware



6 x G27 (LW2, FW2, TN2)
2 x G8 (LW2, FW12, TN2)

Components

1 x Beam Insert

6

Do not tighten bolts until Step 7.

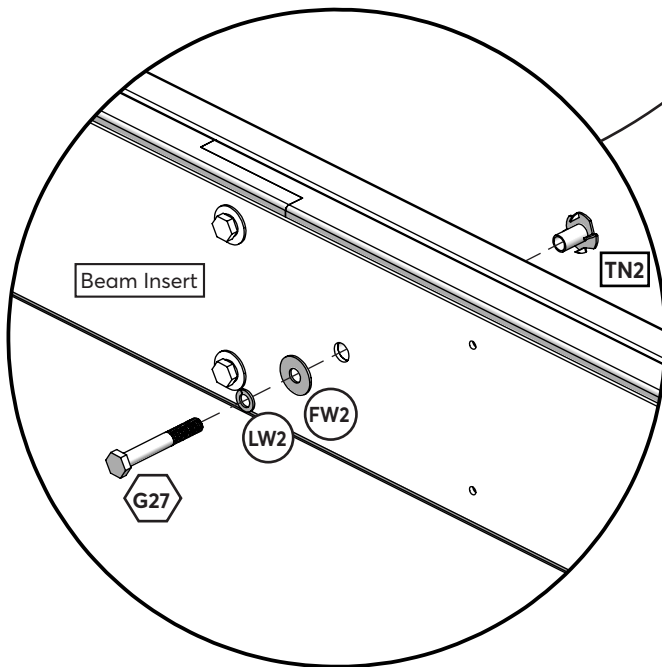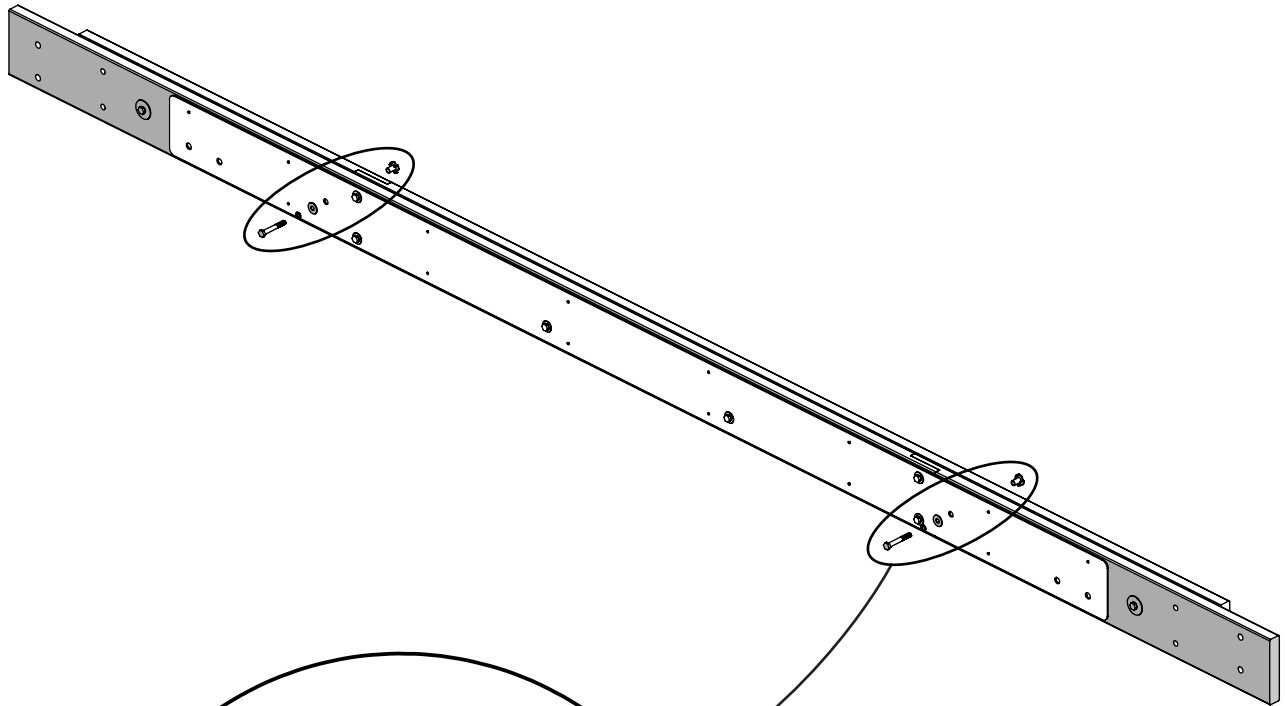


Hardware

2 x  (LW2, FW2, TN2)

7

Tighten all bolts.

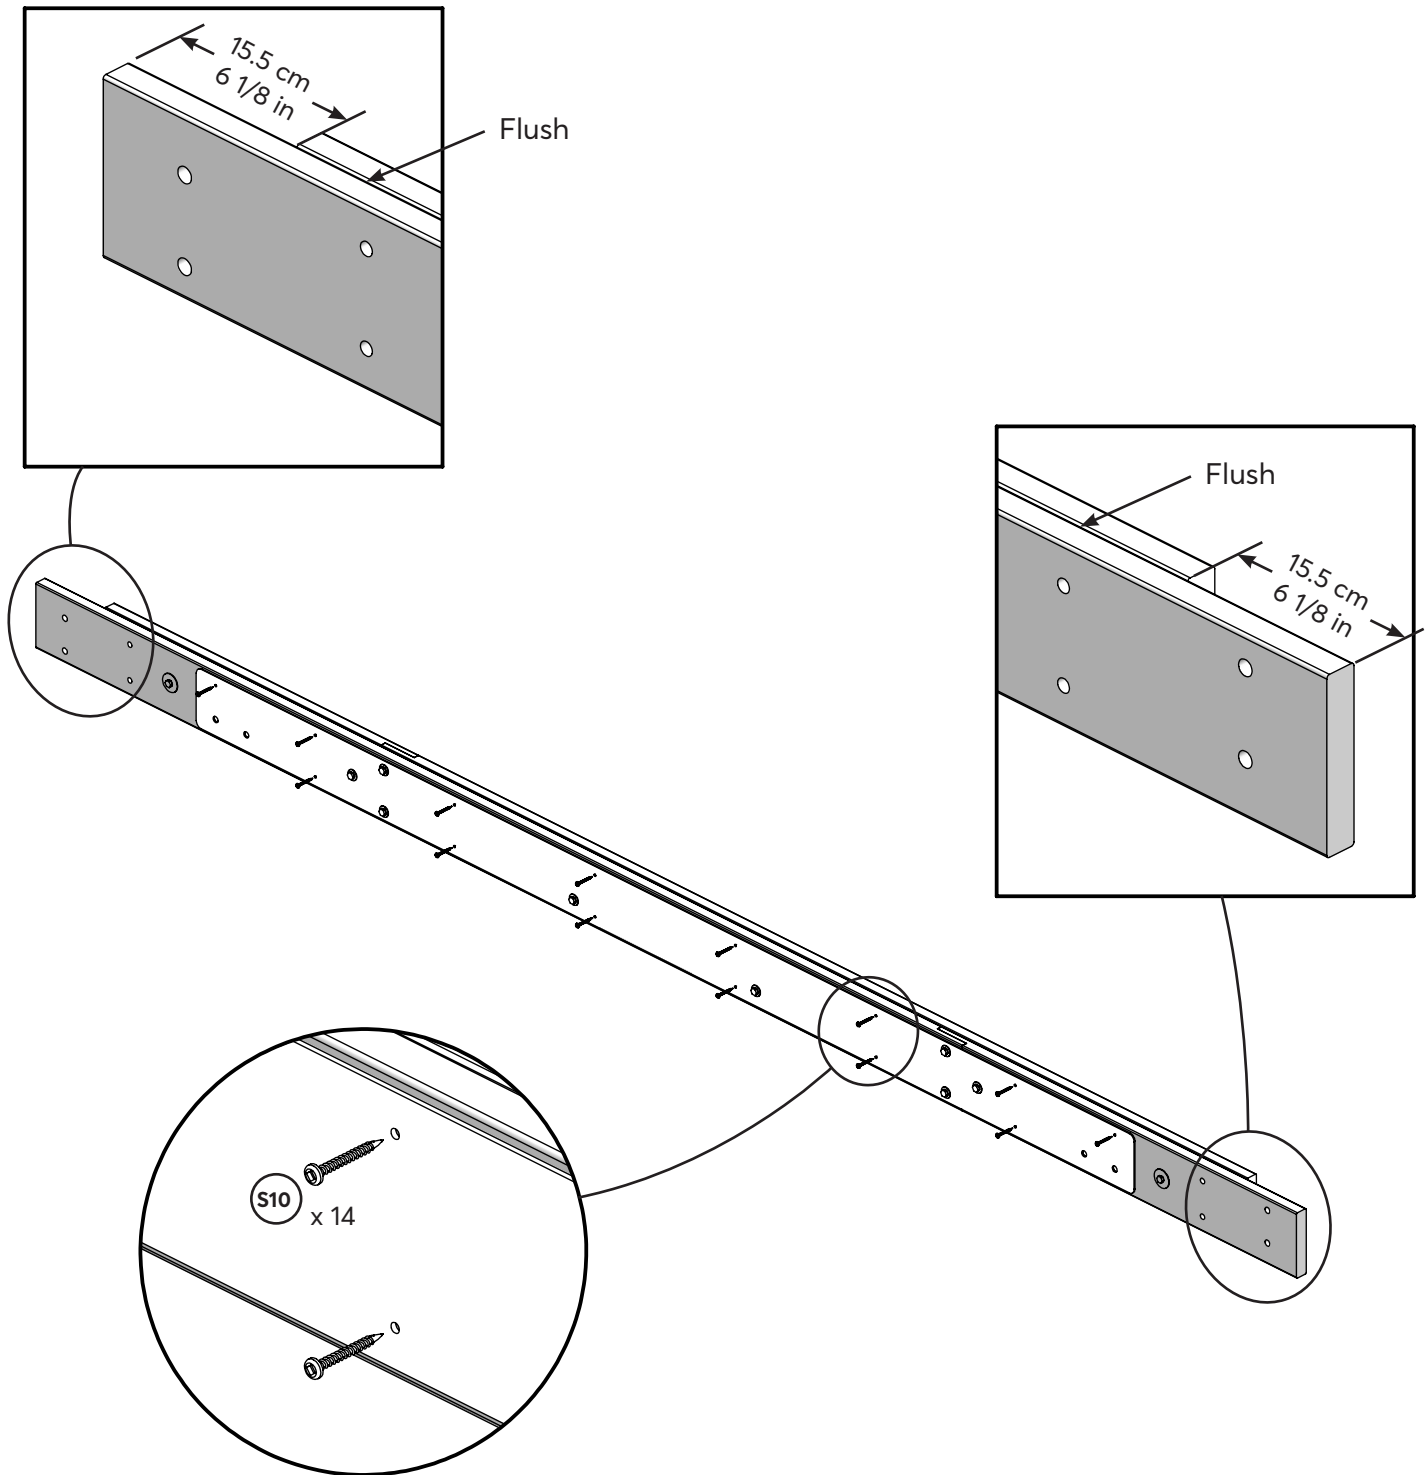


Hardware

14 x S10

8

Flip beam and attached screws.

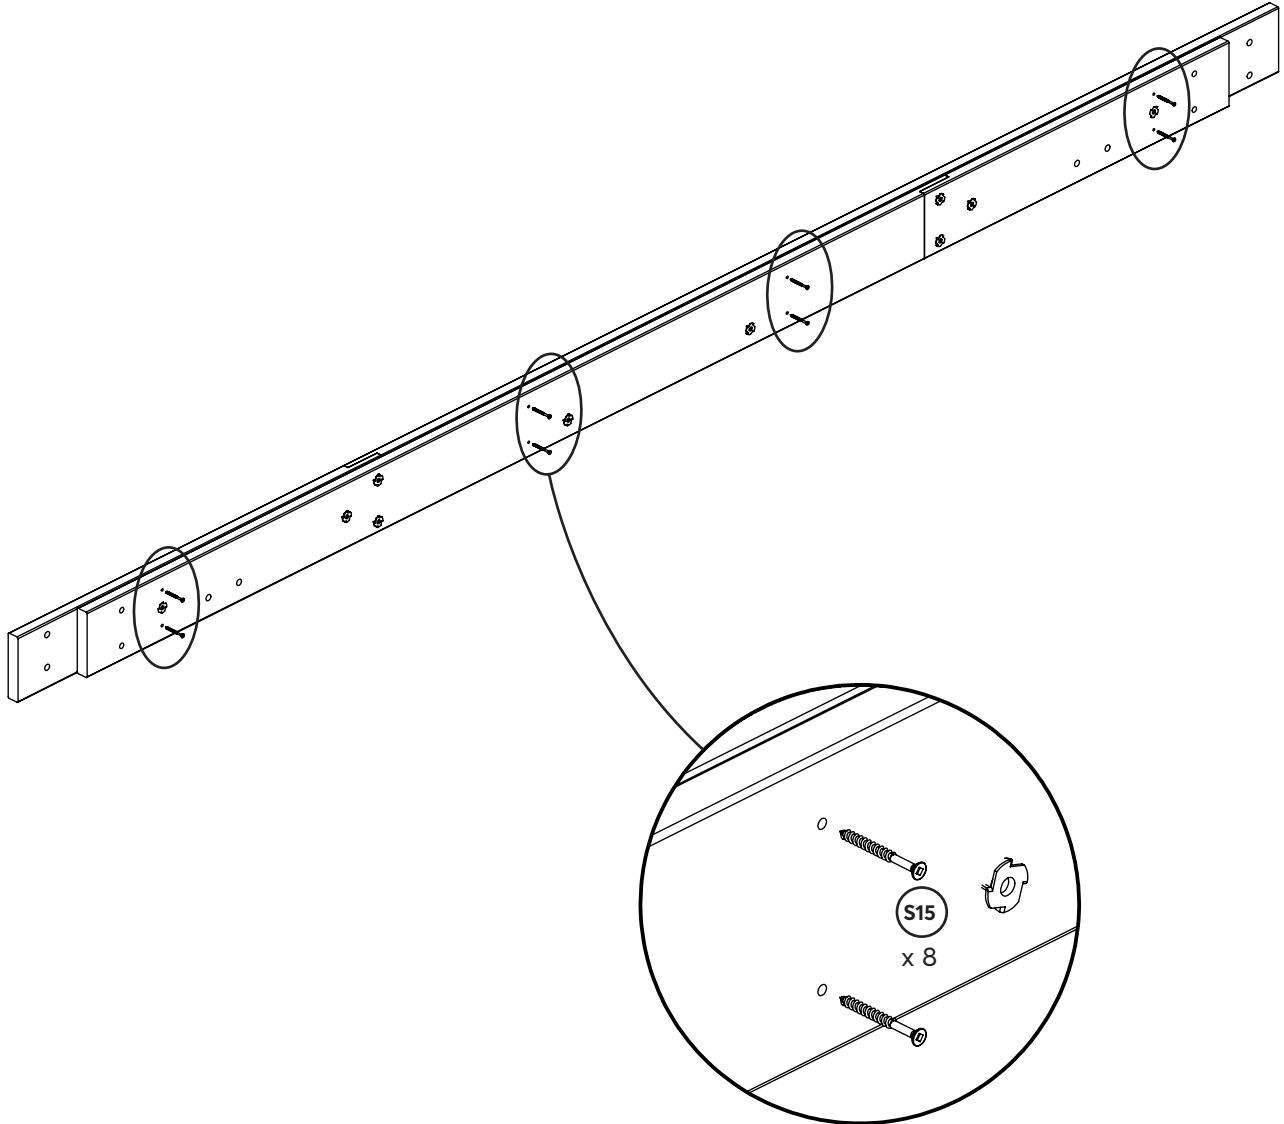


Hardware

8 x S15

9 Front Beam Assembly

Do not tighten bolts until next Step.

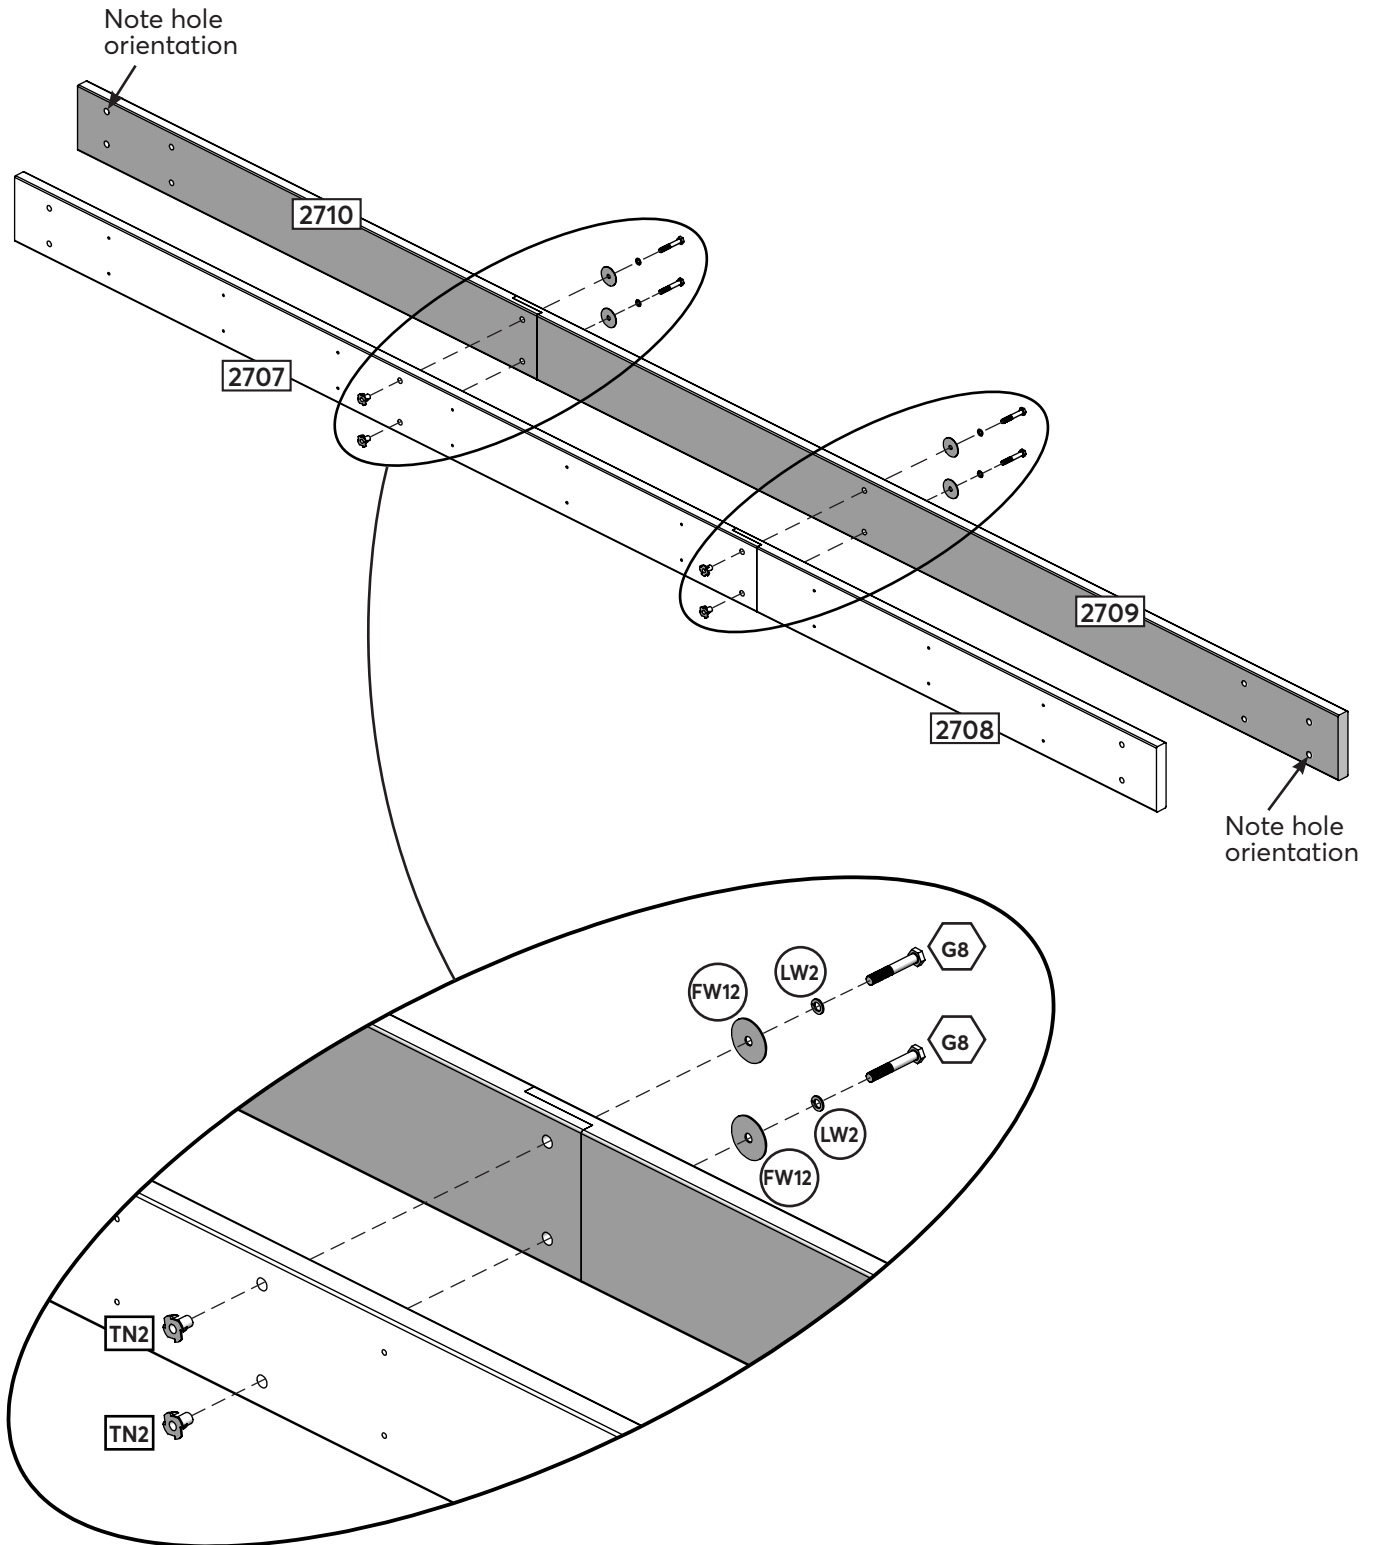

Wood Parts




- 1 x 2707
- 1 x 2710
- 1 x 2708
- 1 x 2709

Hardware

- 4 x G8 (LW2, FW12, TN2)

10

Tighten all bolts.

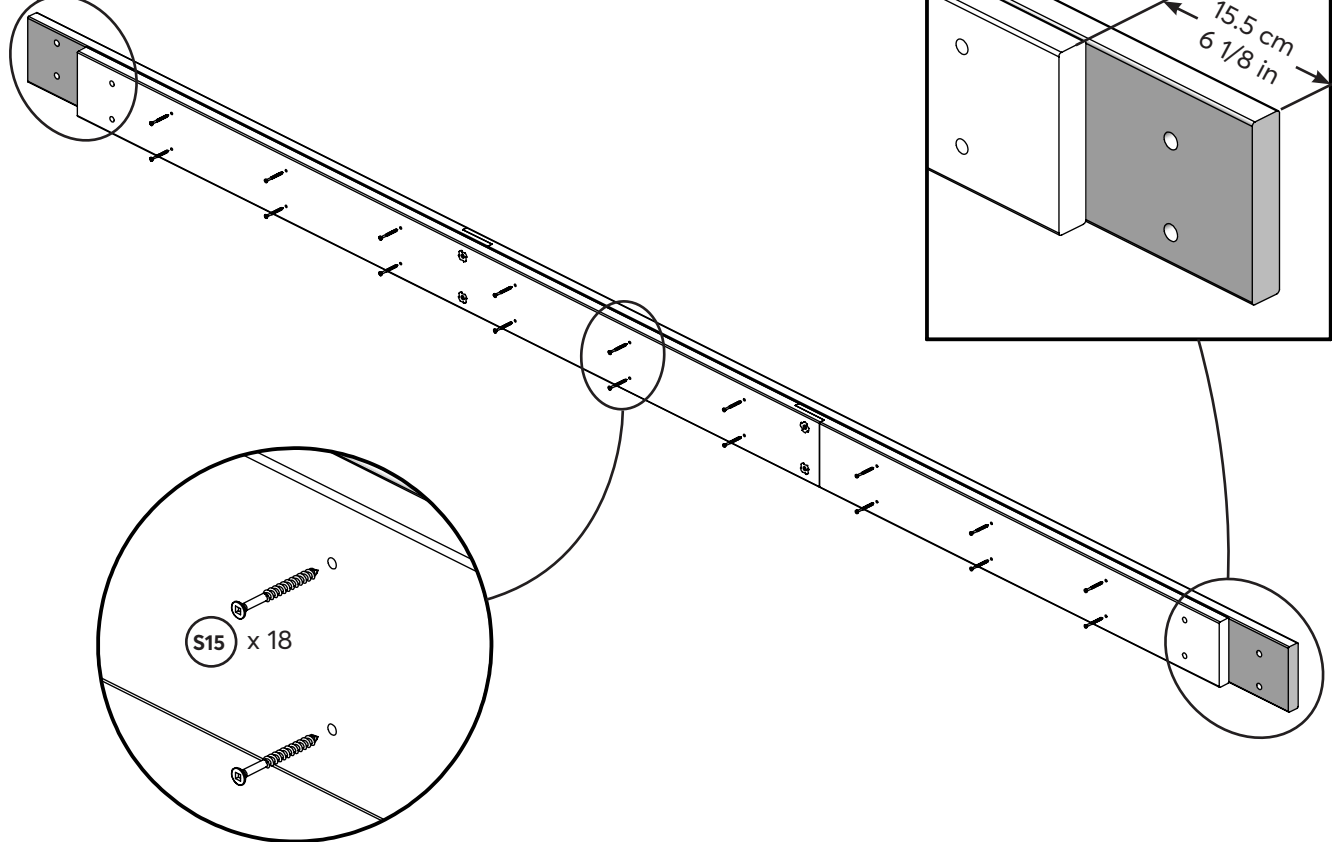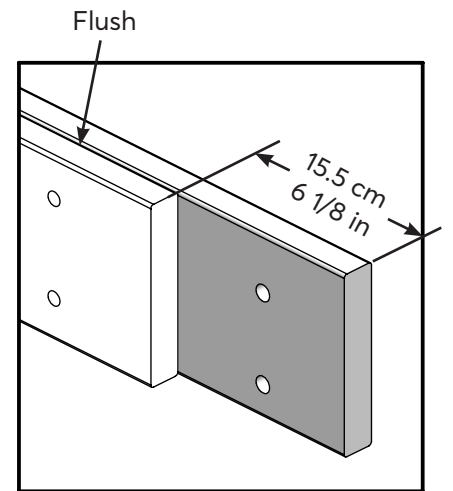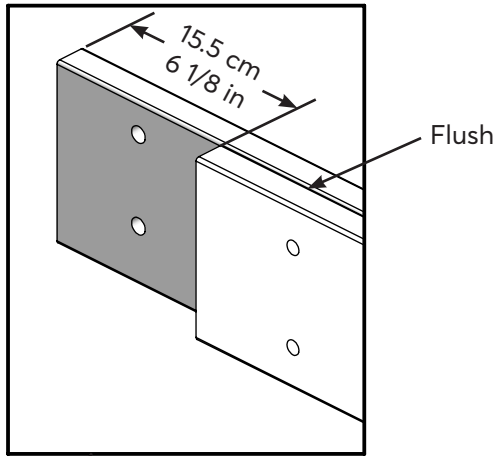


Hardware

18 x S15

11 Left Side Frame Assembly

Hint: Use bolts to line up bolt holes.

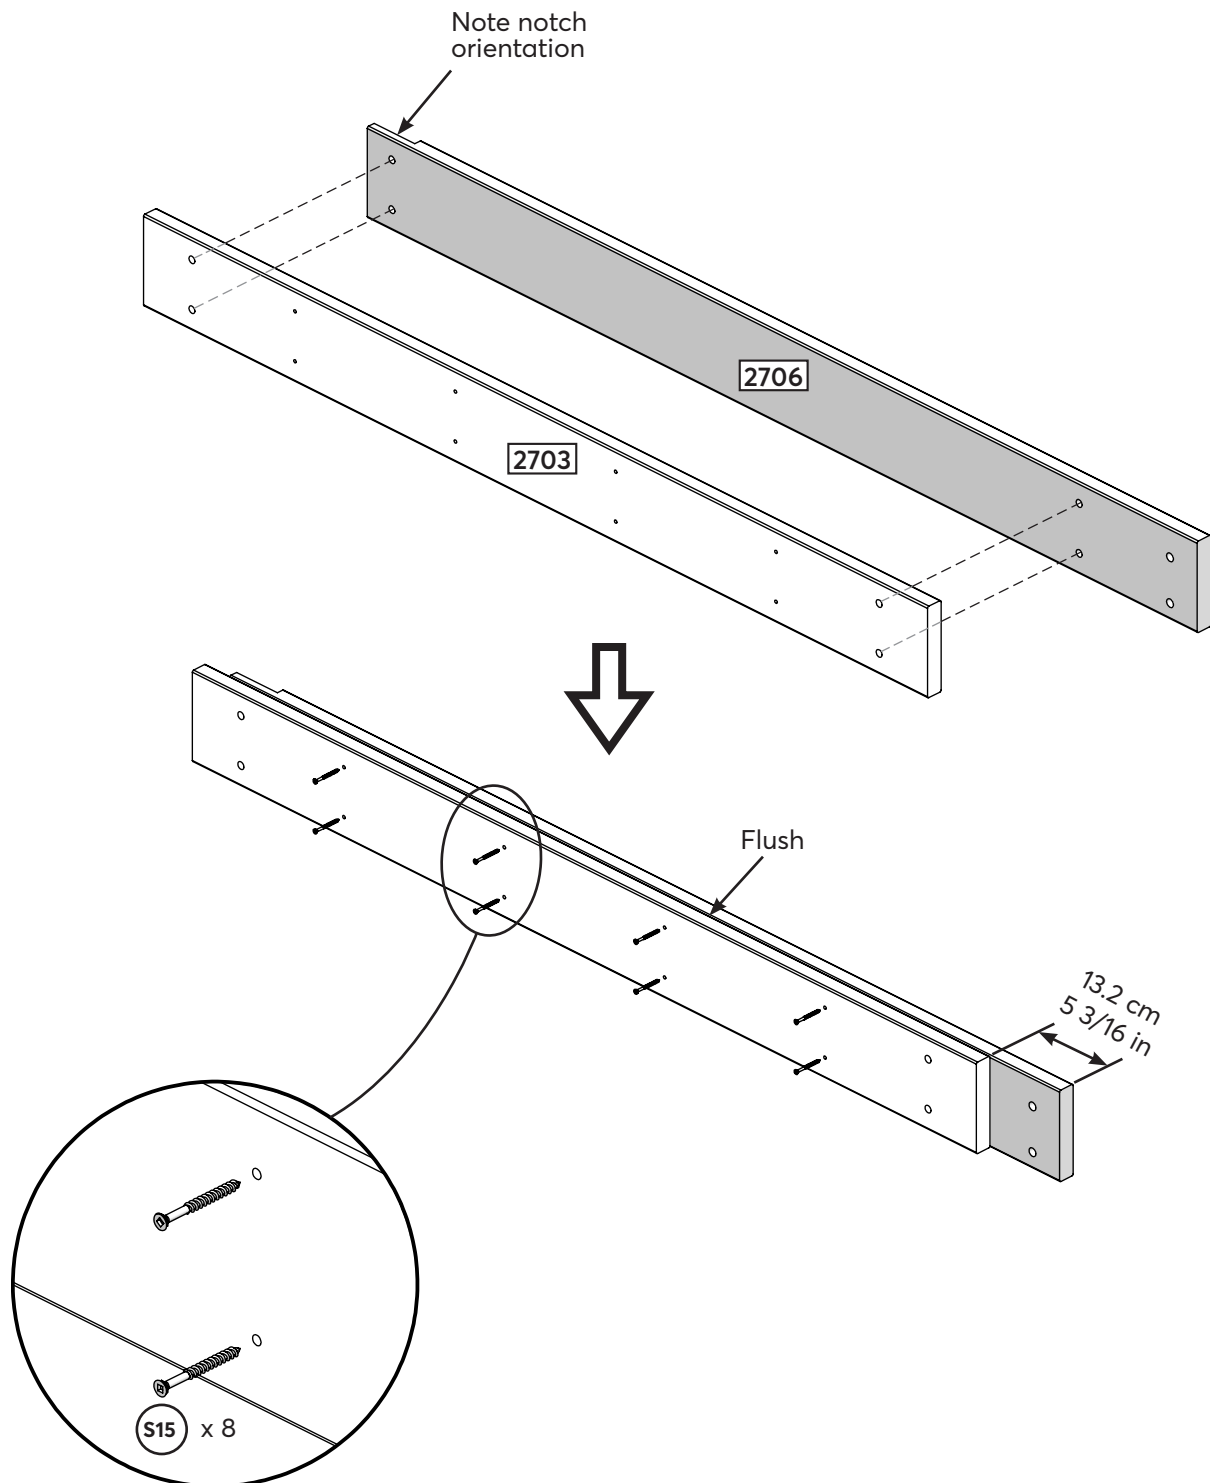


Wood Parts

1 x 2703

1 x 2706

Hardware

8 x S15

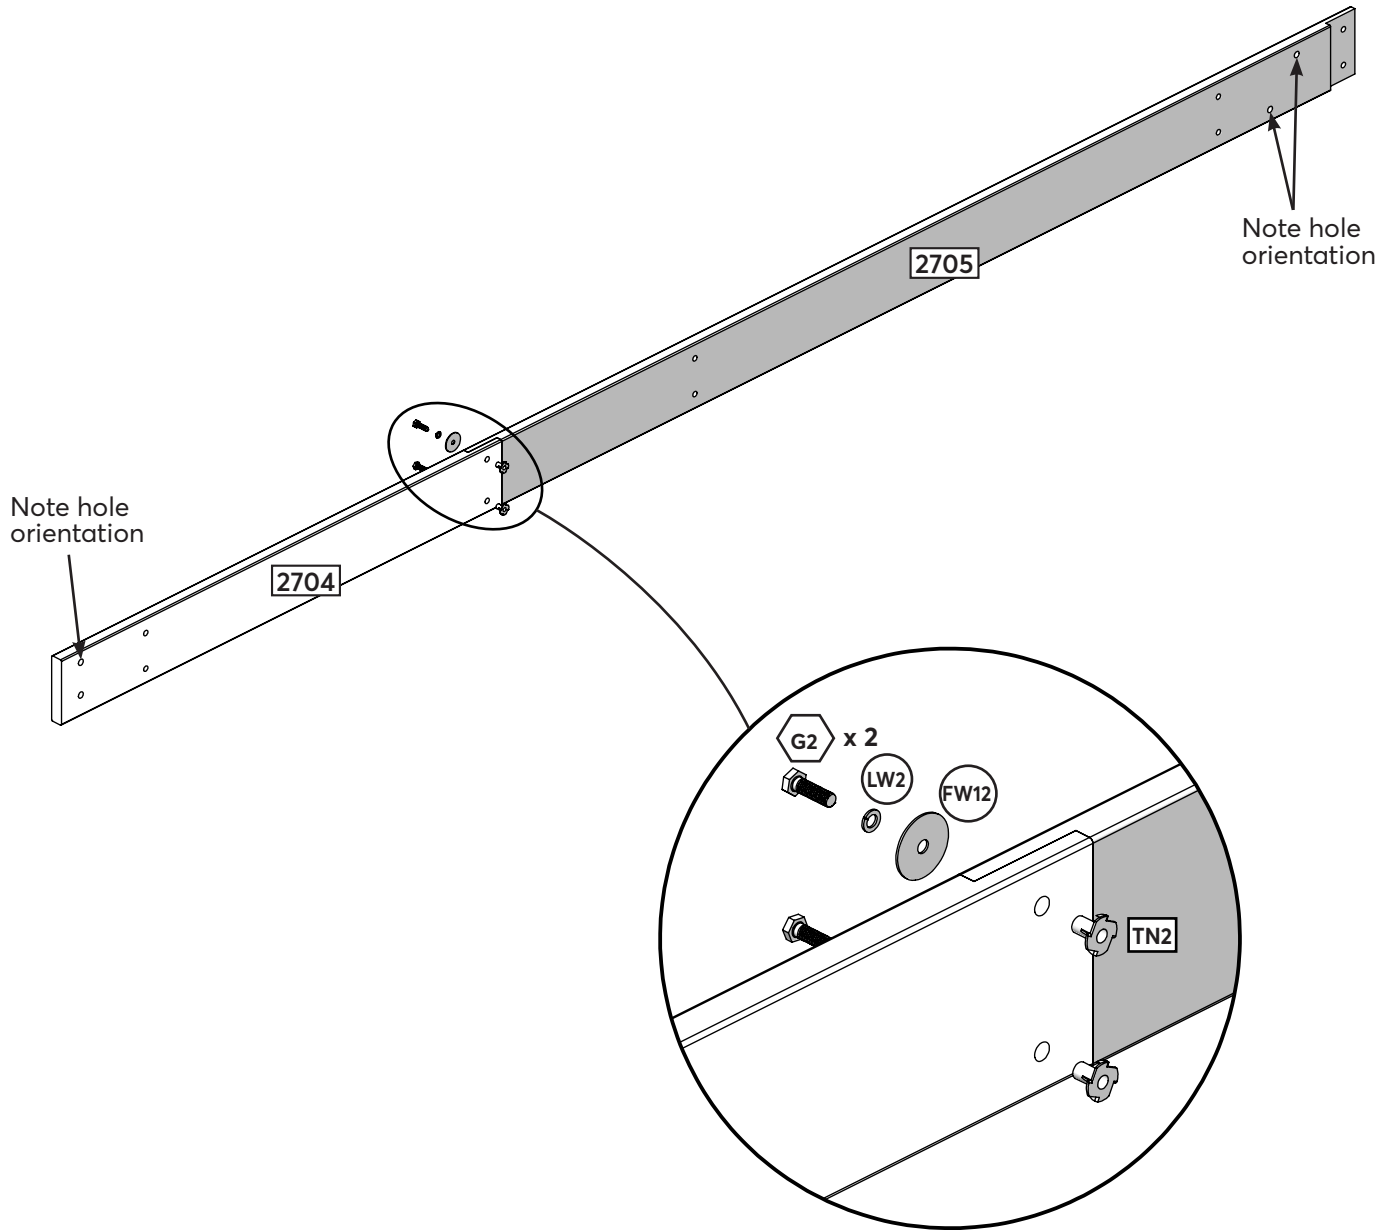
**Wood Parts**

1 x 2704

1 x 2705

Hardware

2 x G2 (LW2, FW12, TN2)

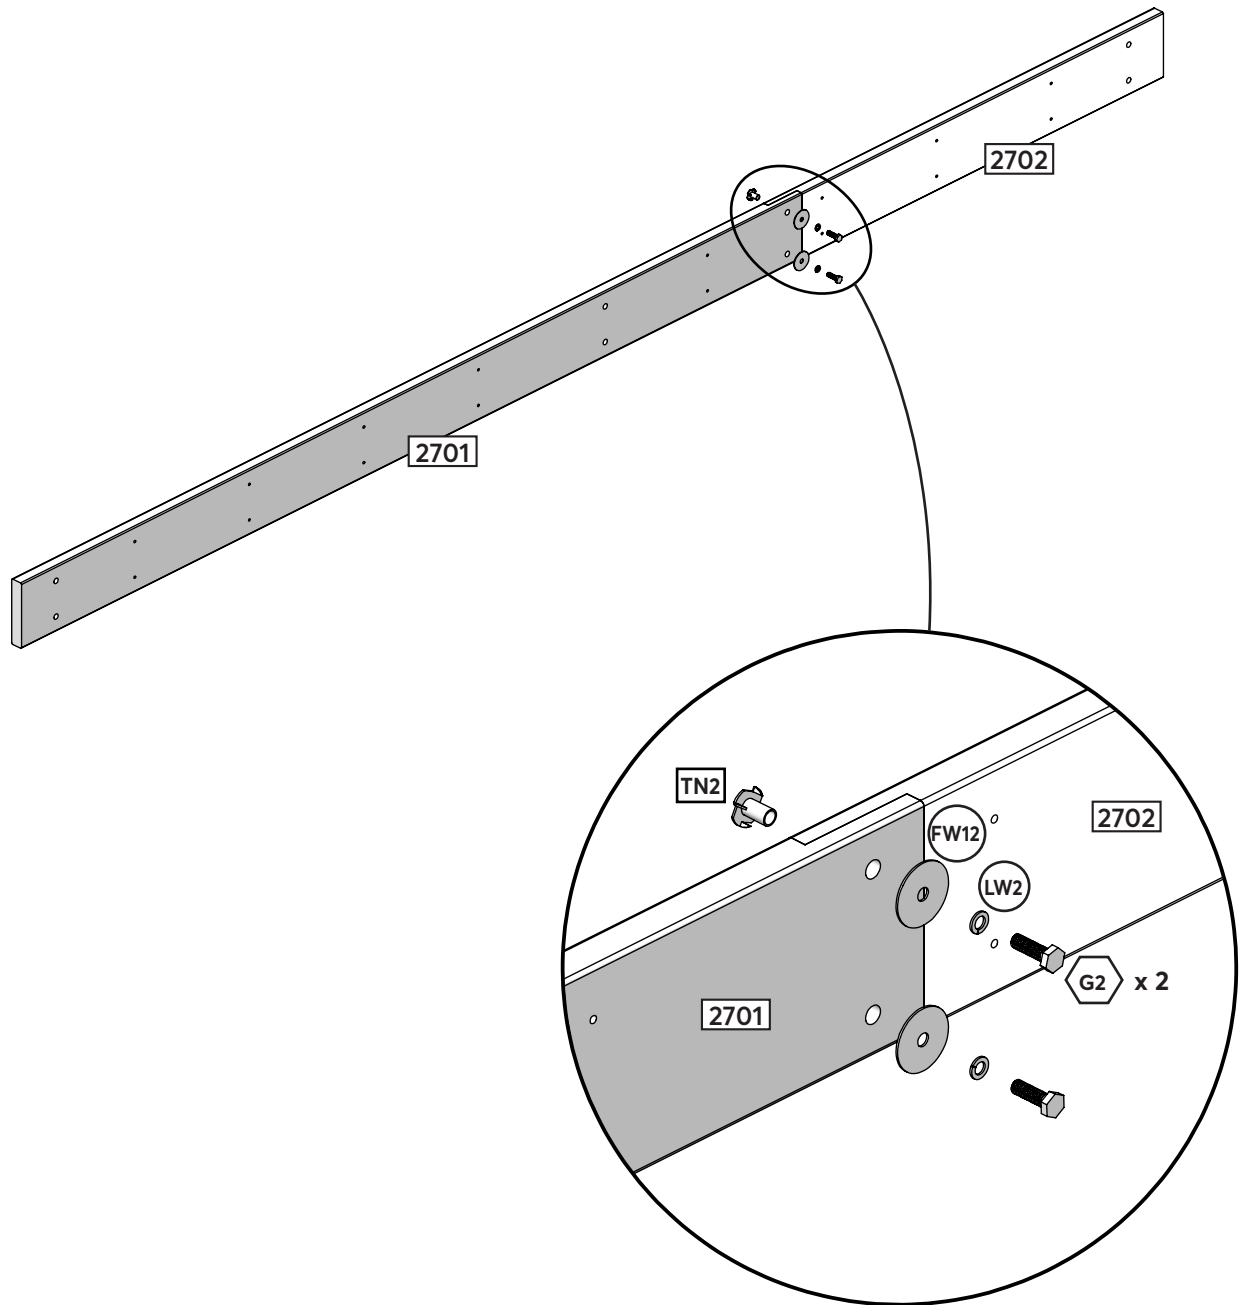**Wood Parts**

1 x 2701



1 x 2702

Hardware

2 x G2 (LW2, FW12, TN2)

14


Hint: Use bolts to line up bolt holes.

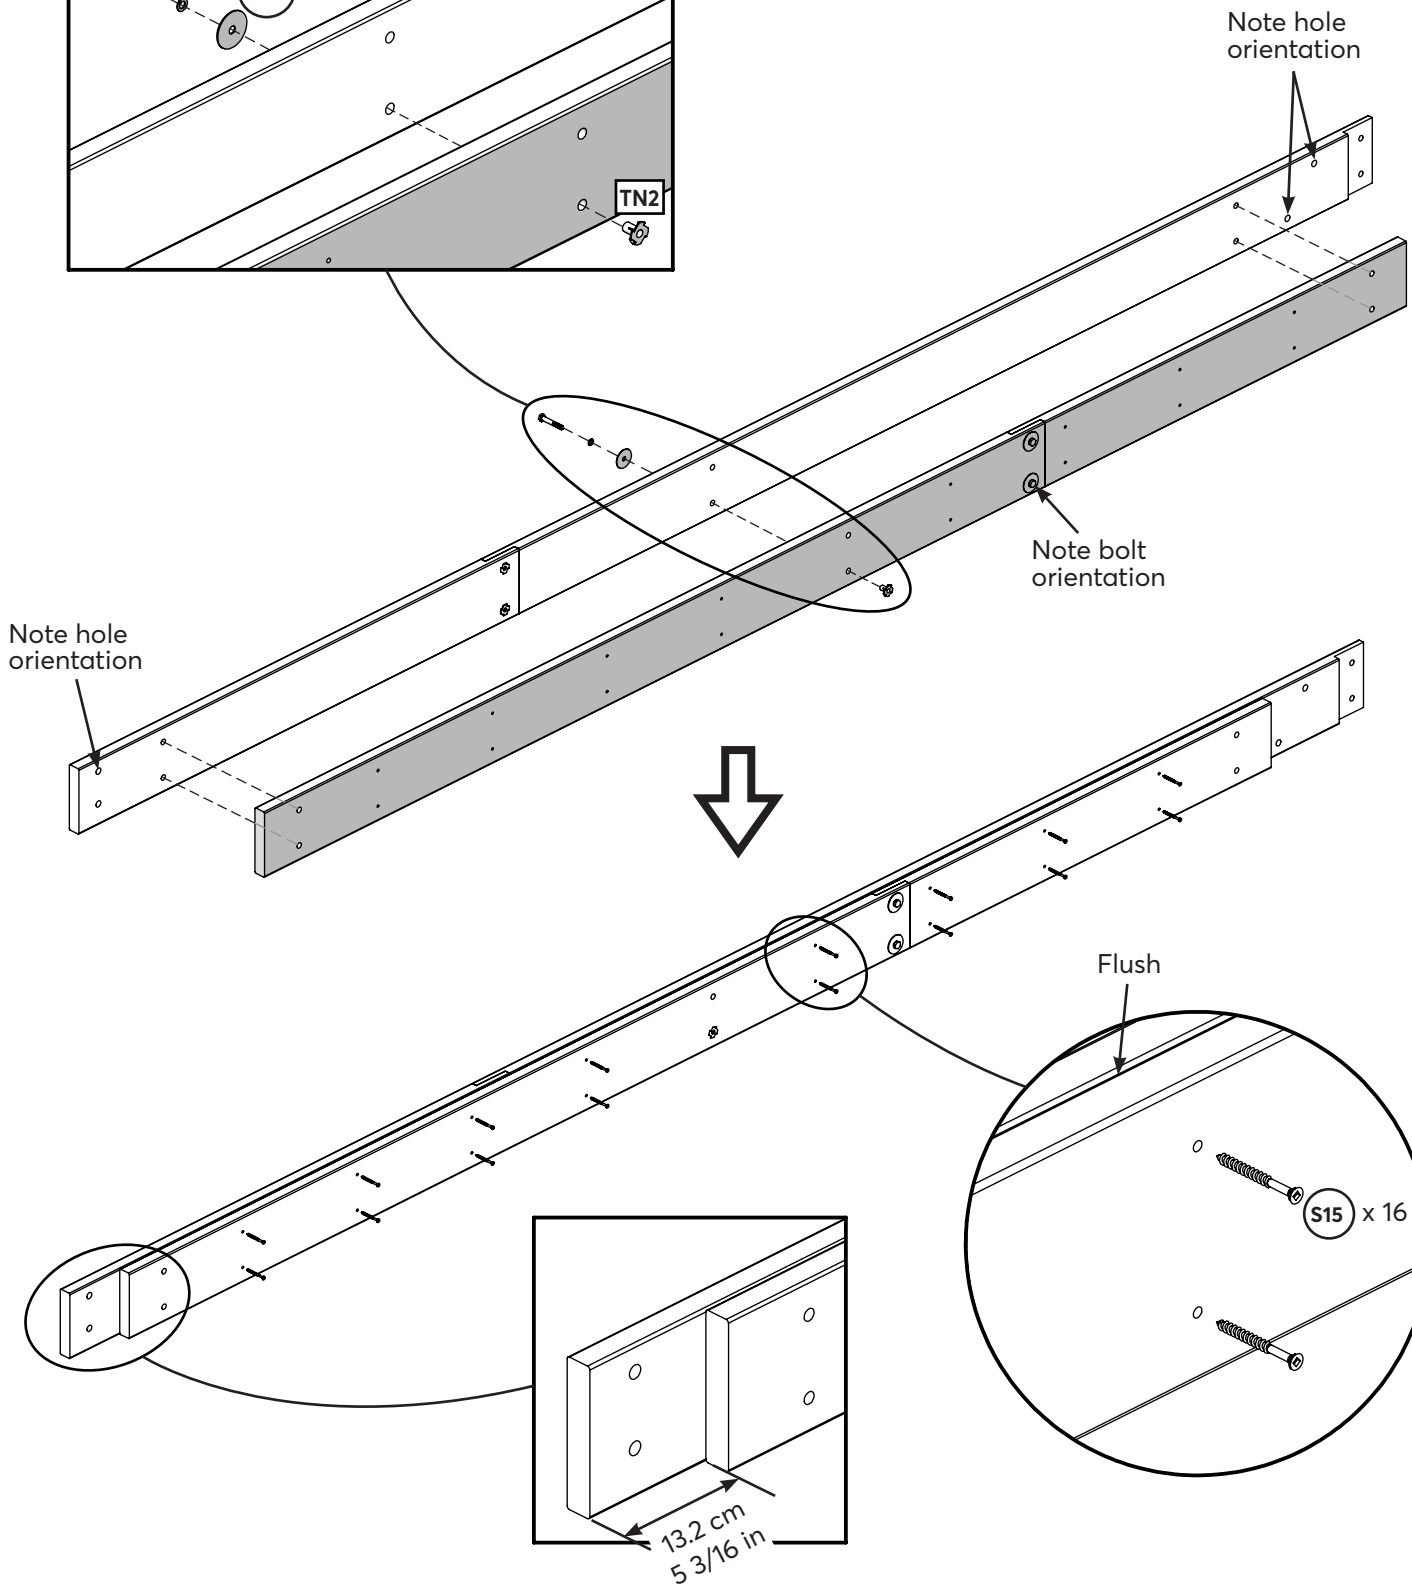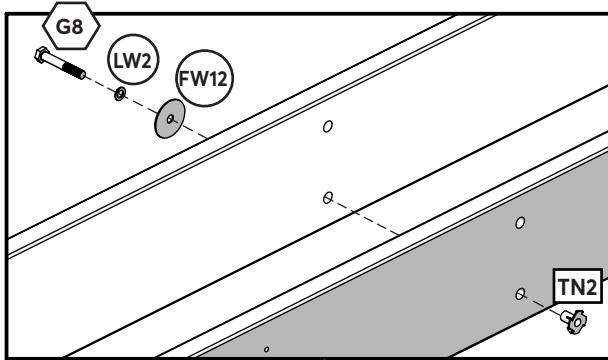

Hardware







1 x (LW2, FW12, TN2)

16 x

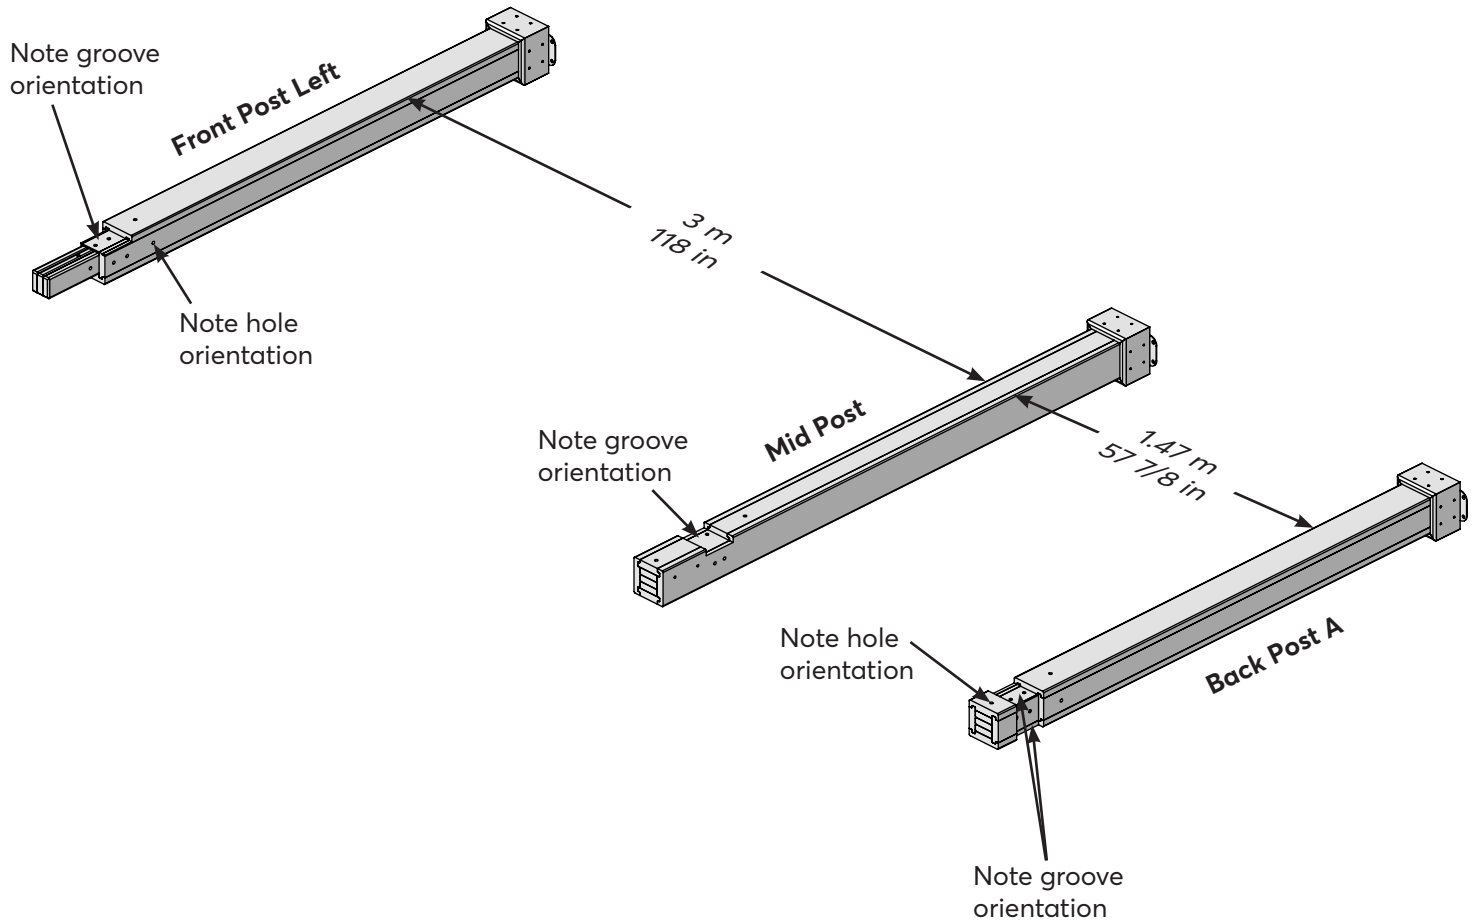





16

Hammer TN3 into the bottom holes.

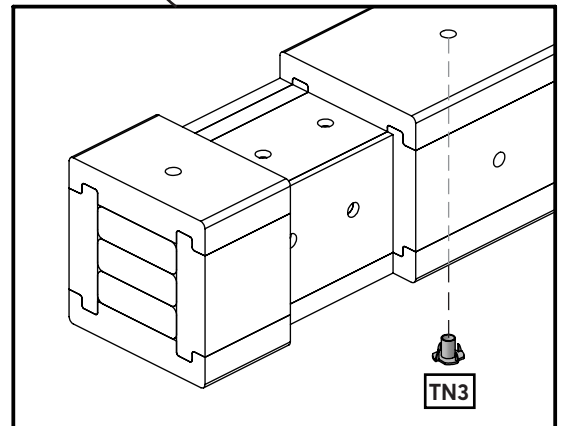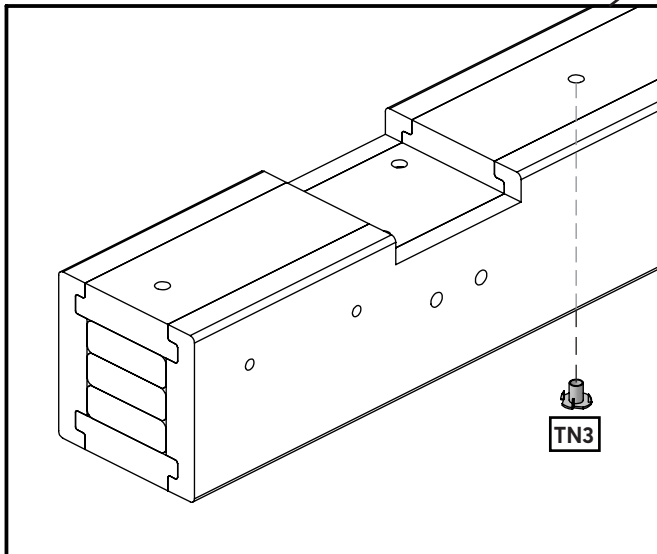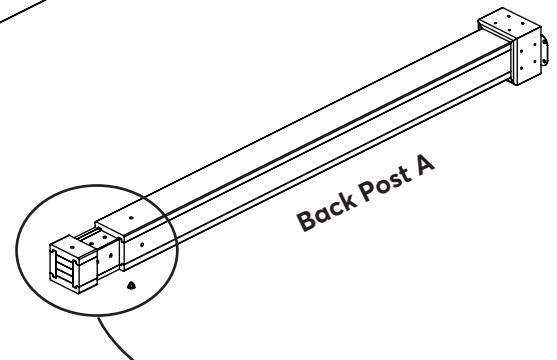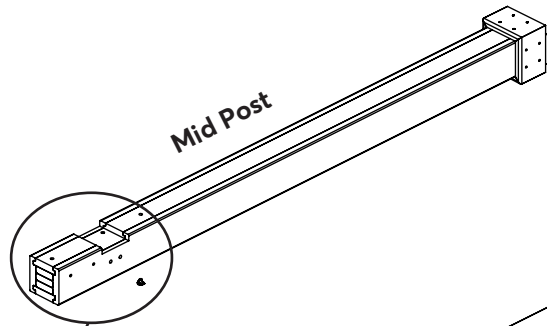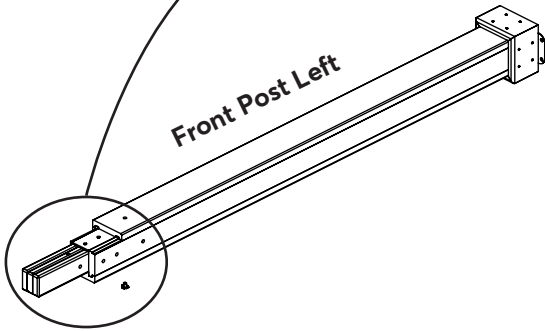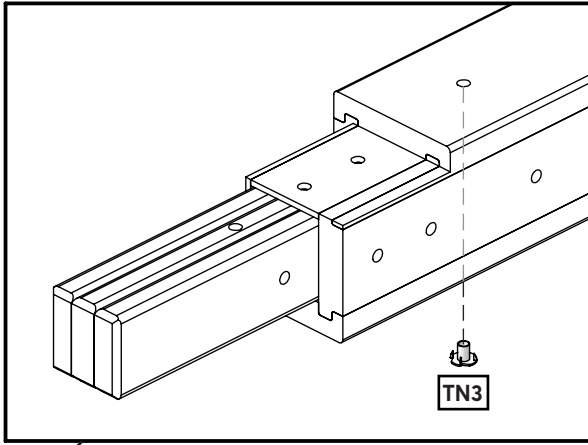

Hardware

3 x **TN3**

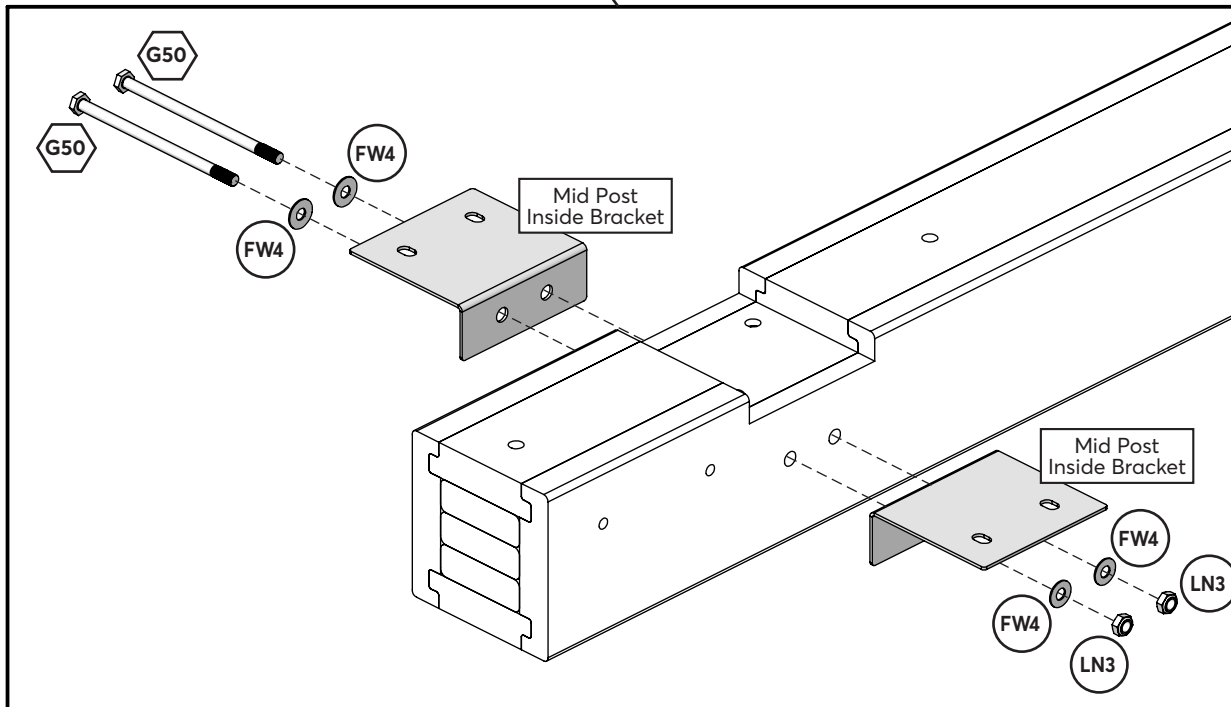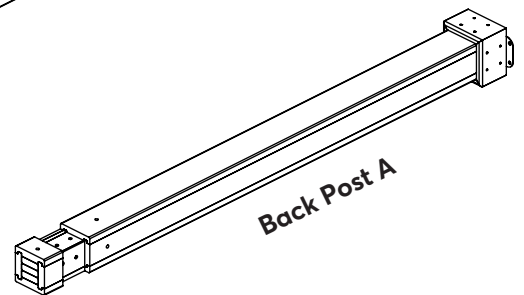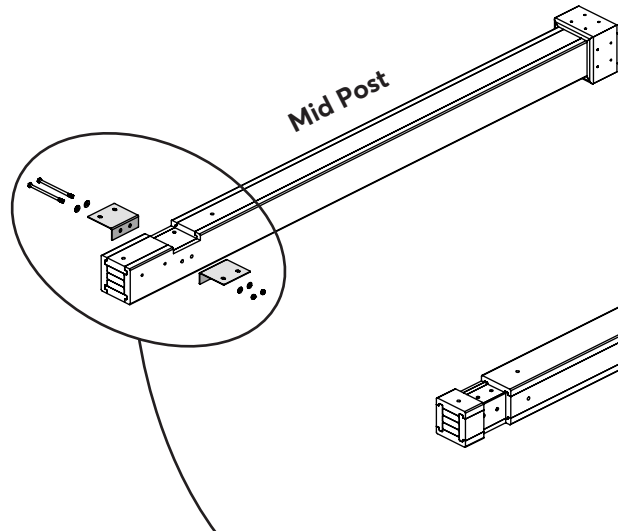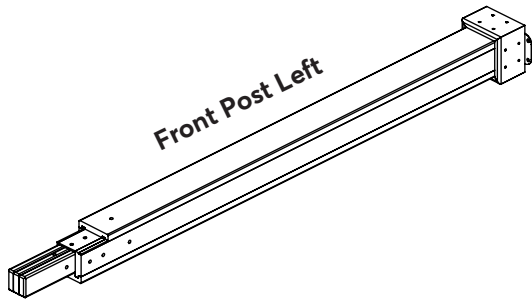


Hardware

2 x (FW4 x 2, LN3)



Components

2 x Mid Post Inside Bracket

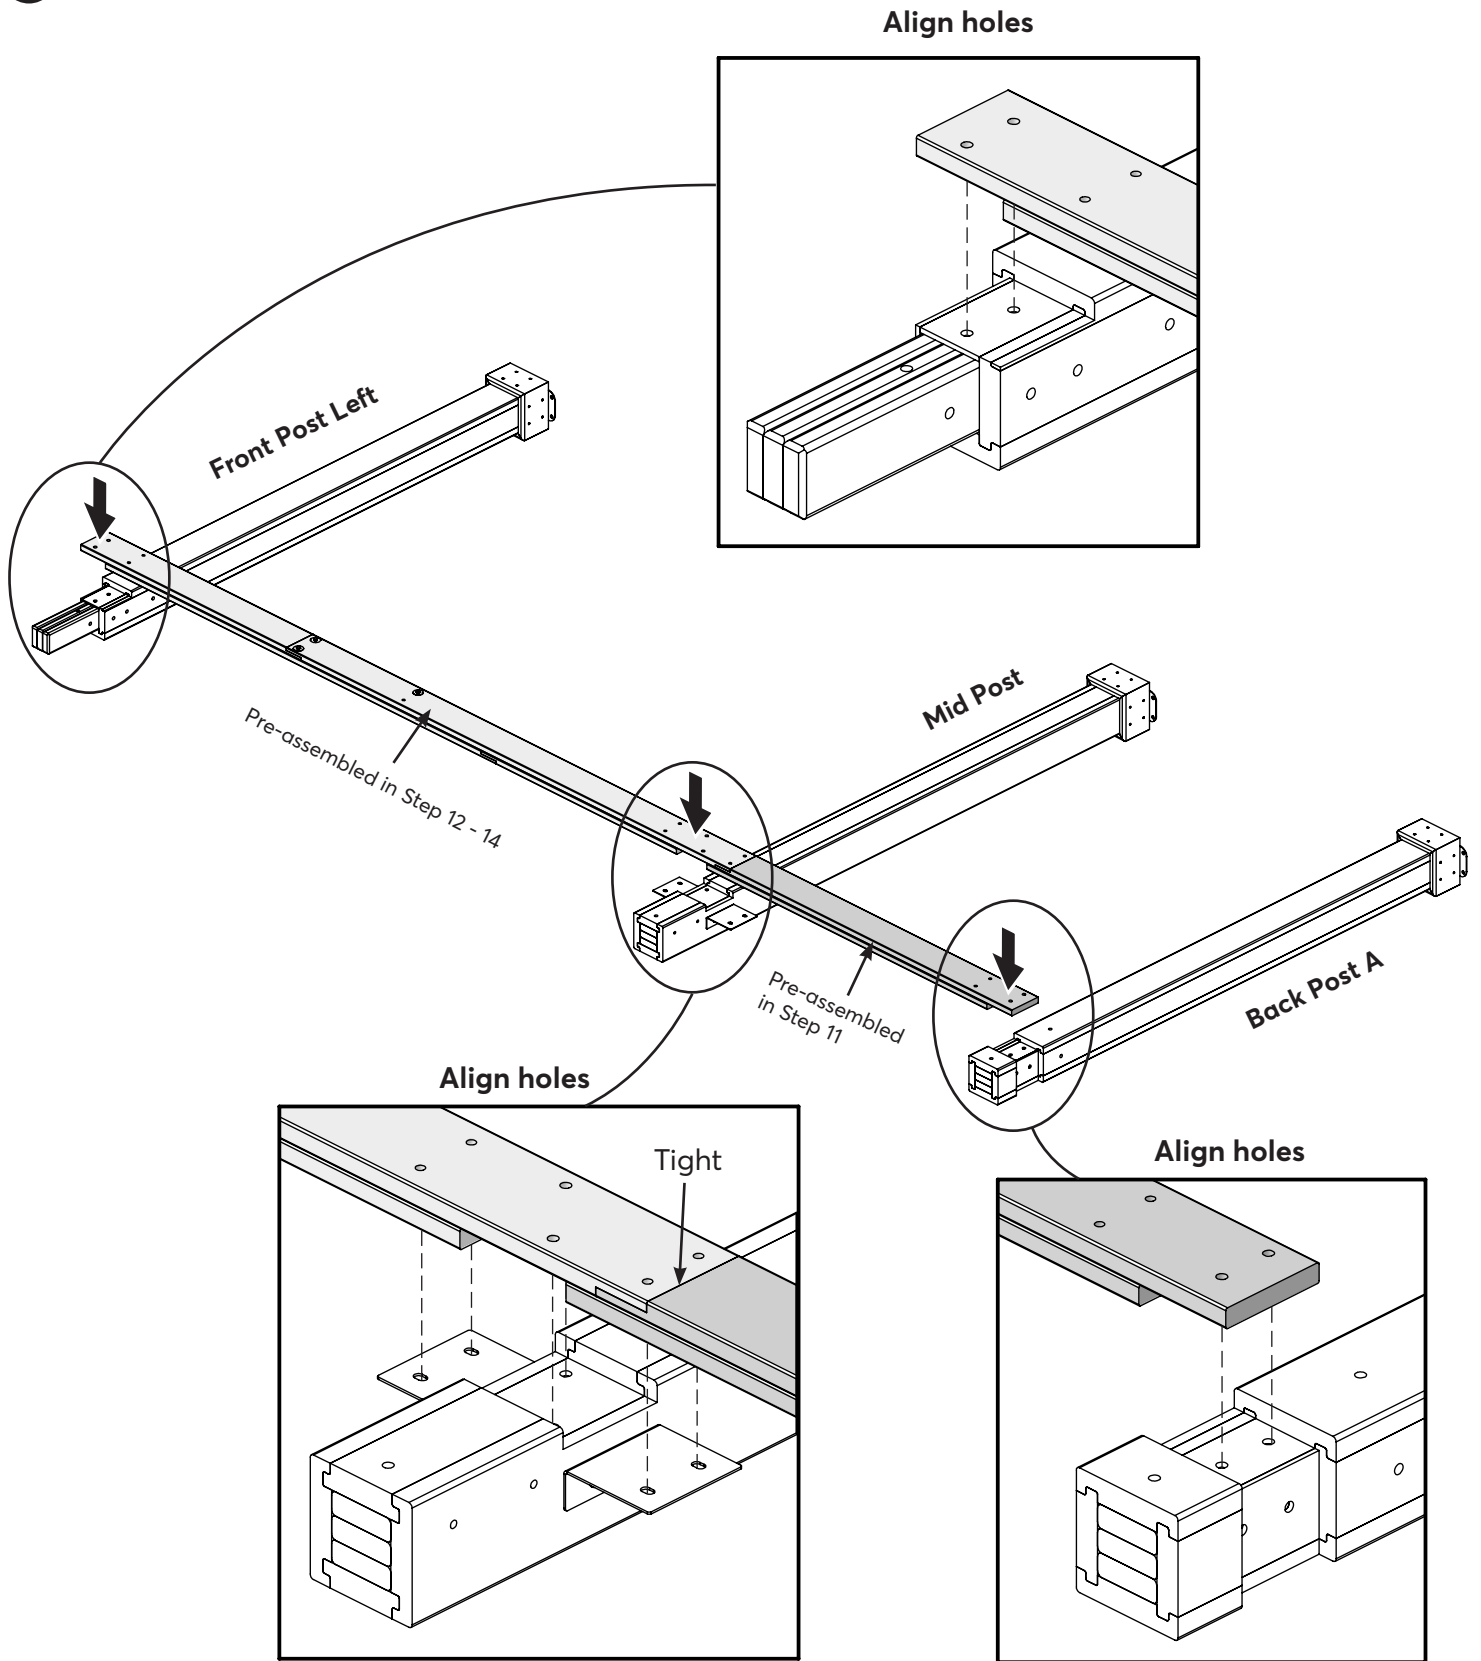

19

Do not tighten bolts until Step 23.

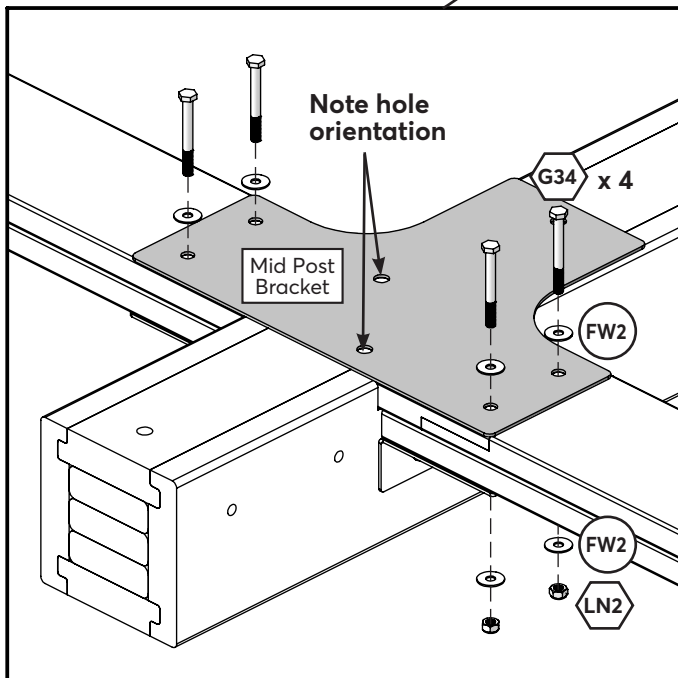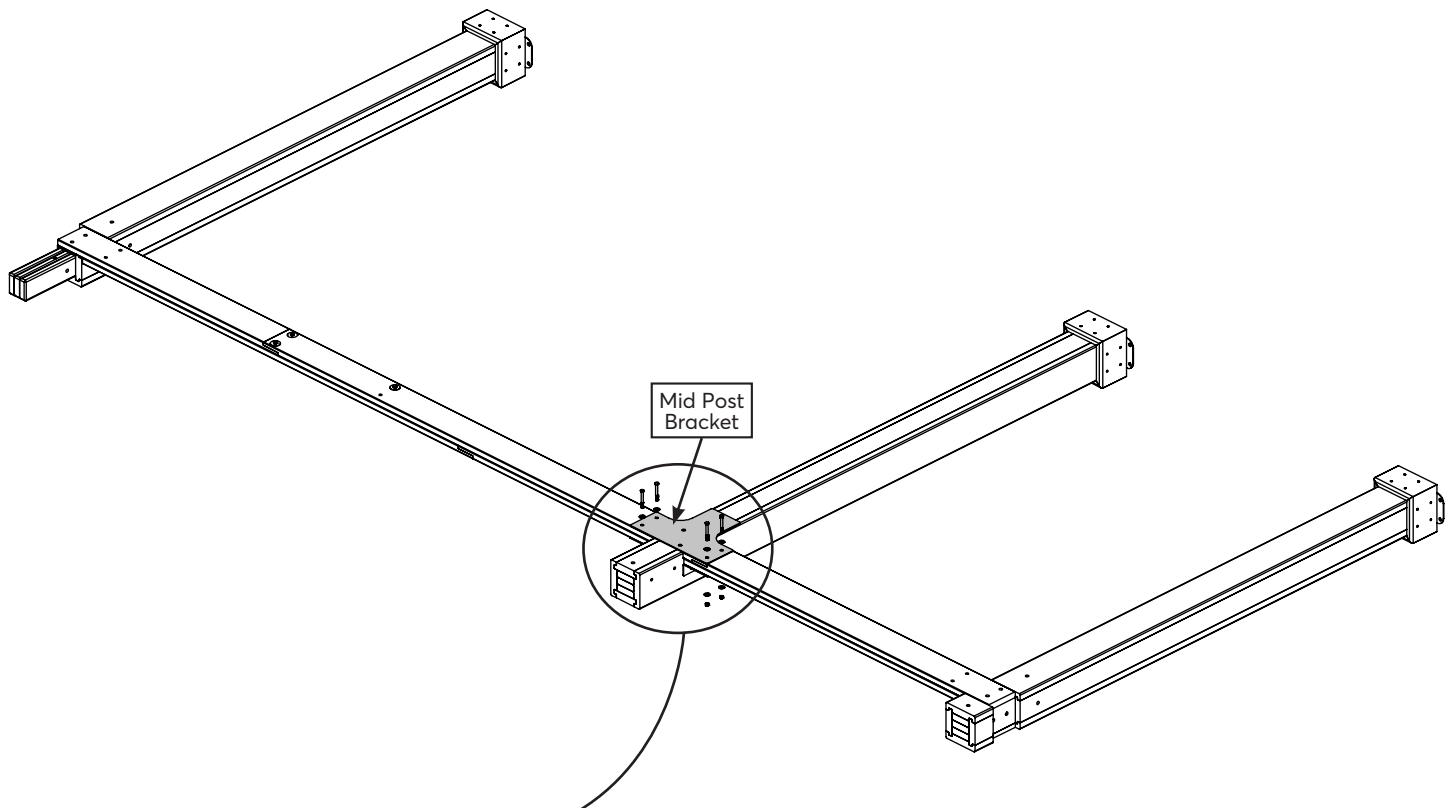

Hardware



4 x G34 (FW2 x 2, LN2)

Components

1 x Mid Post Bracket

20

Do not tighten bolts until Step 23.


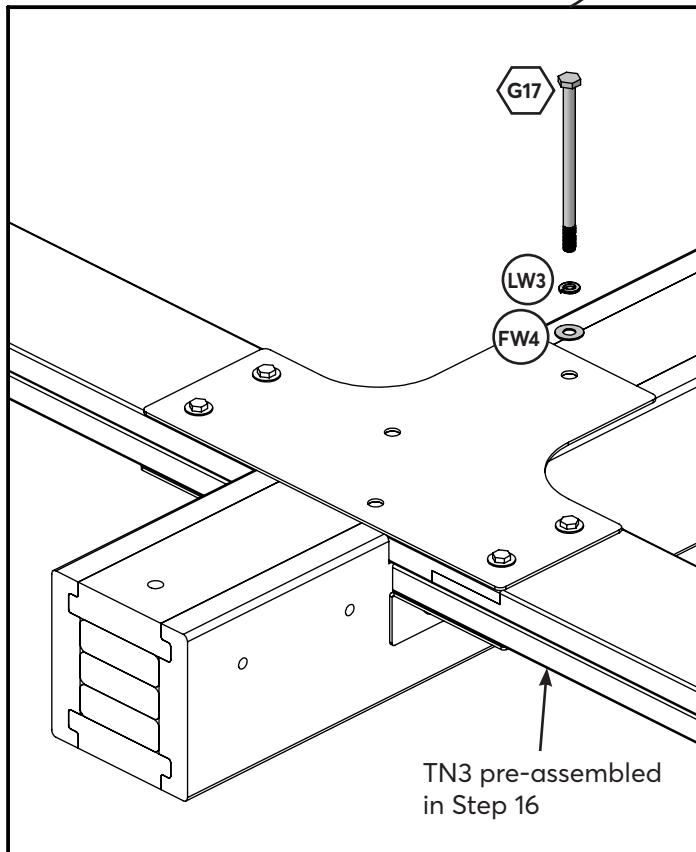
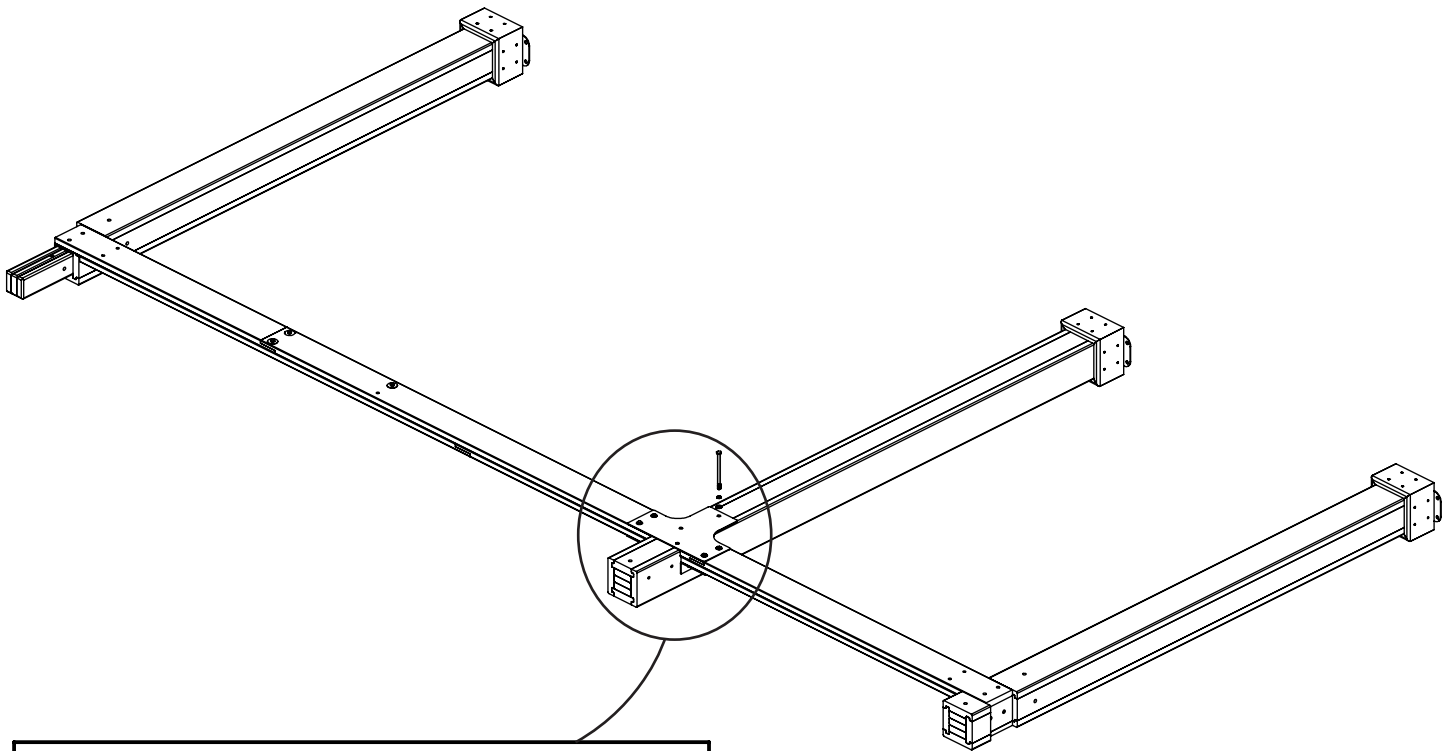


Hardware

1 x  (LW3, FW4)

21

Do not tighten bolts until Step 23.

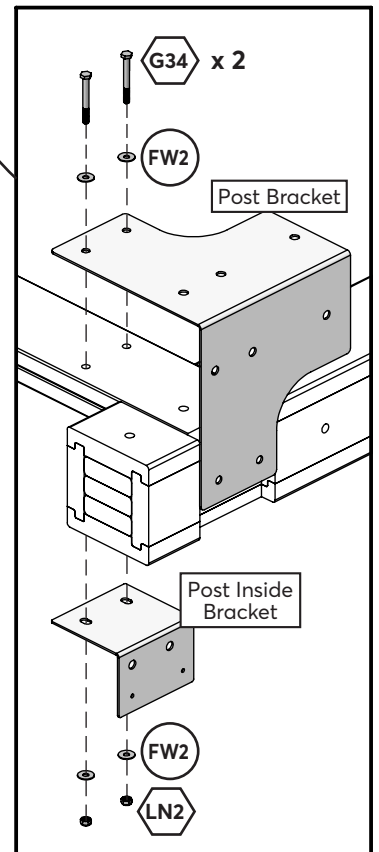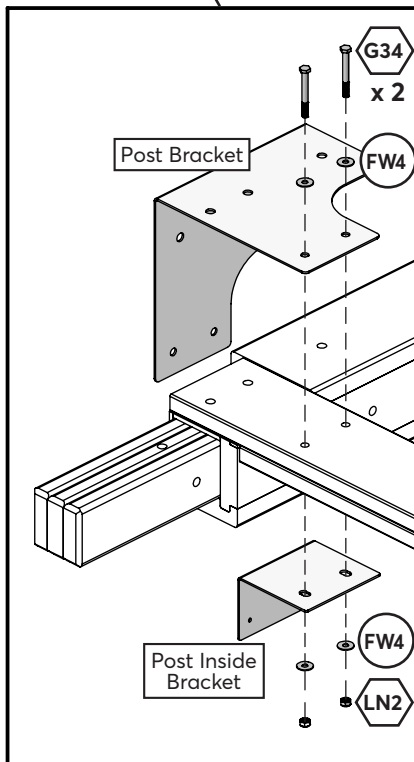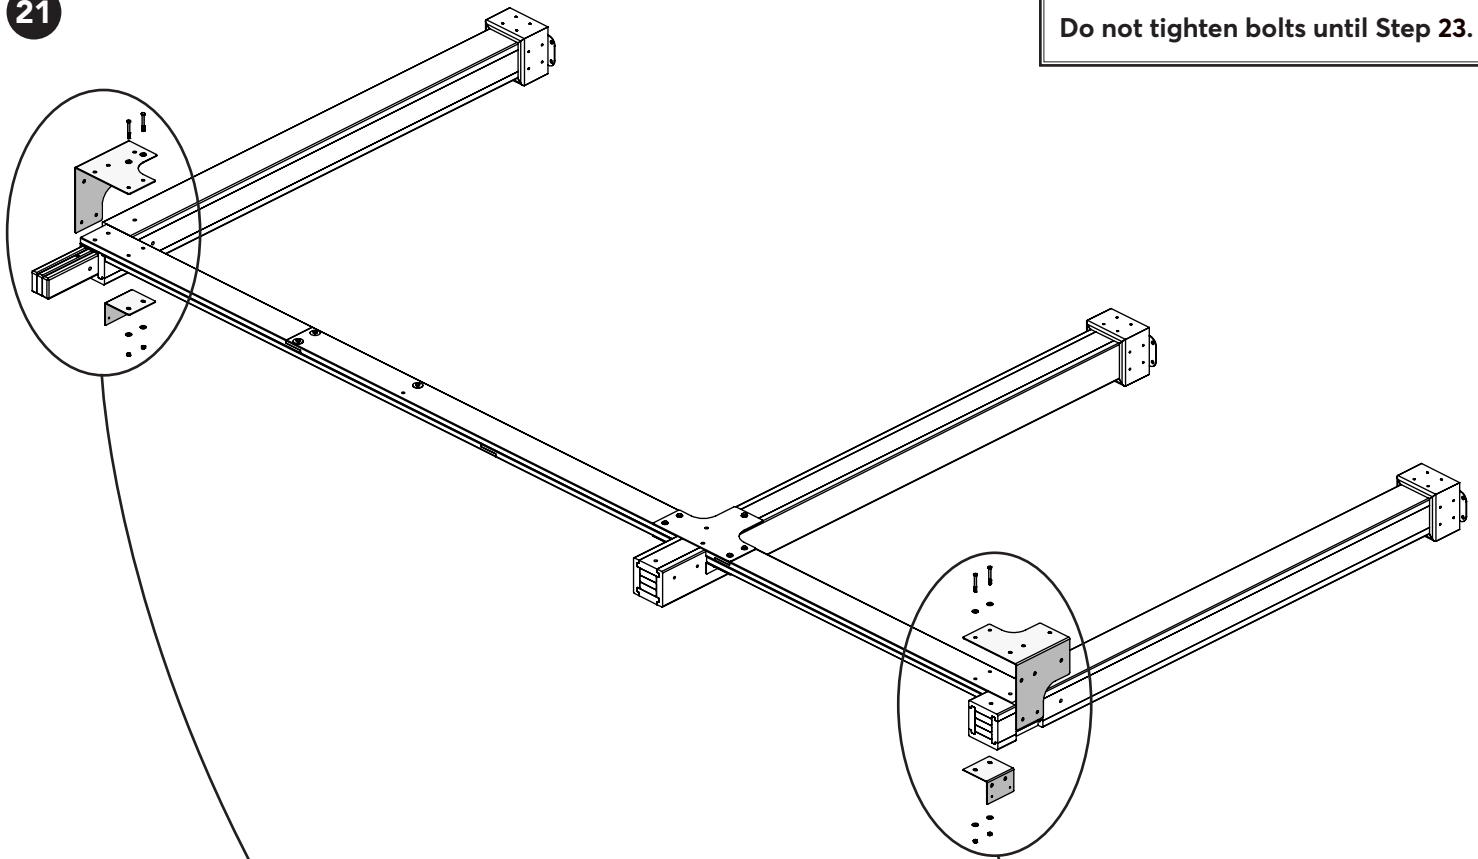

Hardware



4 x G34 (FW2 x 2, LN2)

Components


2 x Post Bracket
2 x Post Inside Bracket

22

Do not tighten bolts until Step 23.

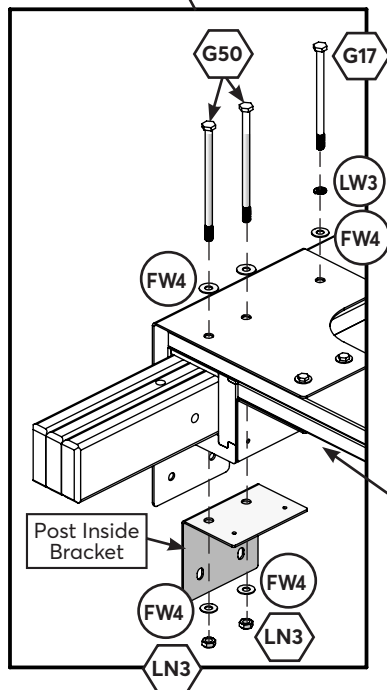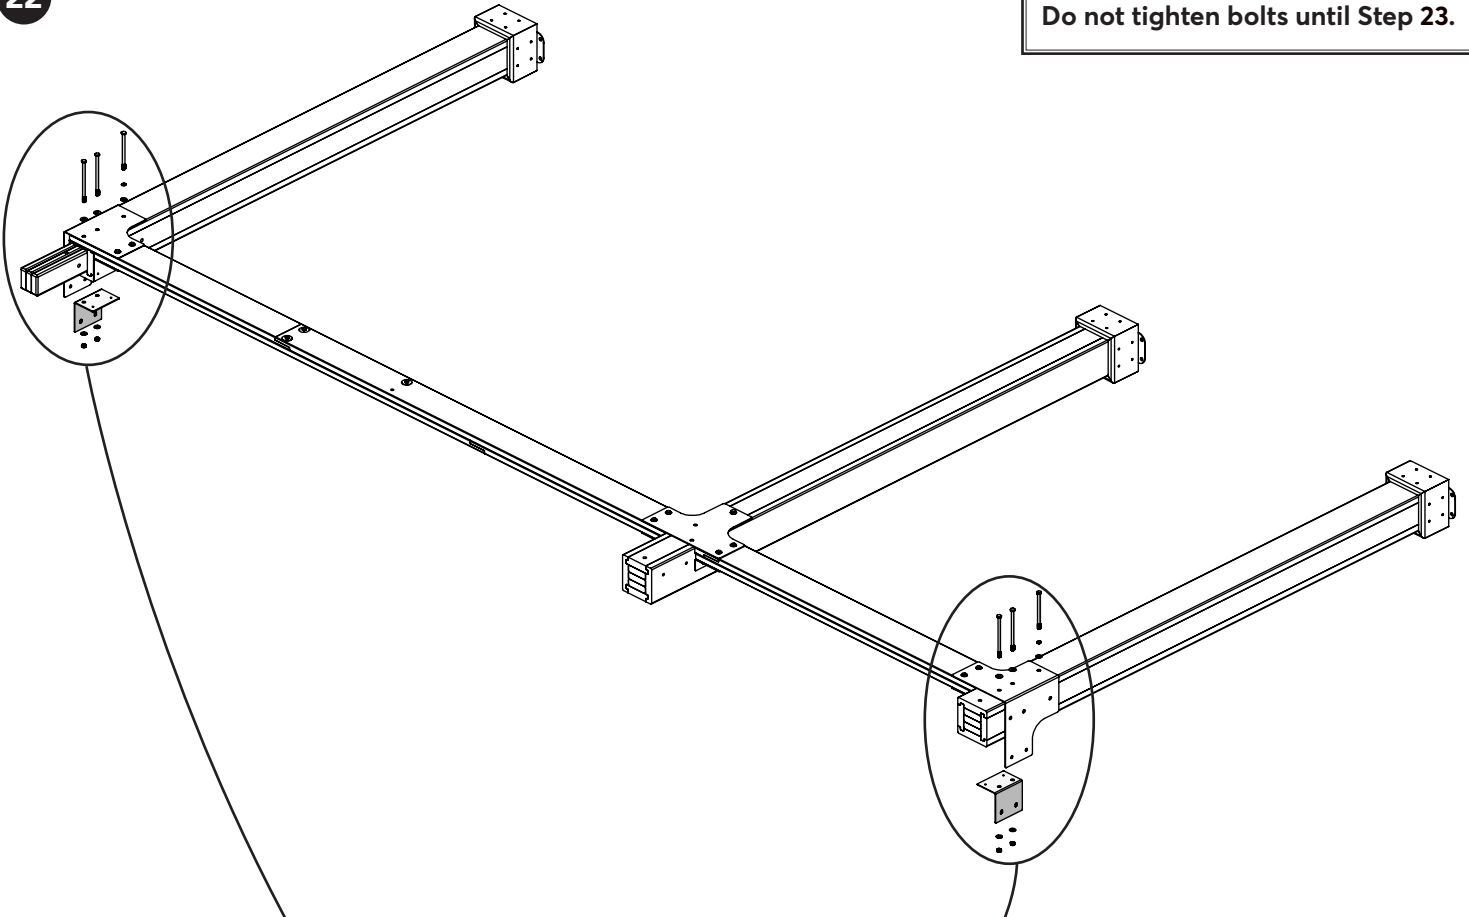

TN3 pre-assembled in Step 16

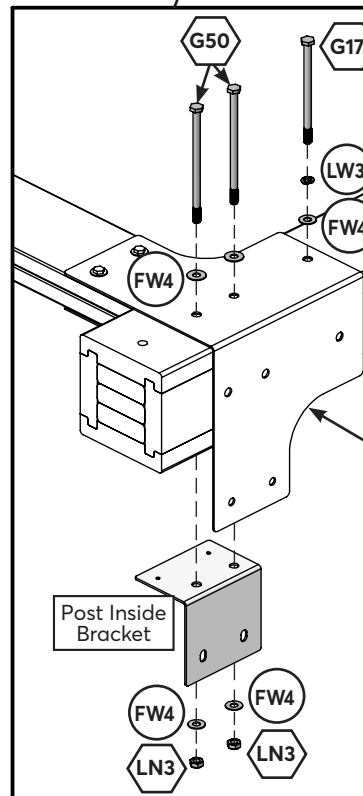

TN3 pre-assembled in Step 16

Hardware

- 4 x G50 (FW4 x 2, LN3)
- 2 x G17 (LW3, FW4)


Components

- 2 x Post Inside Bracket

23


The distance between the inside of posts should be 118 in (3m) and 57 7/8 in (1.47 m).

Tighten all bolts.

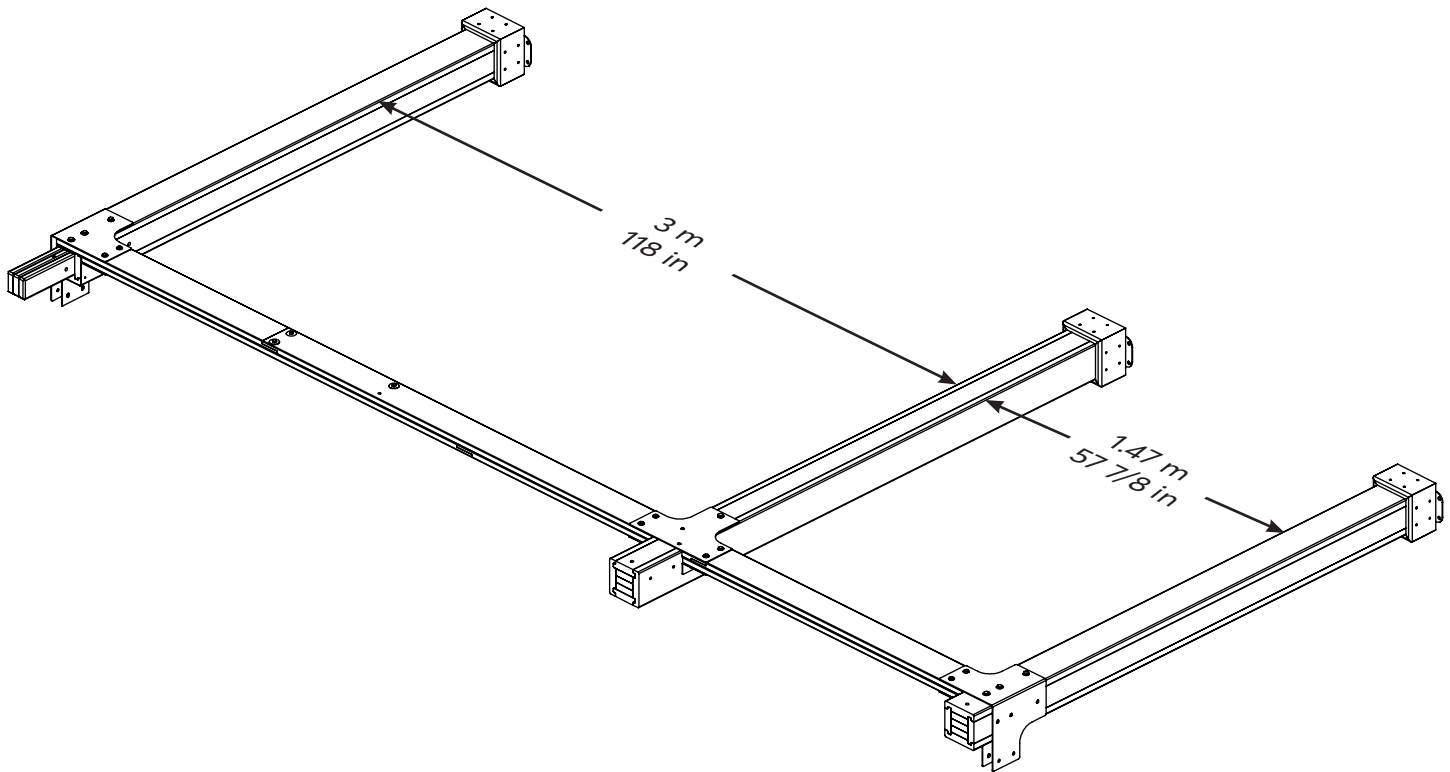

24 Right Side Frame Assembly

Hint: Use bolts to line up bolt holes.

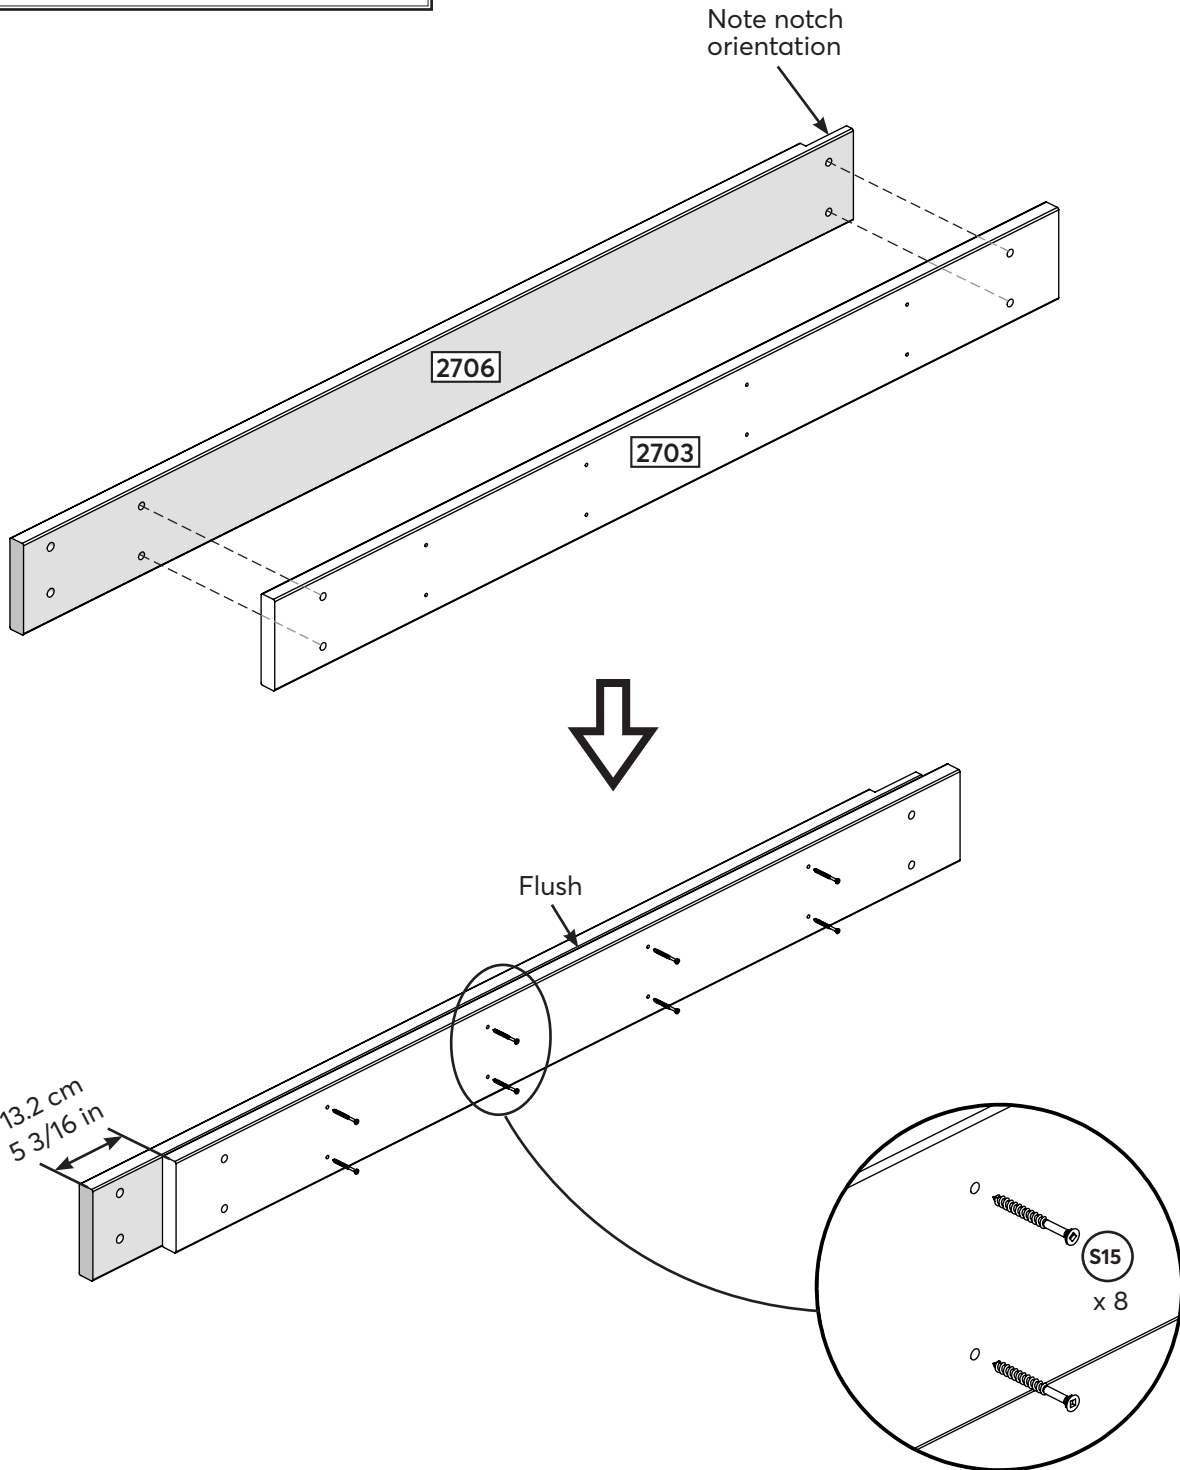


Wood Parts

1 x 2703

1 x 2706

Hardware

8 x S15

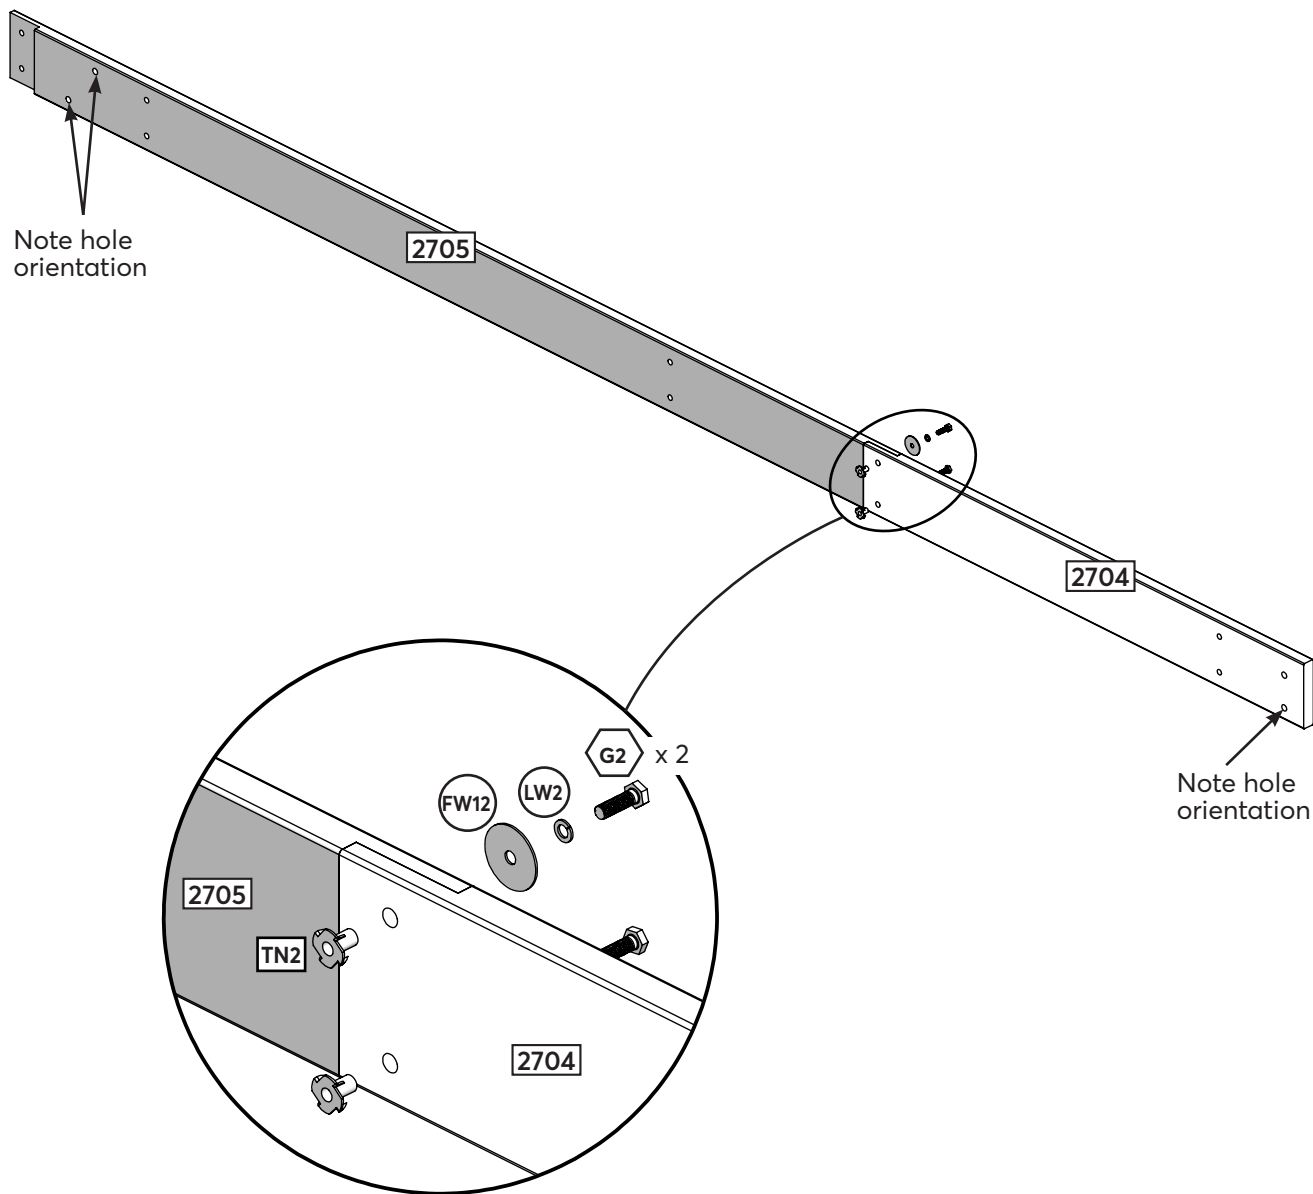


Wood Parts

- 1 x 2704
- 1 x 2705

Hardware

- 2 x G2 (LW2, FW12, TN2)

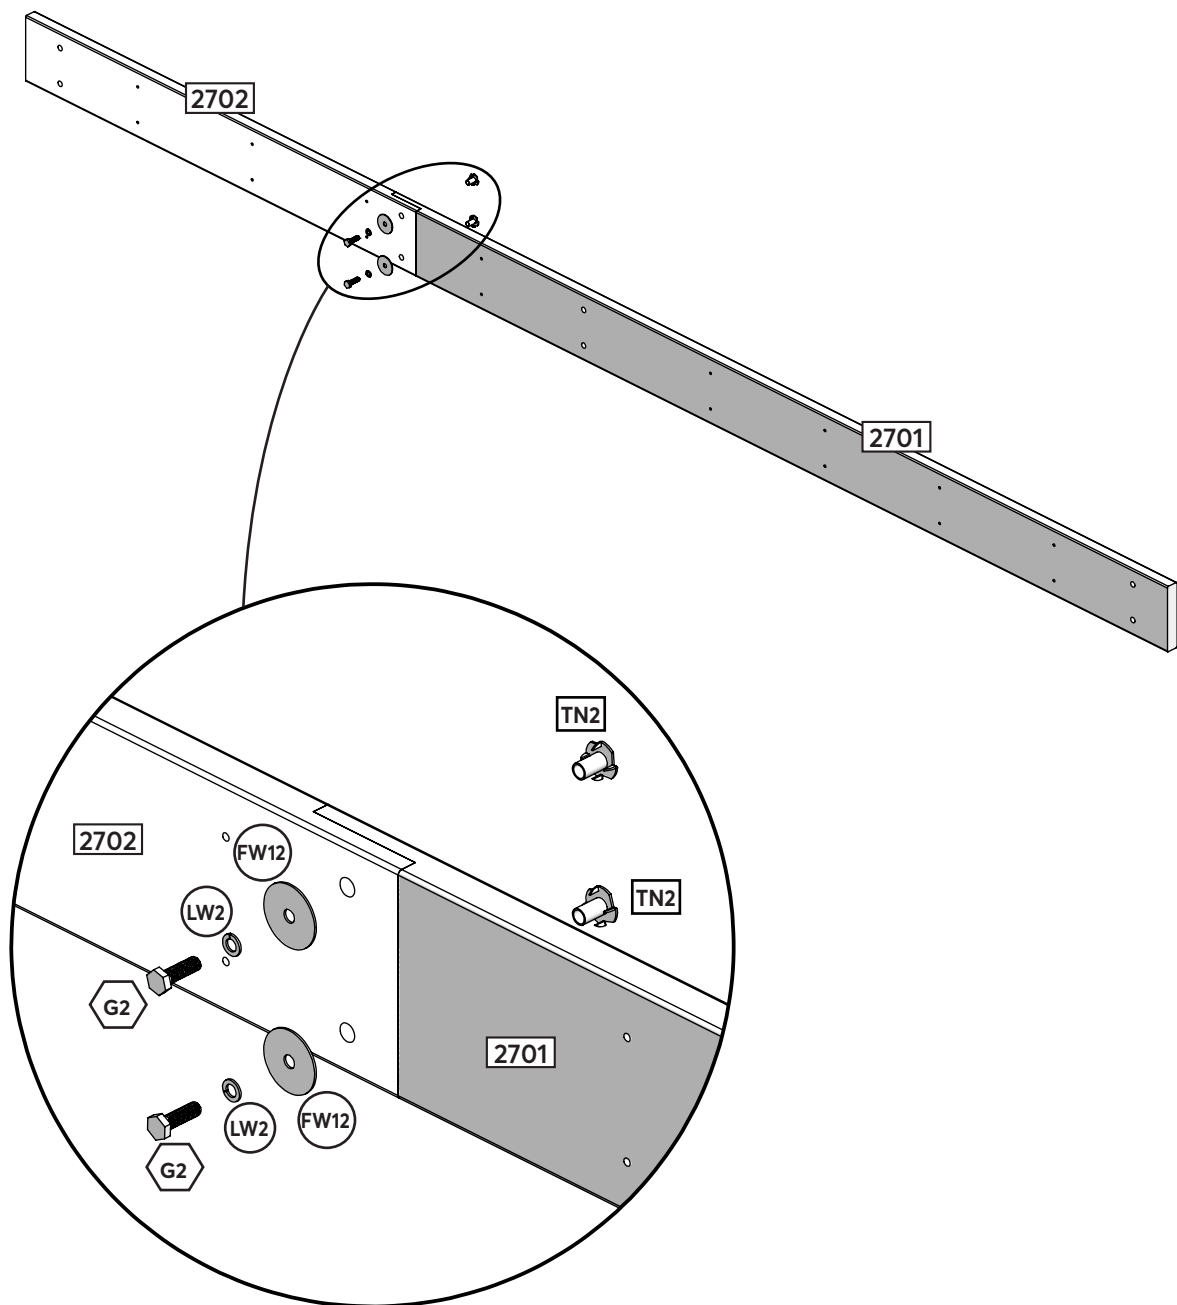

Wood Parts


- 1 x 2701
- 1 x 2702

Hardware

- 2 x G2 (LW2, FW12, TN2)

27


Hint: Use bolts to line up bolt holes.

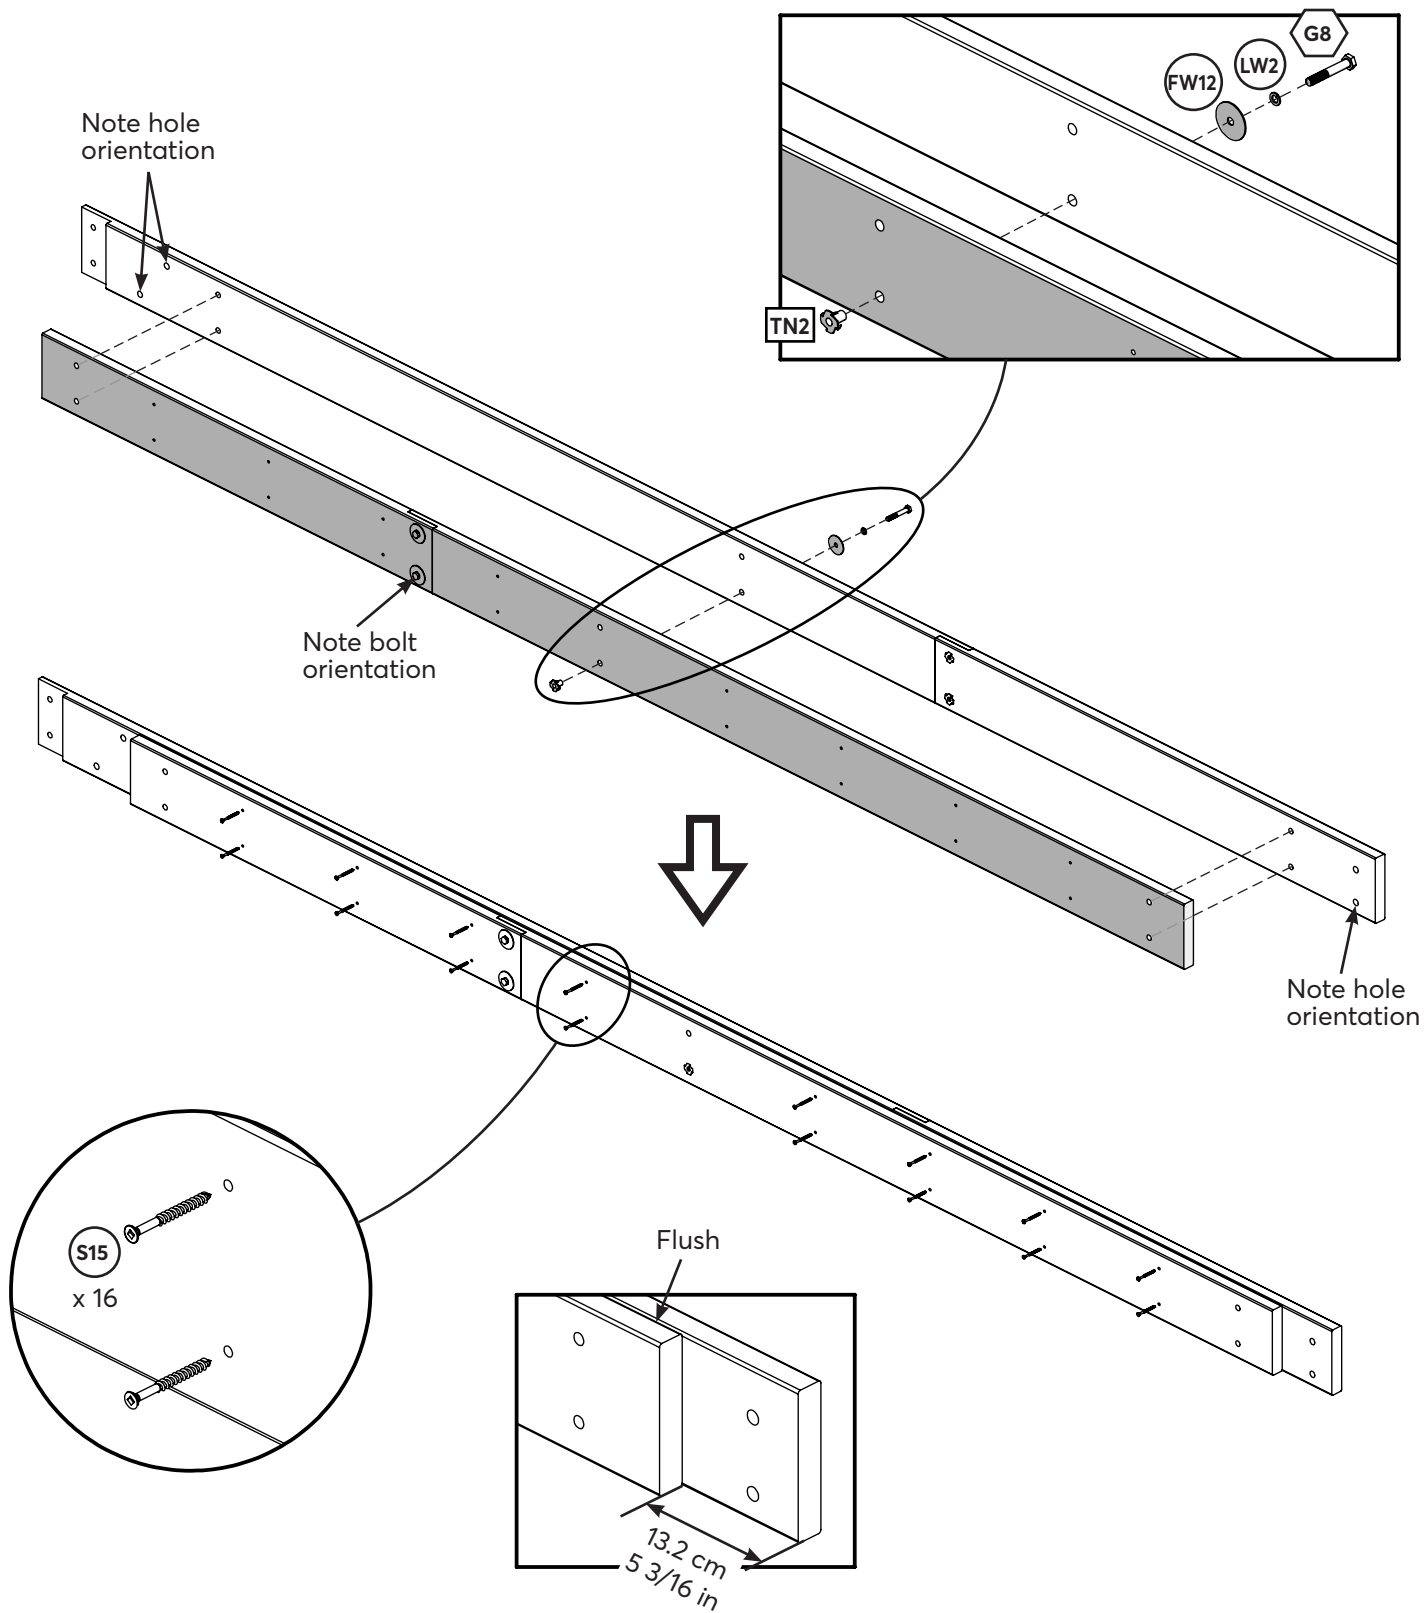







Hardware

1 x G8 (LW2, FW12, TN2)

16 x S15


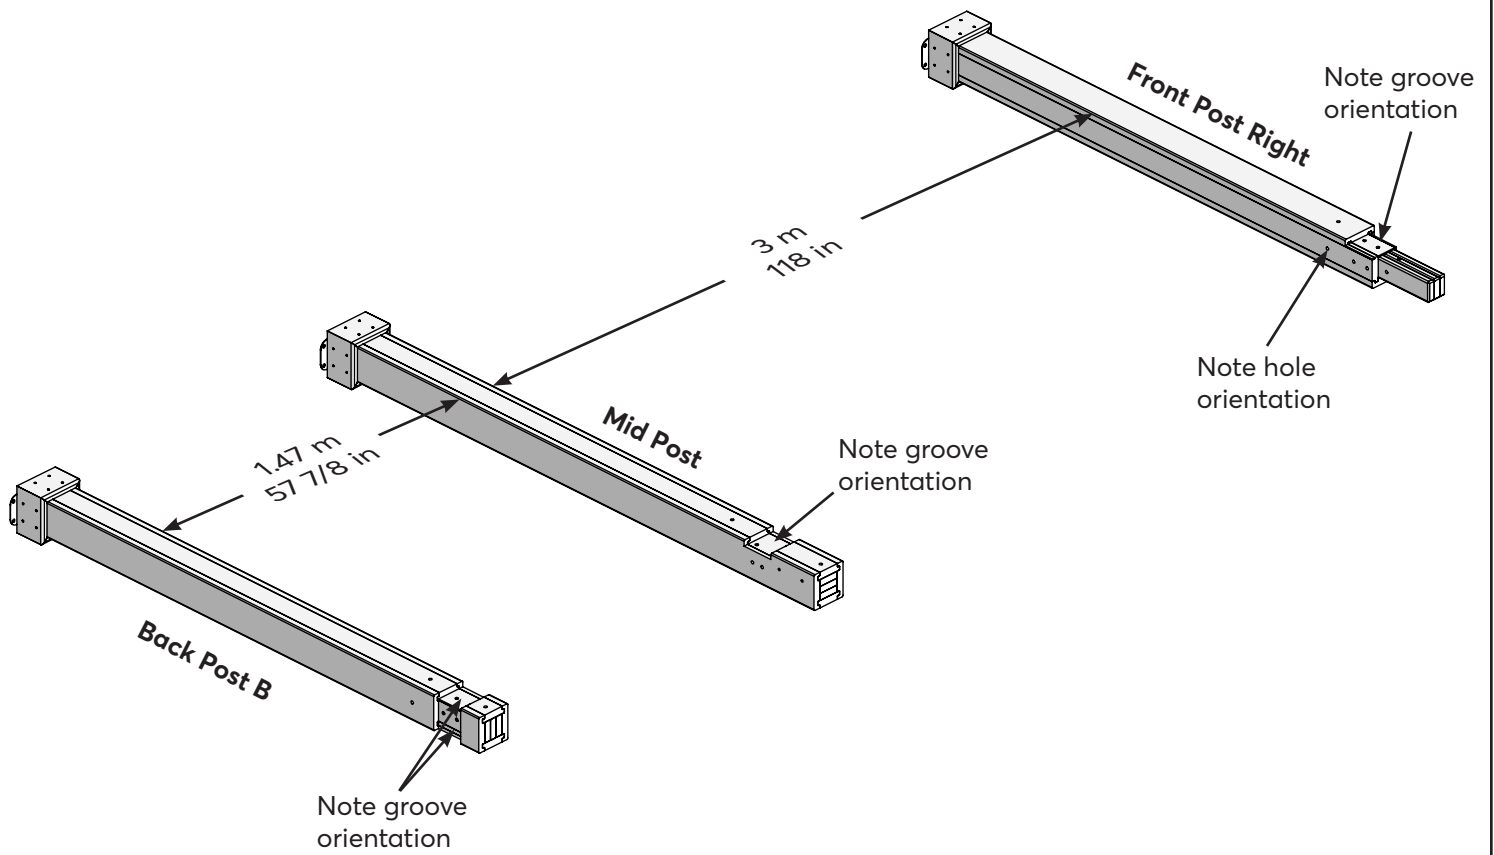


Hammer TN3 into the bottom holes.

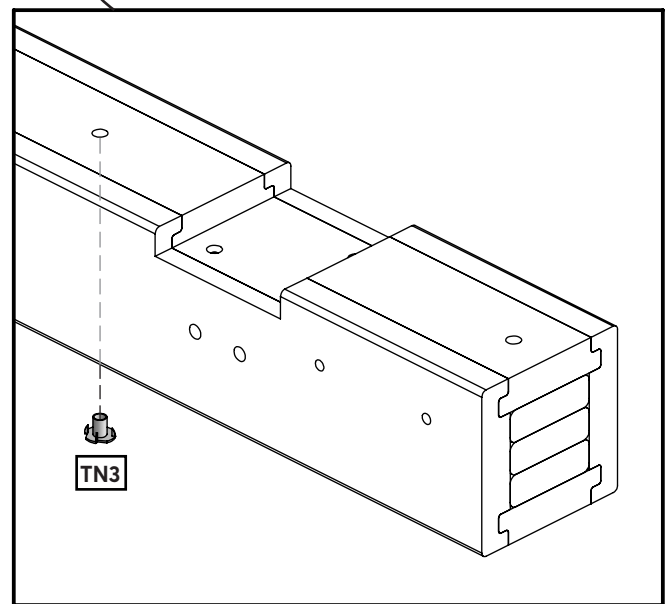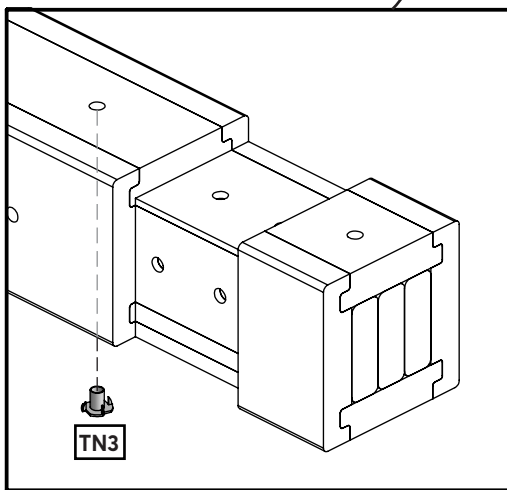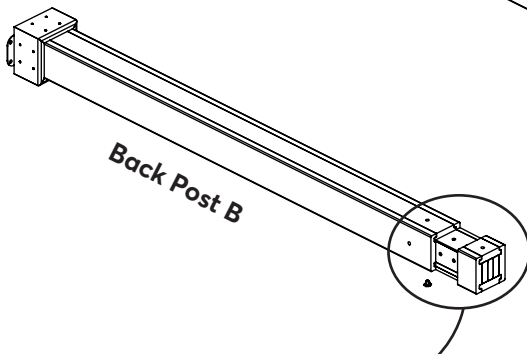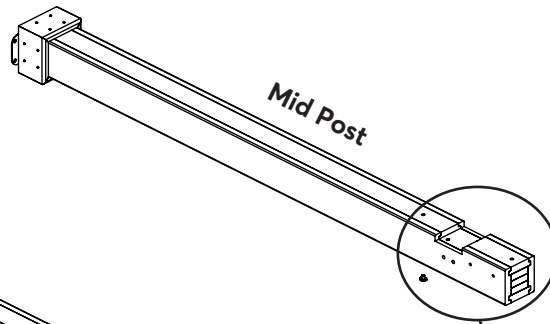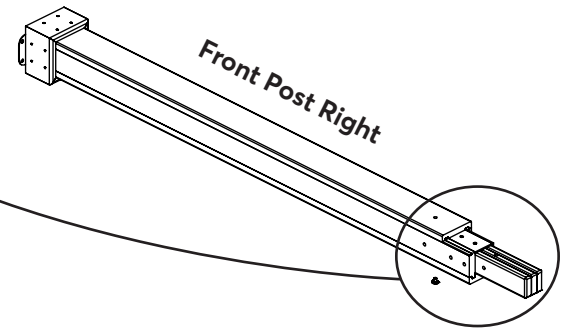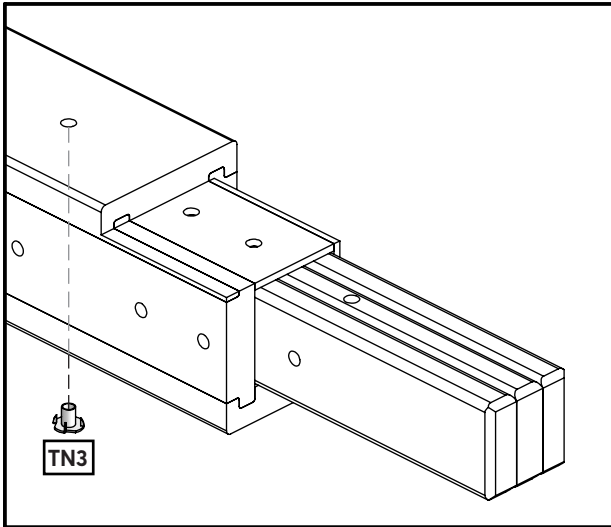

Hardware

3 x **TN3**

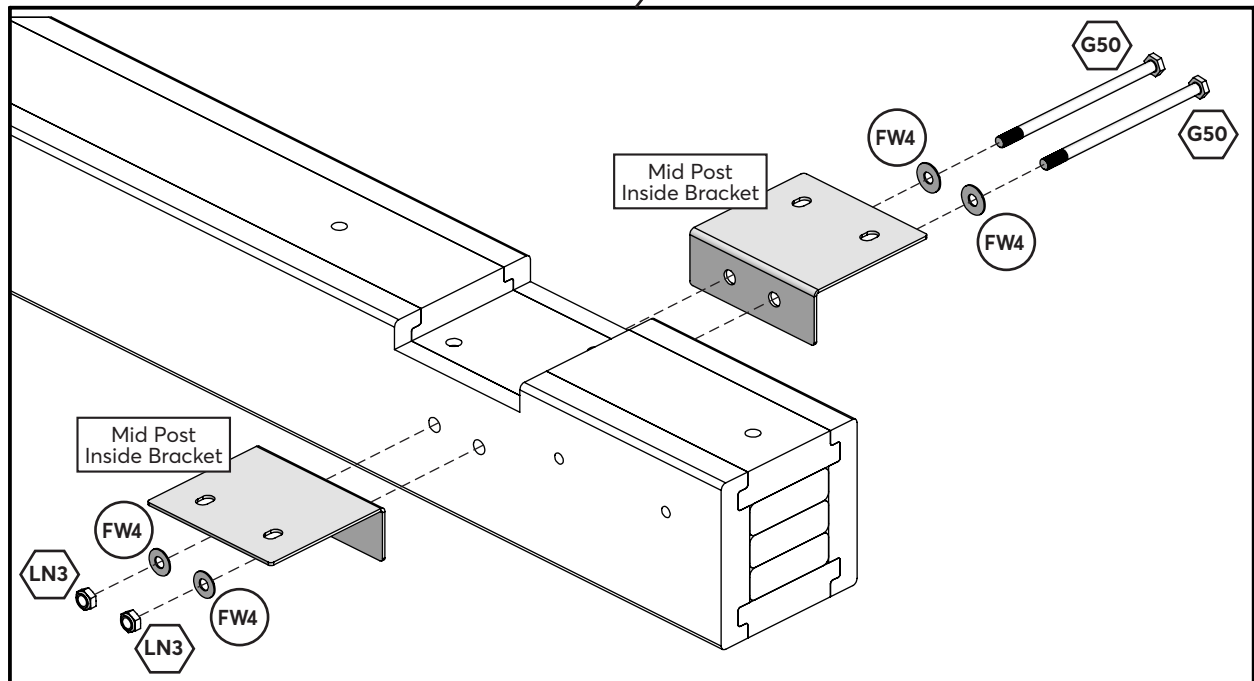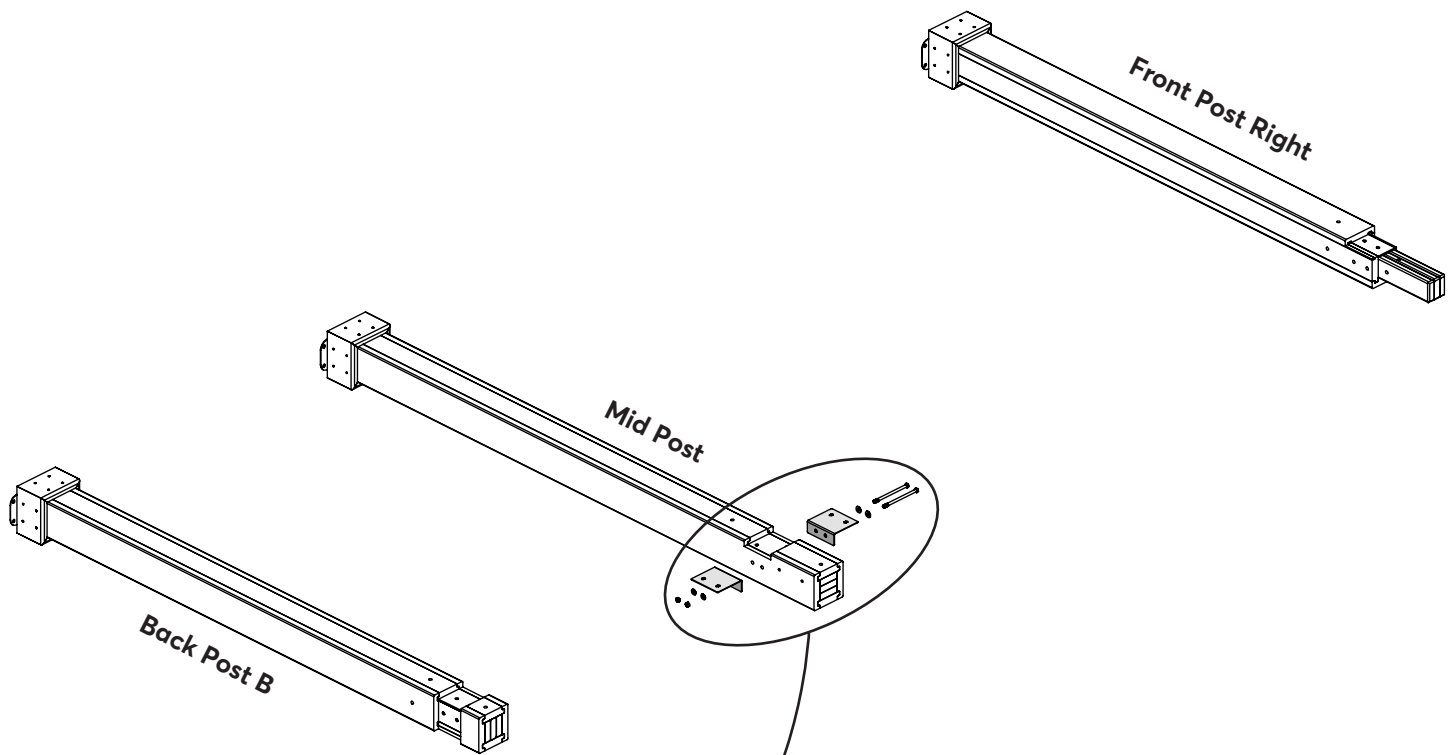



Hardware

2 x G50 (FW4 x 2, LN3)


Components

2 x Mid Post Inside Bracket


Align holes

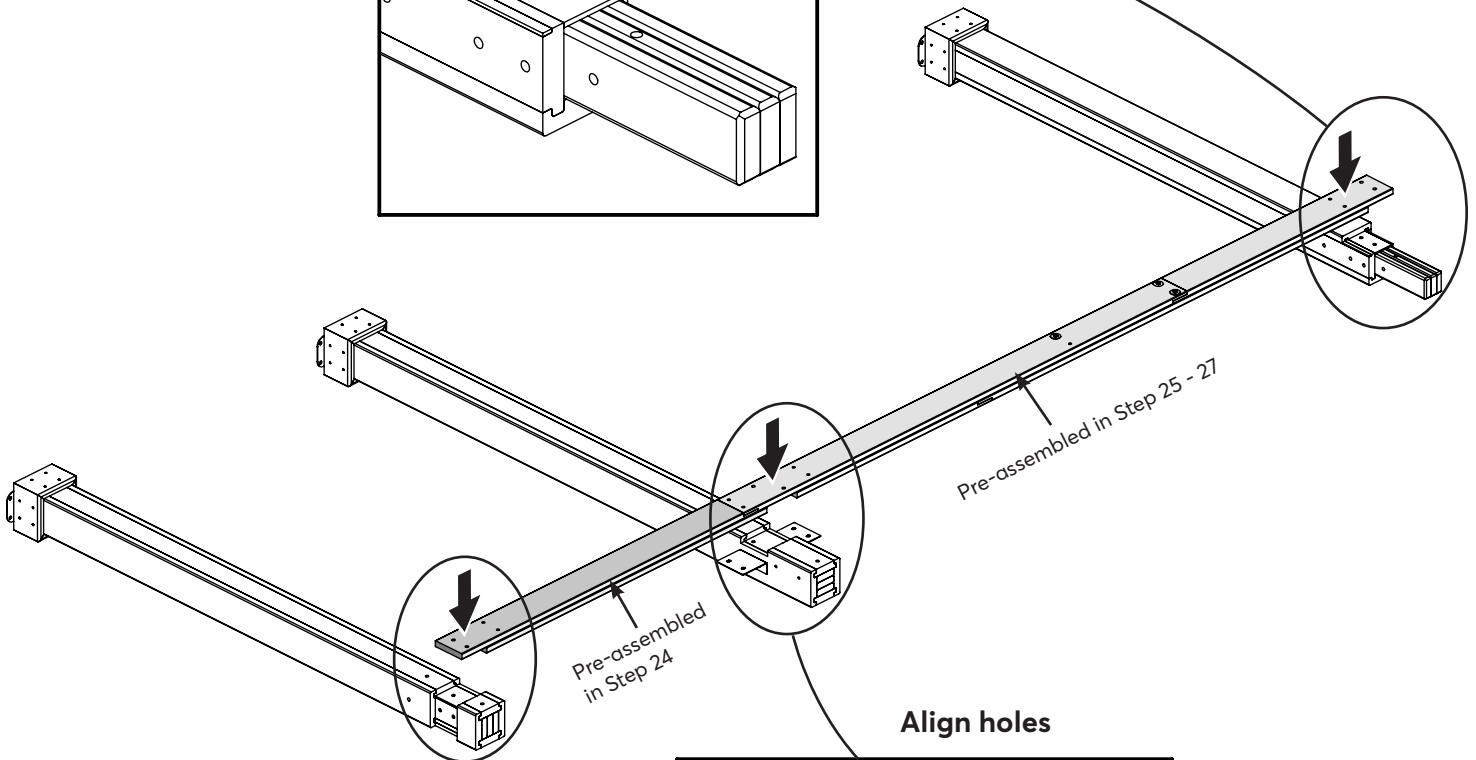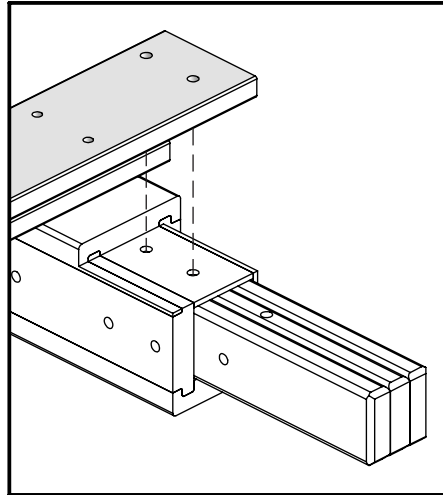

Align holes

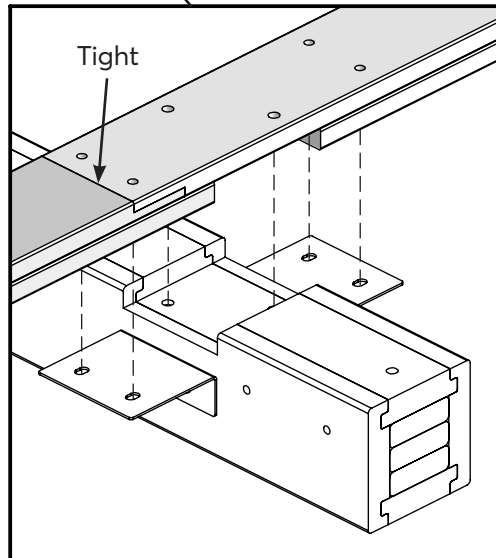


Align holes

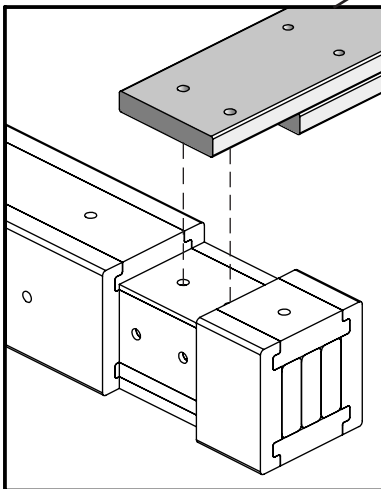

32

Do not tighten bolts until Step 36.

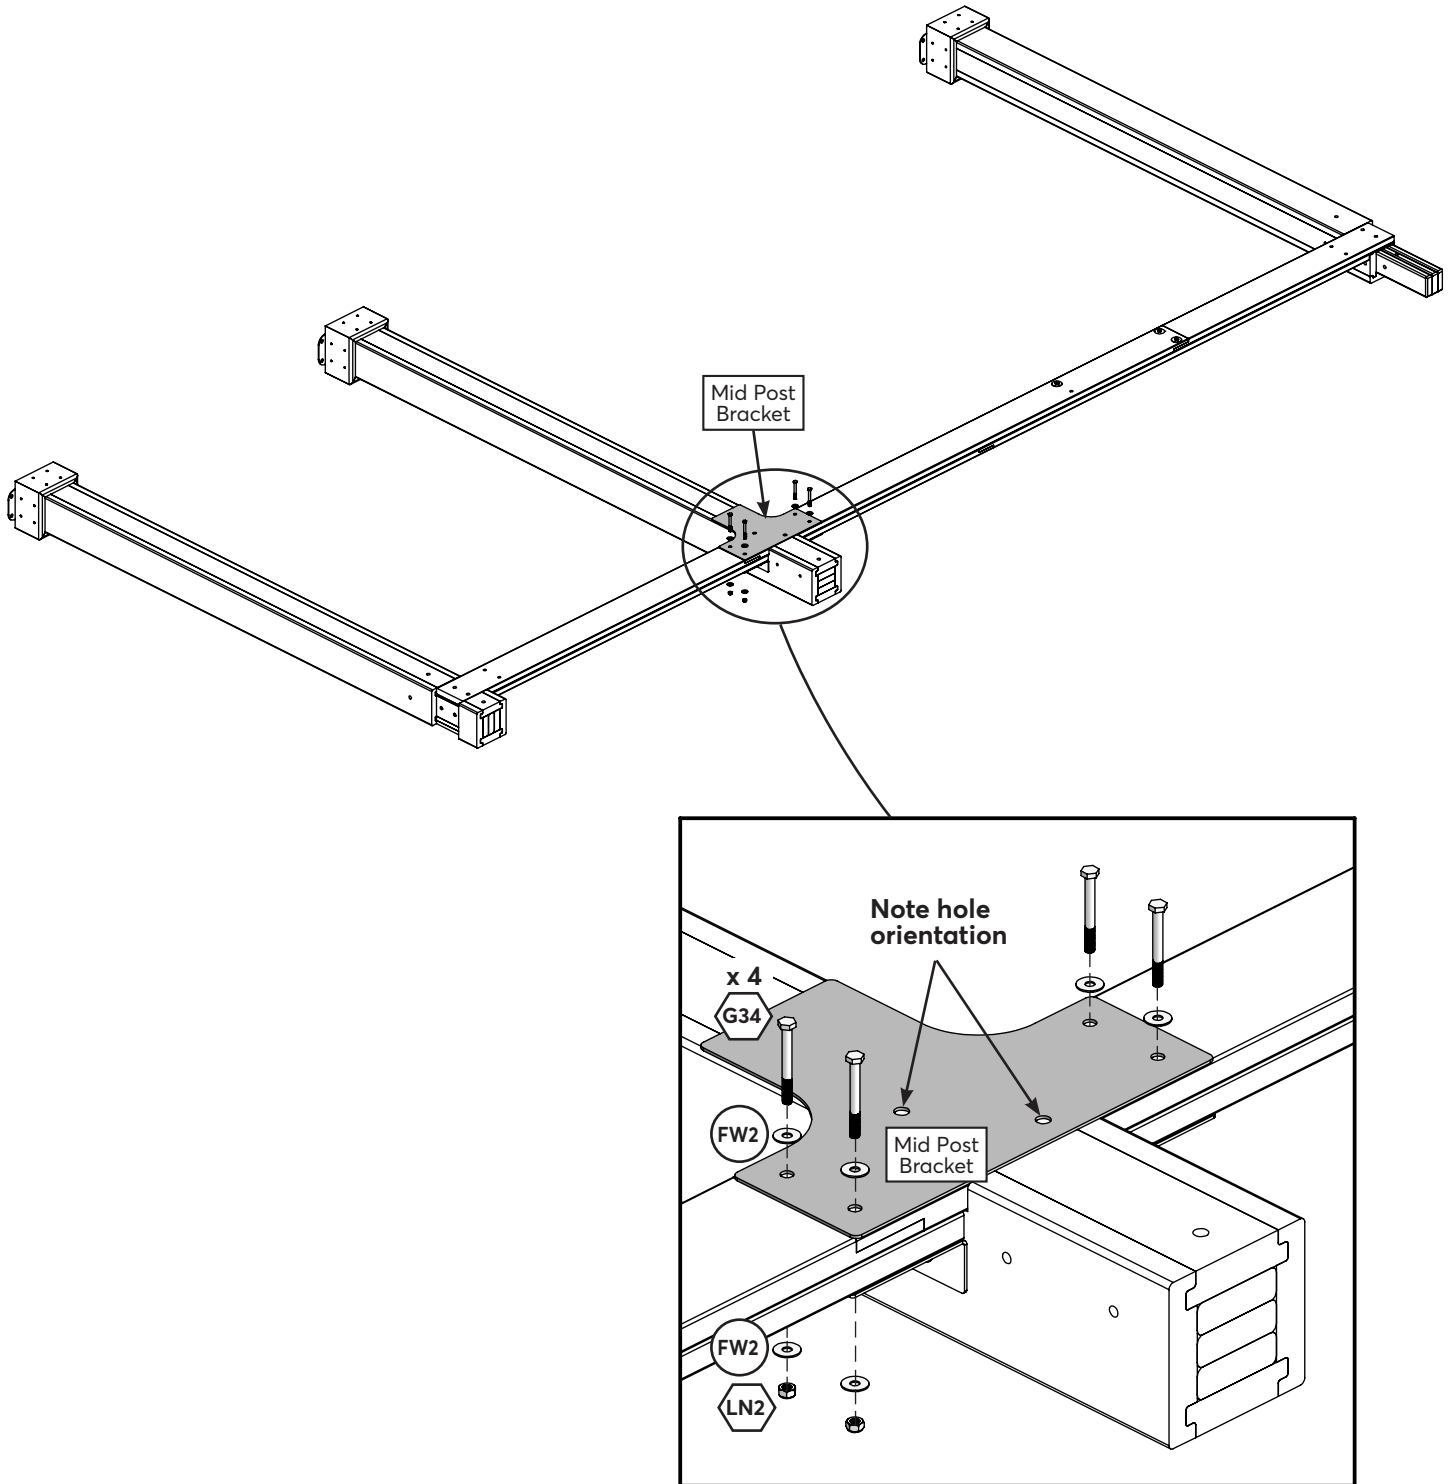

Hardware



4 x G34 (FW2 x 2, LN2)

Components

1 x Mid Post Bracket

33

Do not tighten bolts until Step 36.


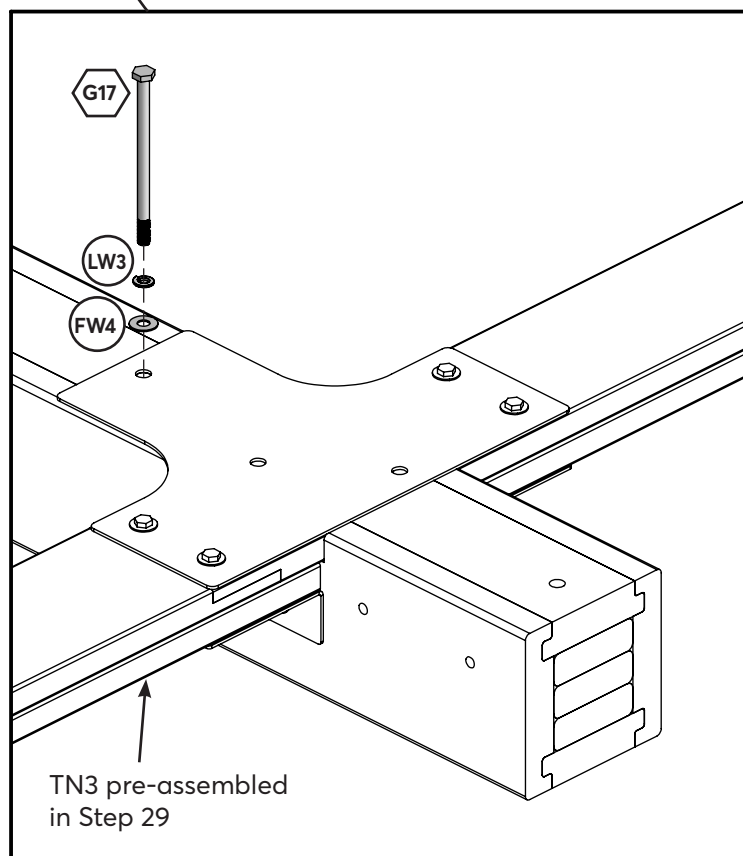
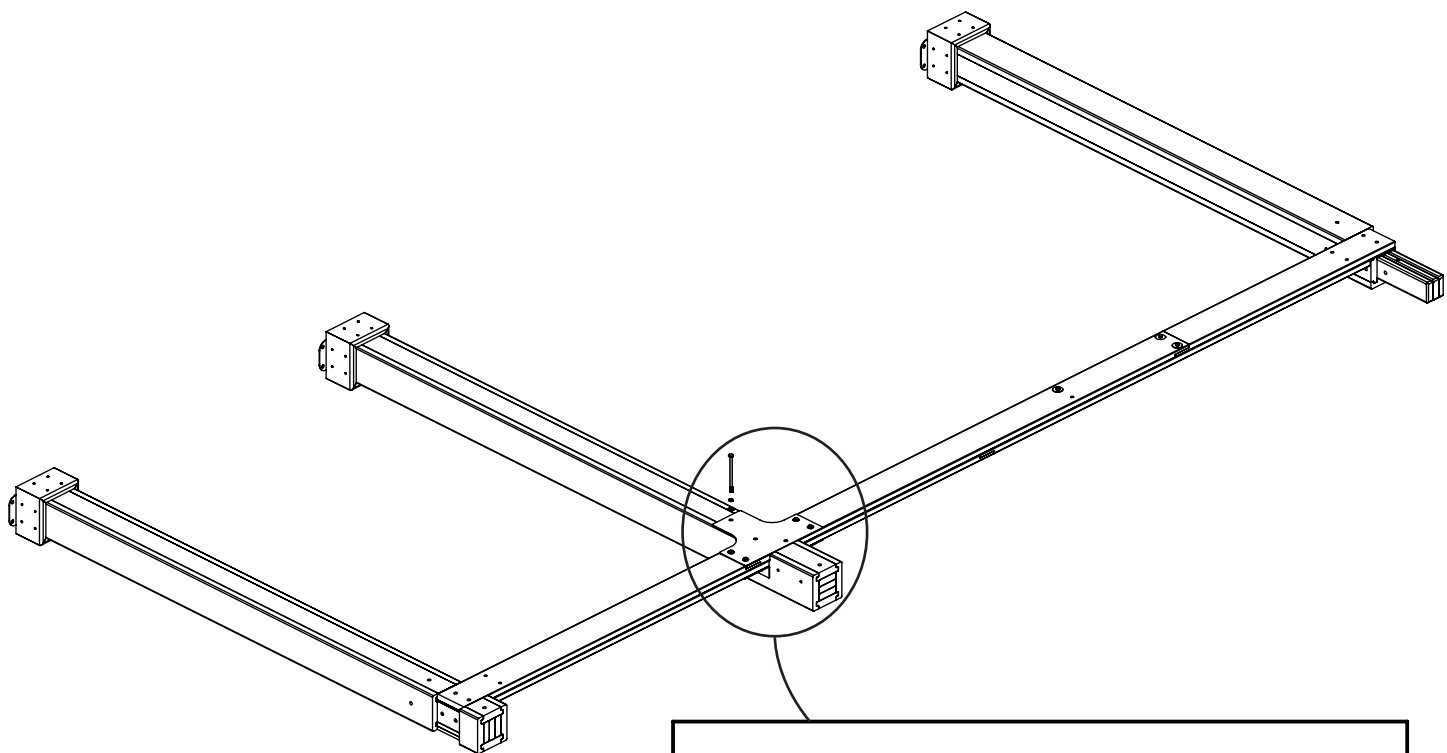


Hardware

1 x  (LW3, FW4)

34

Do not tighten bolts until Step 36.

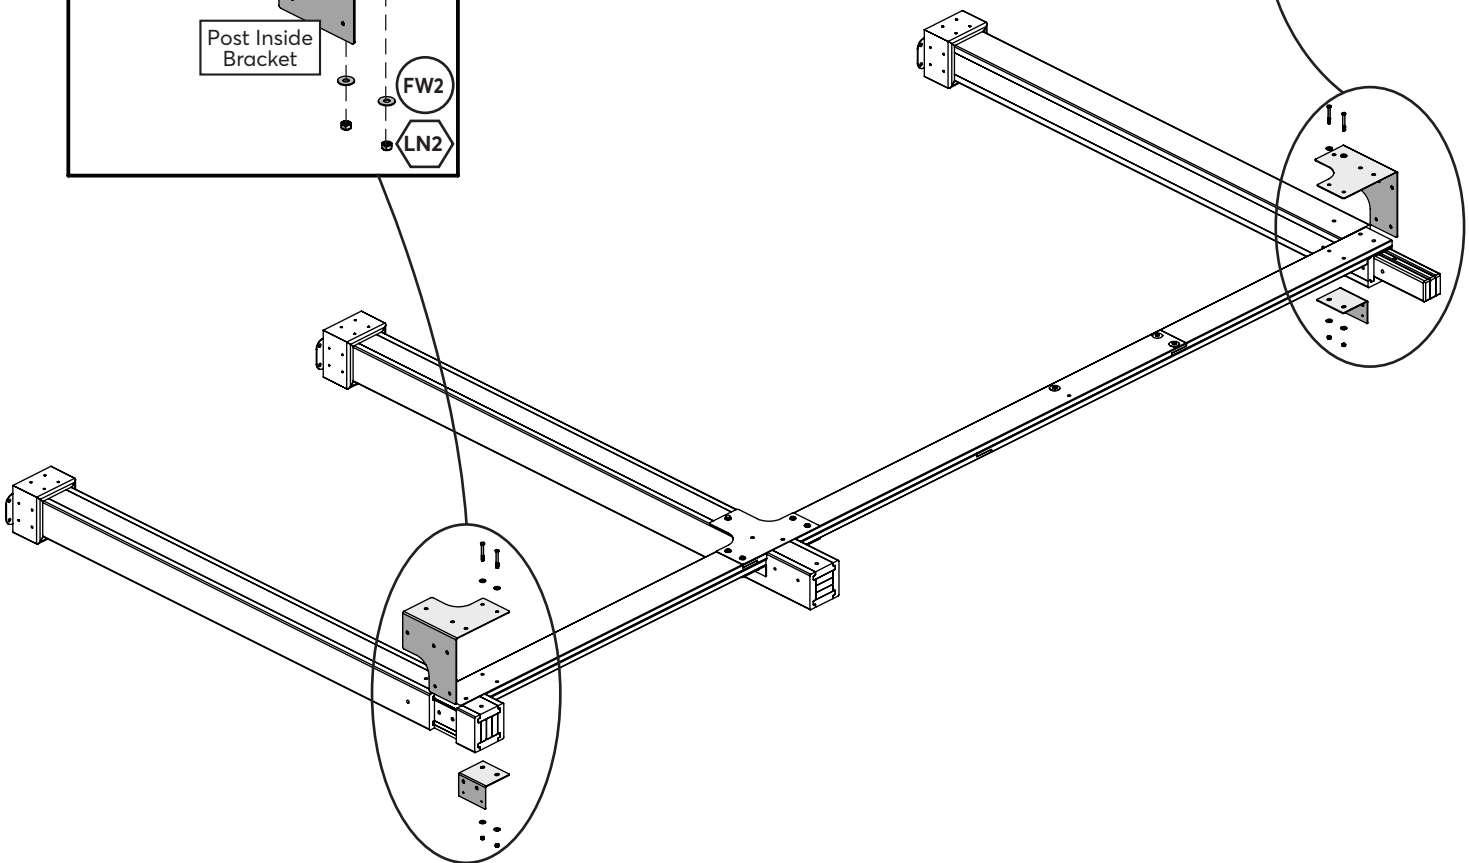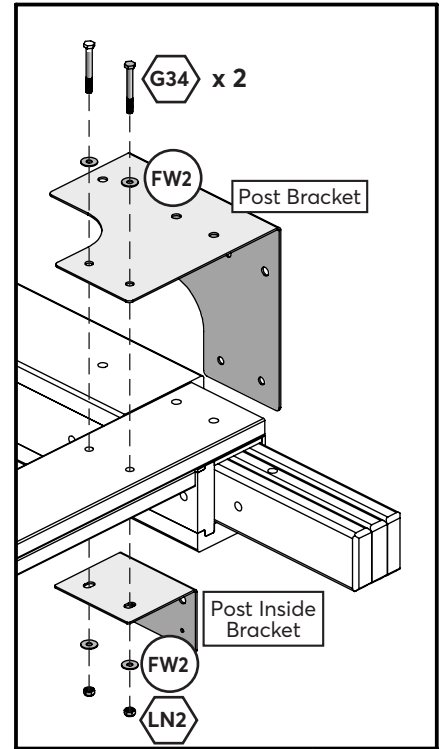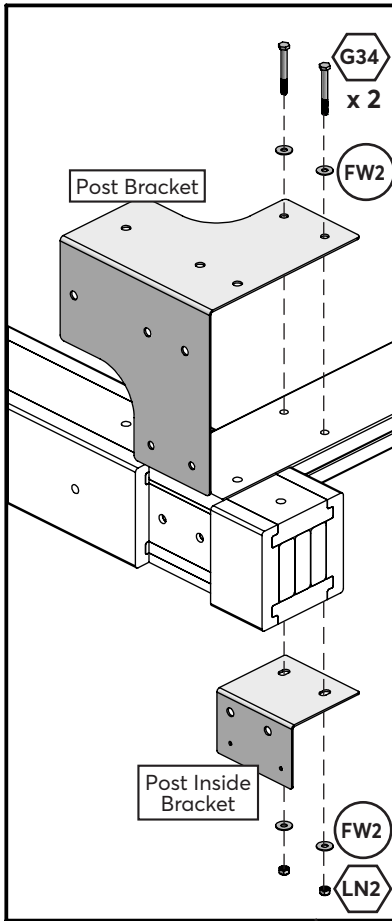




Hardware

4 x G34 (FW2 x 2, LN2)

Components

2 x Post Bracket
2 x Post Inside Bracket

Do not tighten bolts until Step 36.

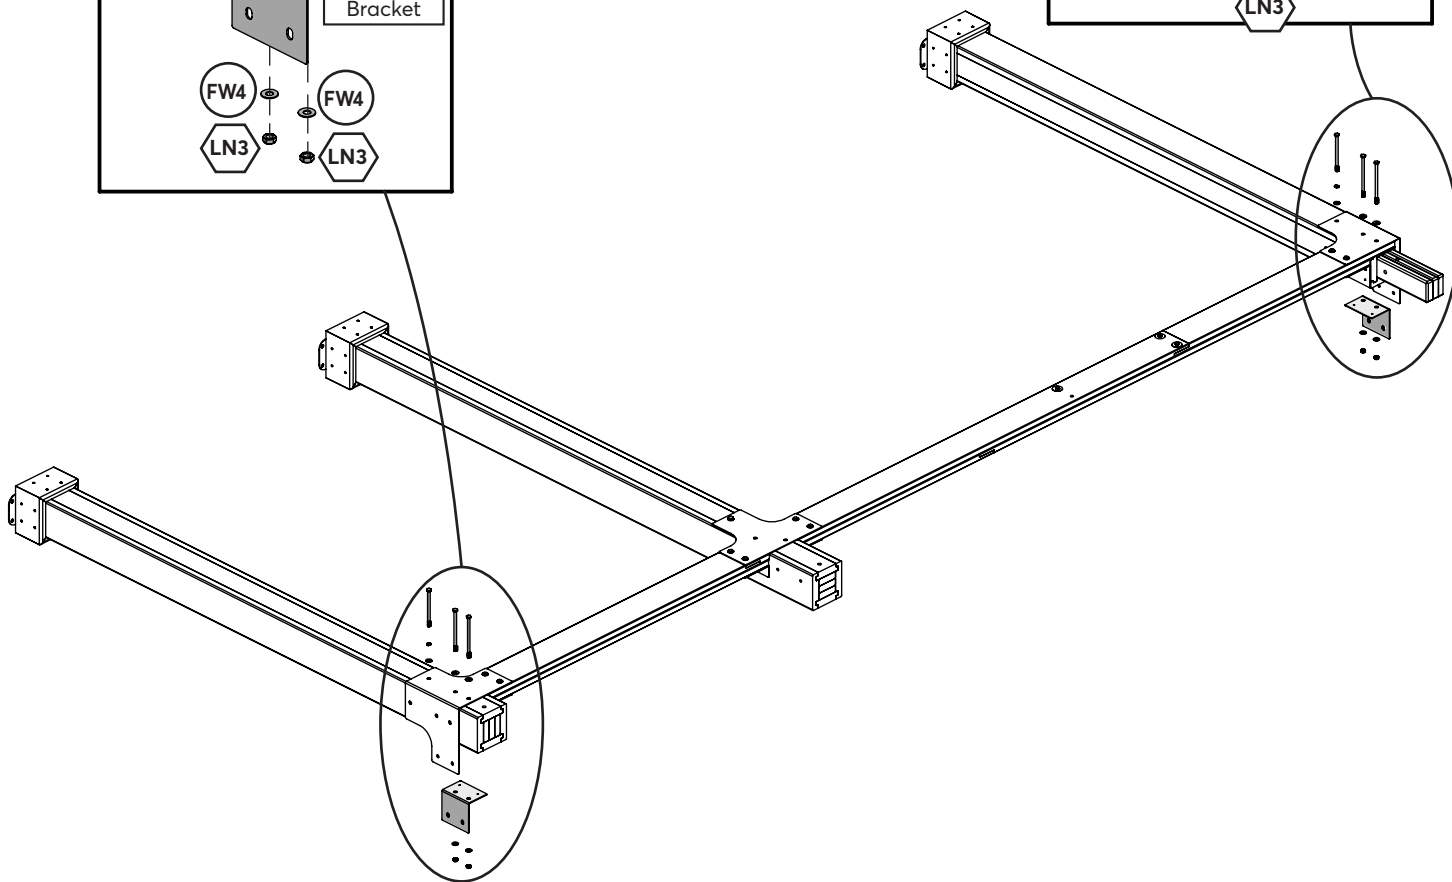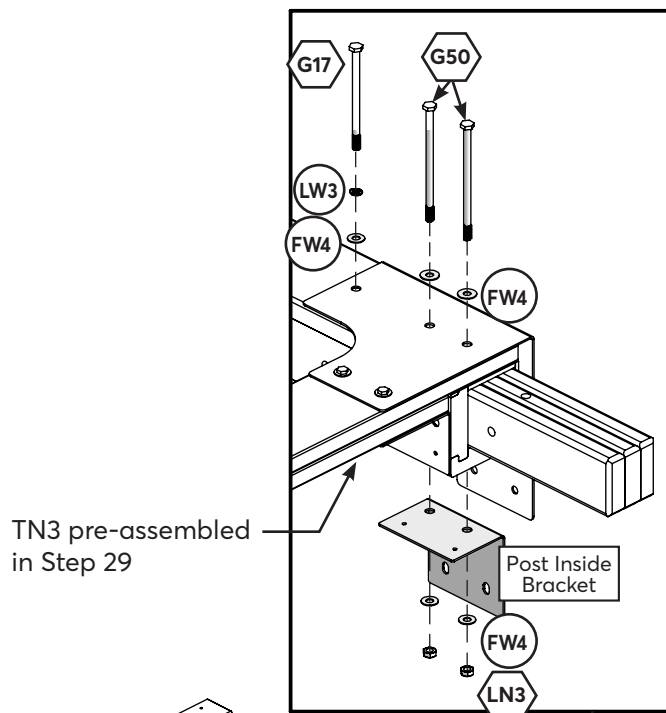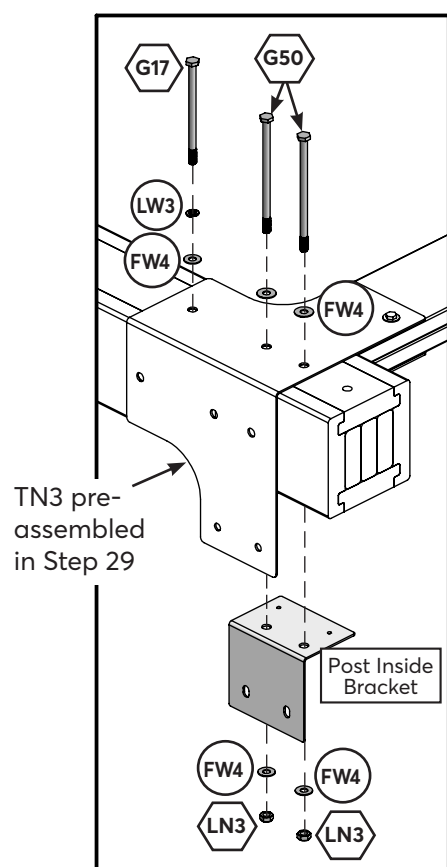

Hardware

4 x G50 (FW4 x 2, LN3)

2 x G17 (LW3, FW4)



Components

2 x Post Inside Bracket



36

The distance between the inside of posts should be 118 in (3m) and 57 7/8 in (1.47 m).

Tighten all bolts.

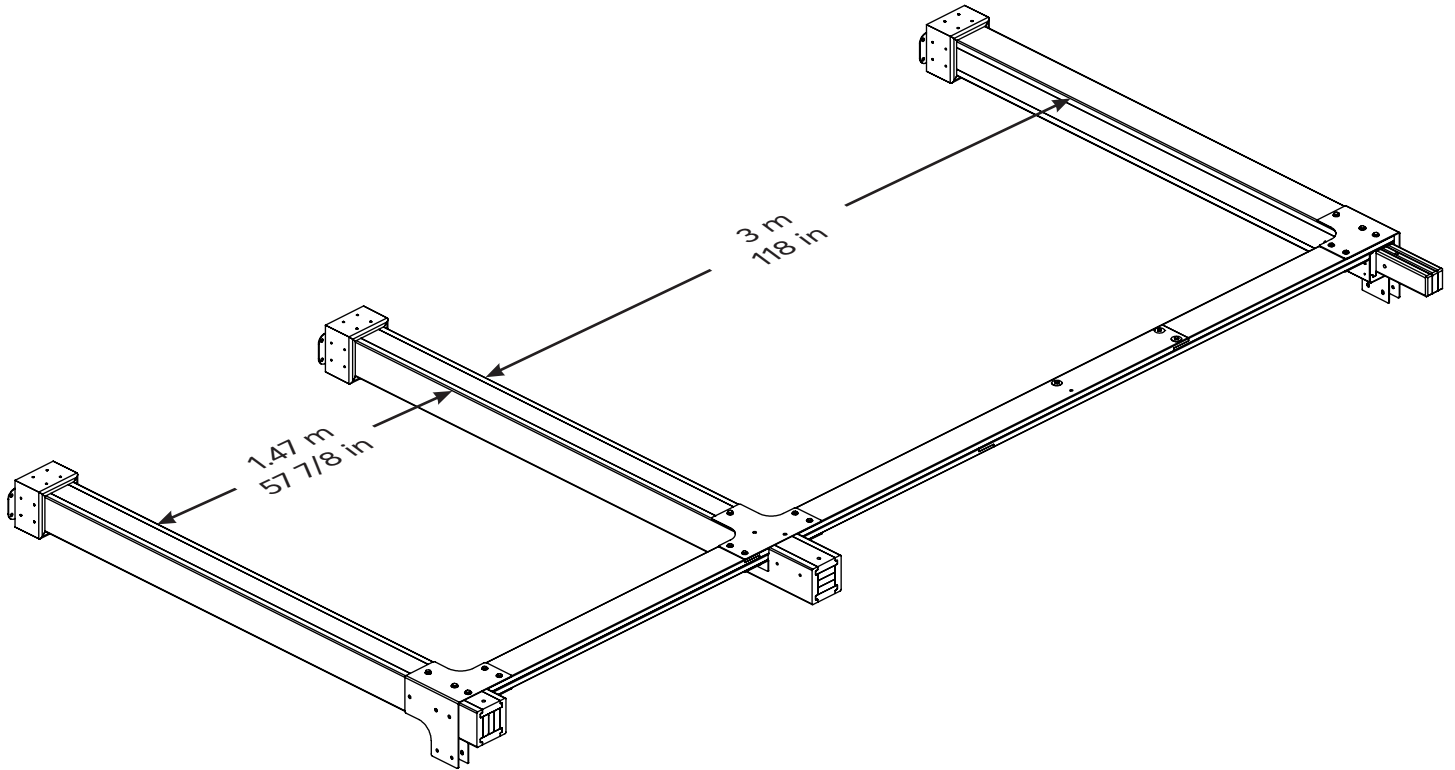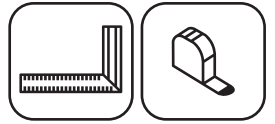


37 Frame Assembly

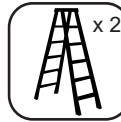


Note: When lifting up Side Frame Assembly, one person per post.

Move your Side Beam Assemblies to the final location.
Make sure the ground is flat and level before continuing assembly.



Loosen corner brackets for play for Front Beam Assembly.
Do not tighten bolts until Step 40.

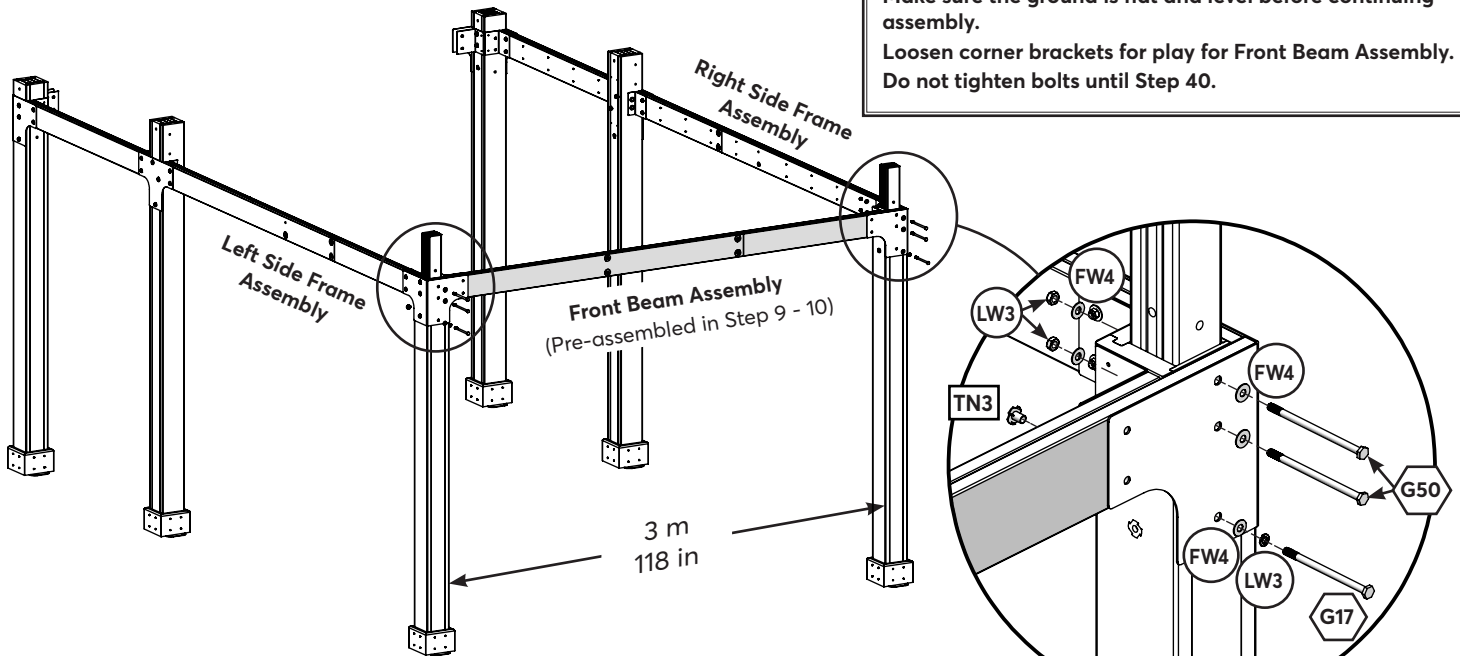

Top View

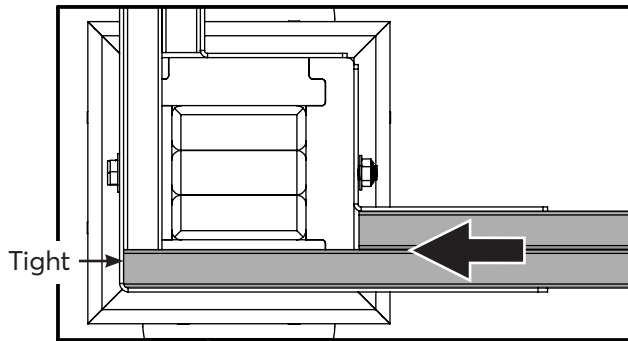

Top View

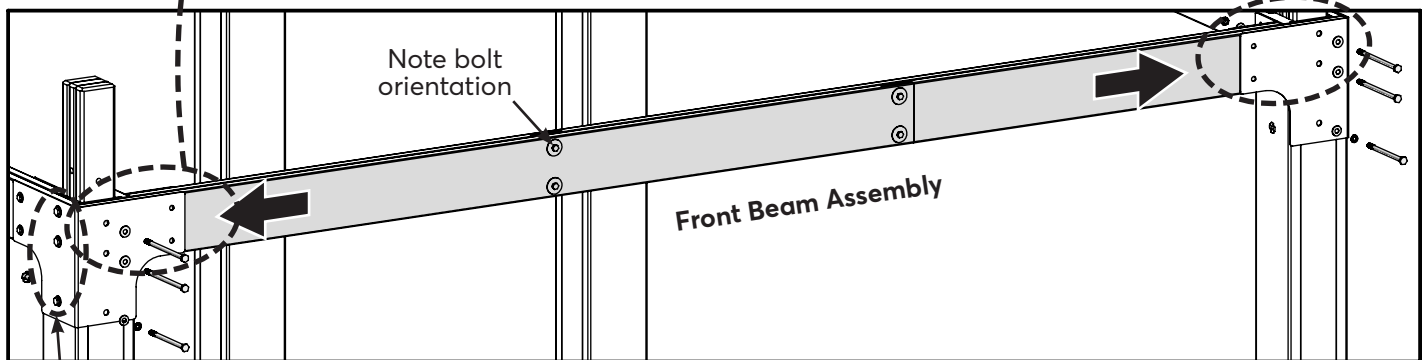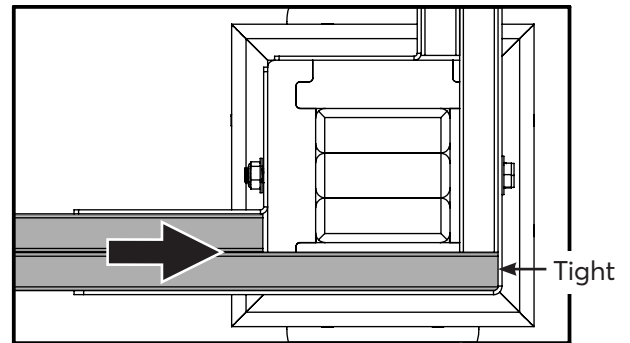


Loosen all bolts

Hardware


4 x (FW4 x 2, LN3)

2 x (LW3, FW4, TN3)



Loosen corner brackets for play
for Back Beam Assembly.

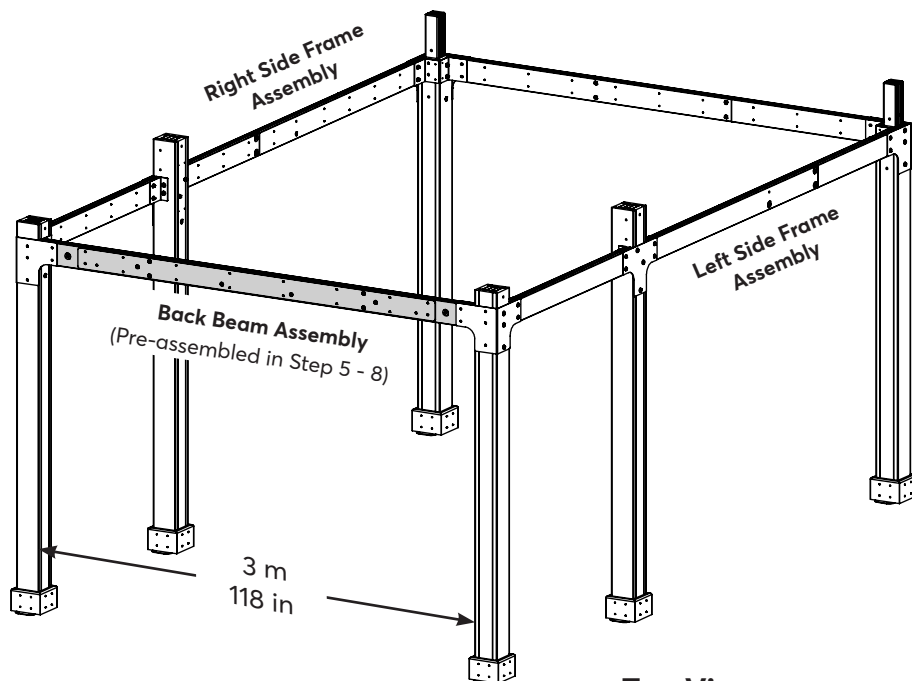

Top View


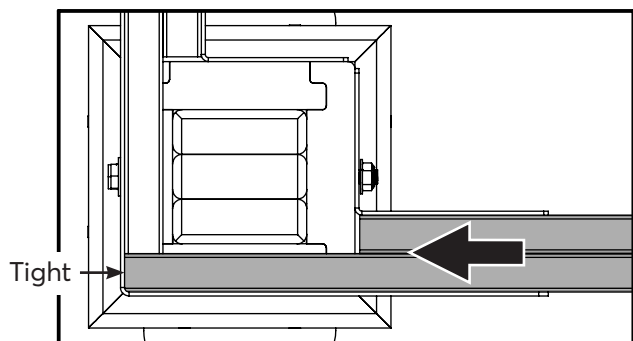


Top View

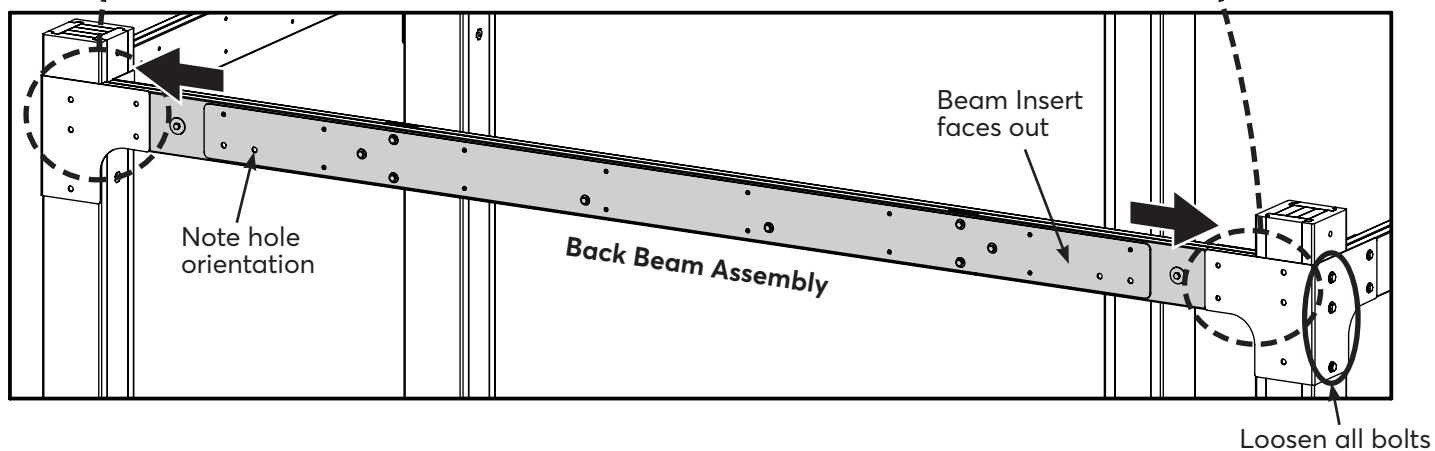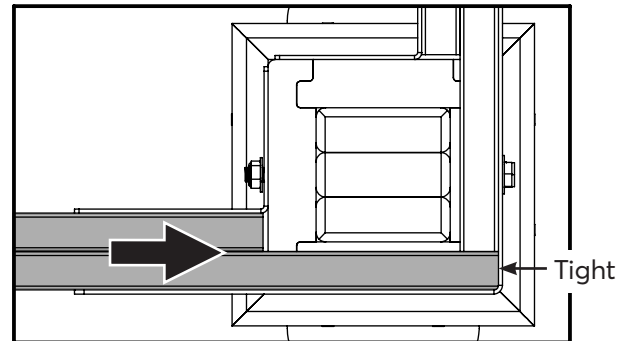





Outside View

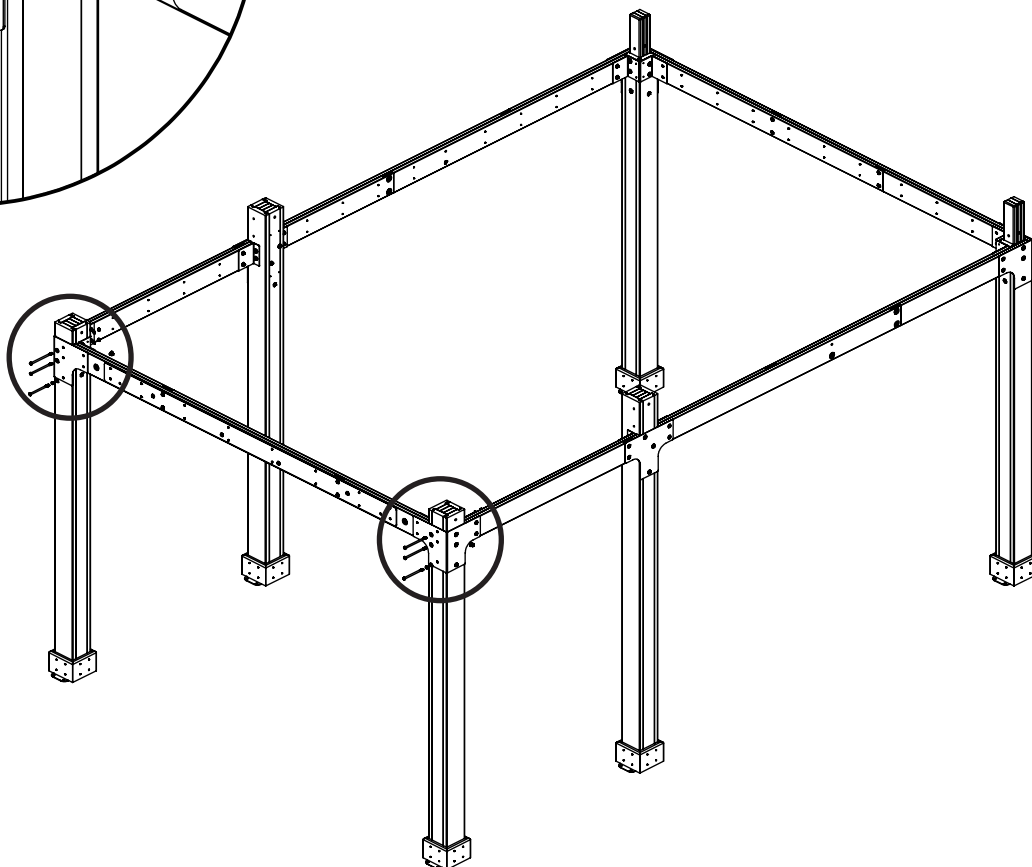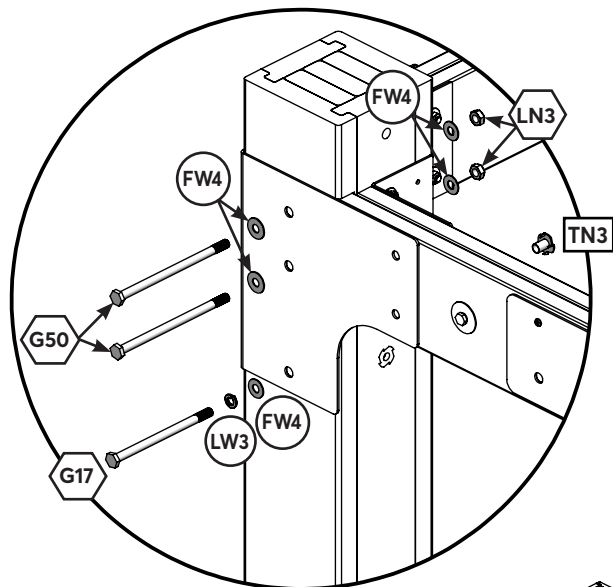**Hardware**4 x  (FW4 x 2, LN3)2 x  (LW3, FW4, TN3)



Tighten all bolts.

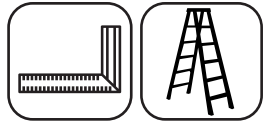

Inside View


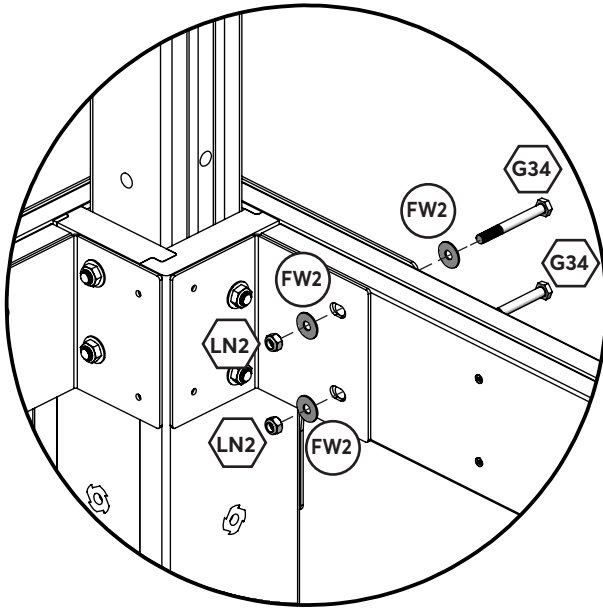


Outside View

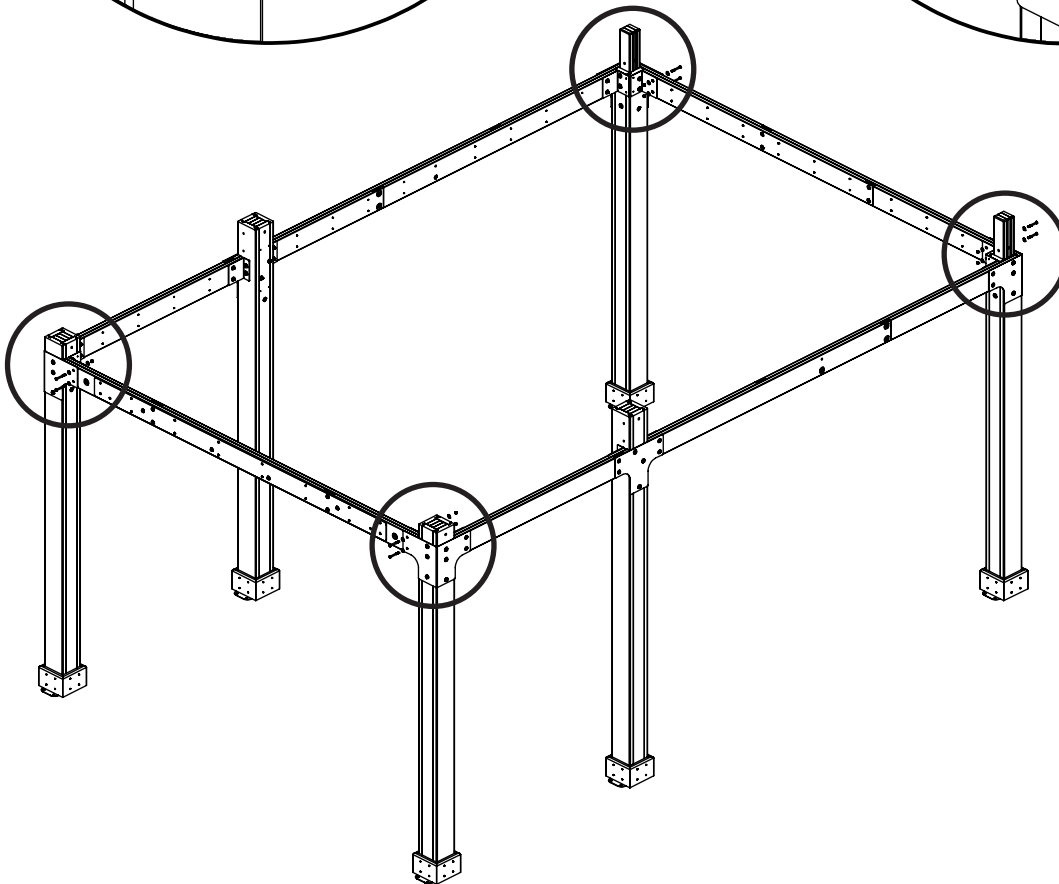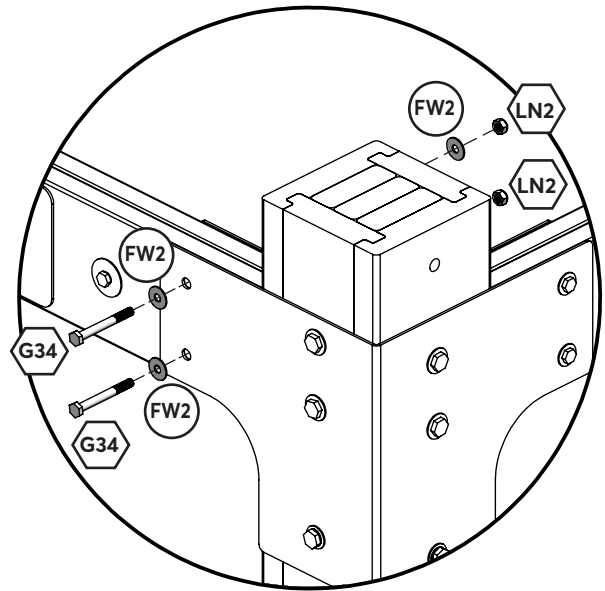


Hardware

8 x  (FW2 x 2, LN2)

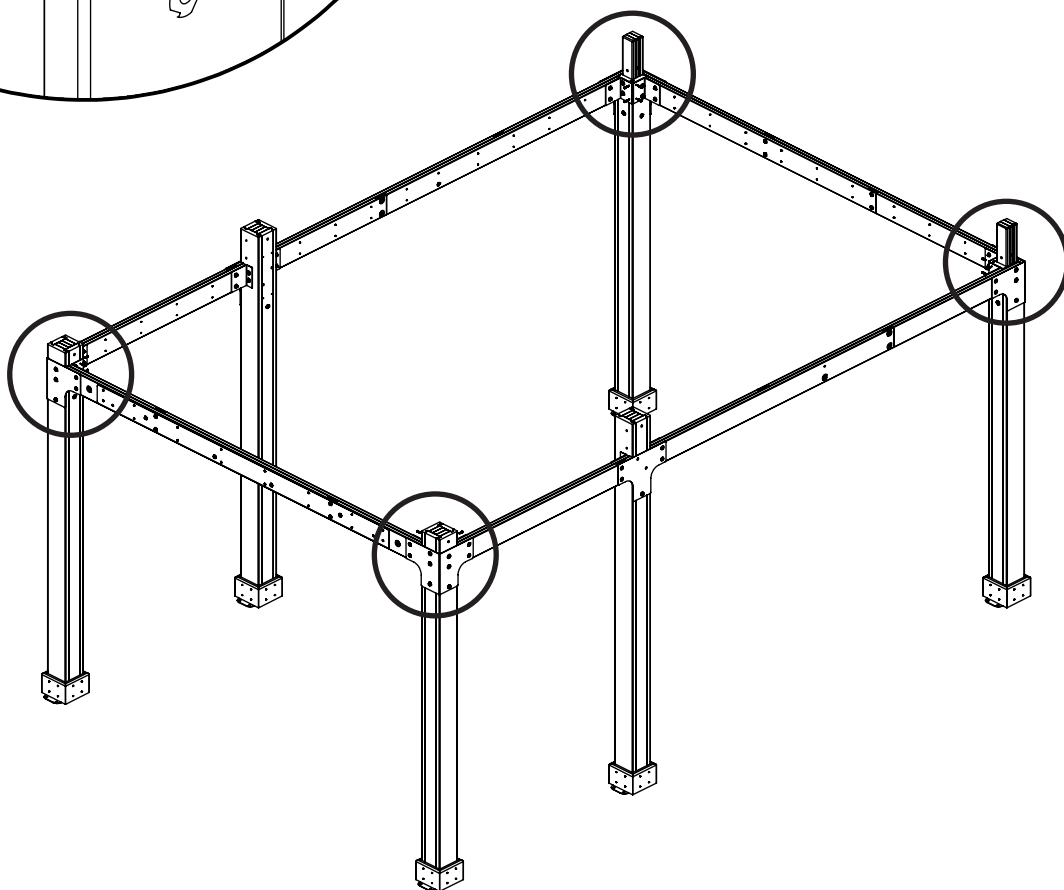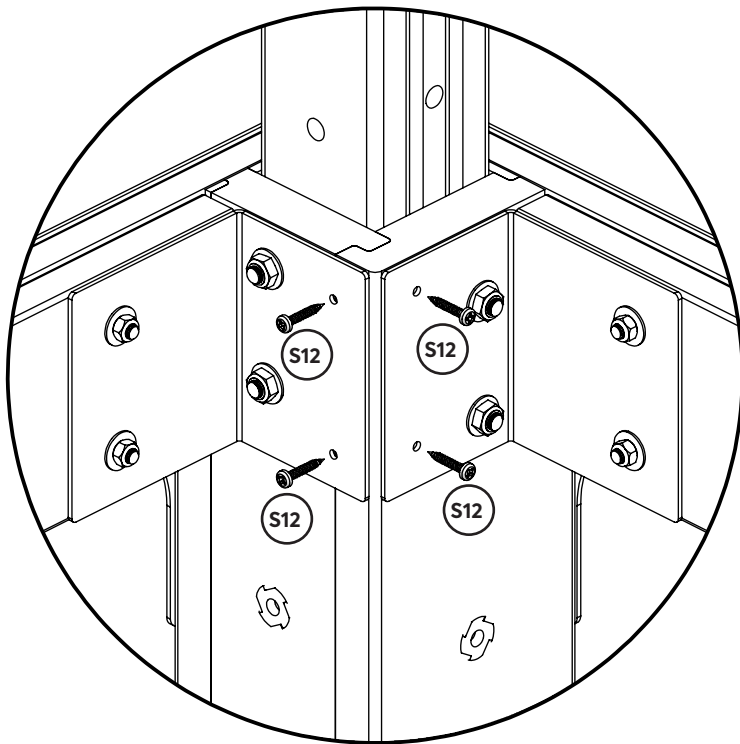**Hardware**


16 x S12

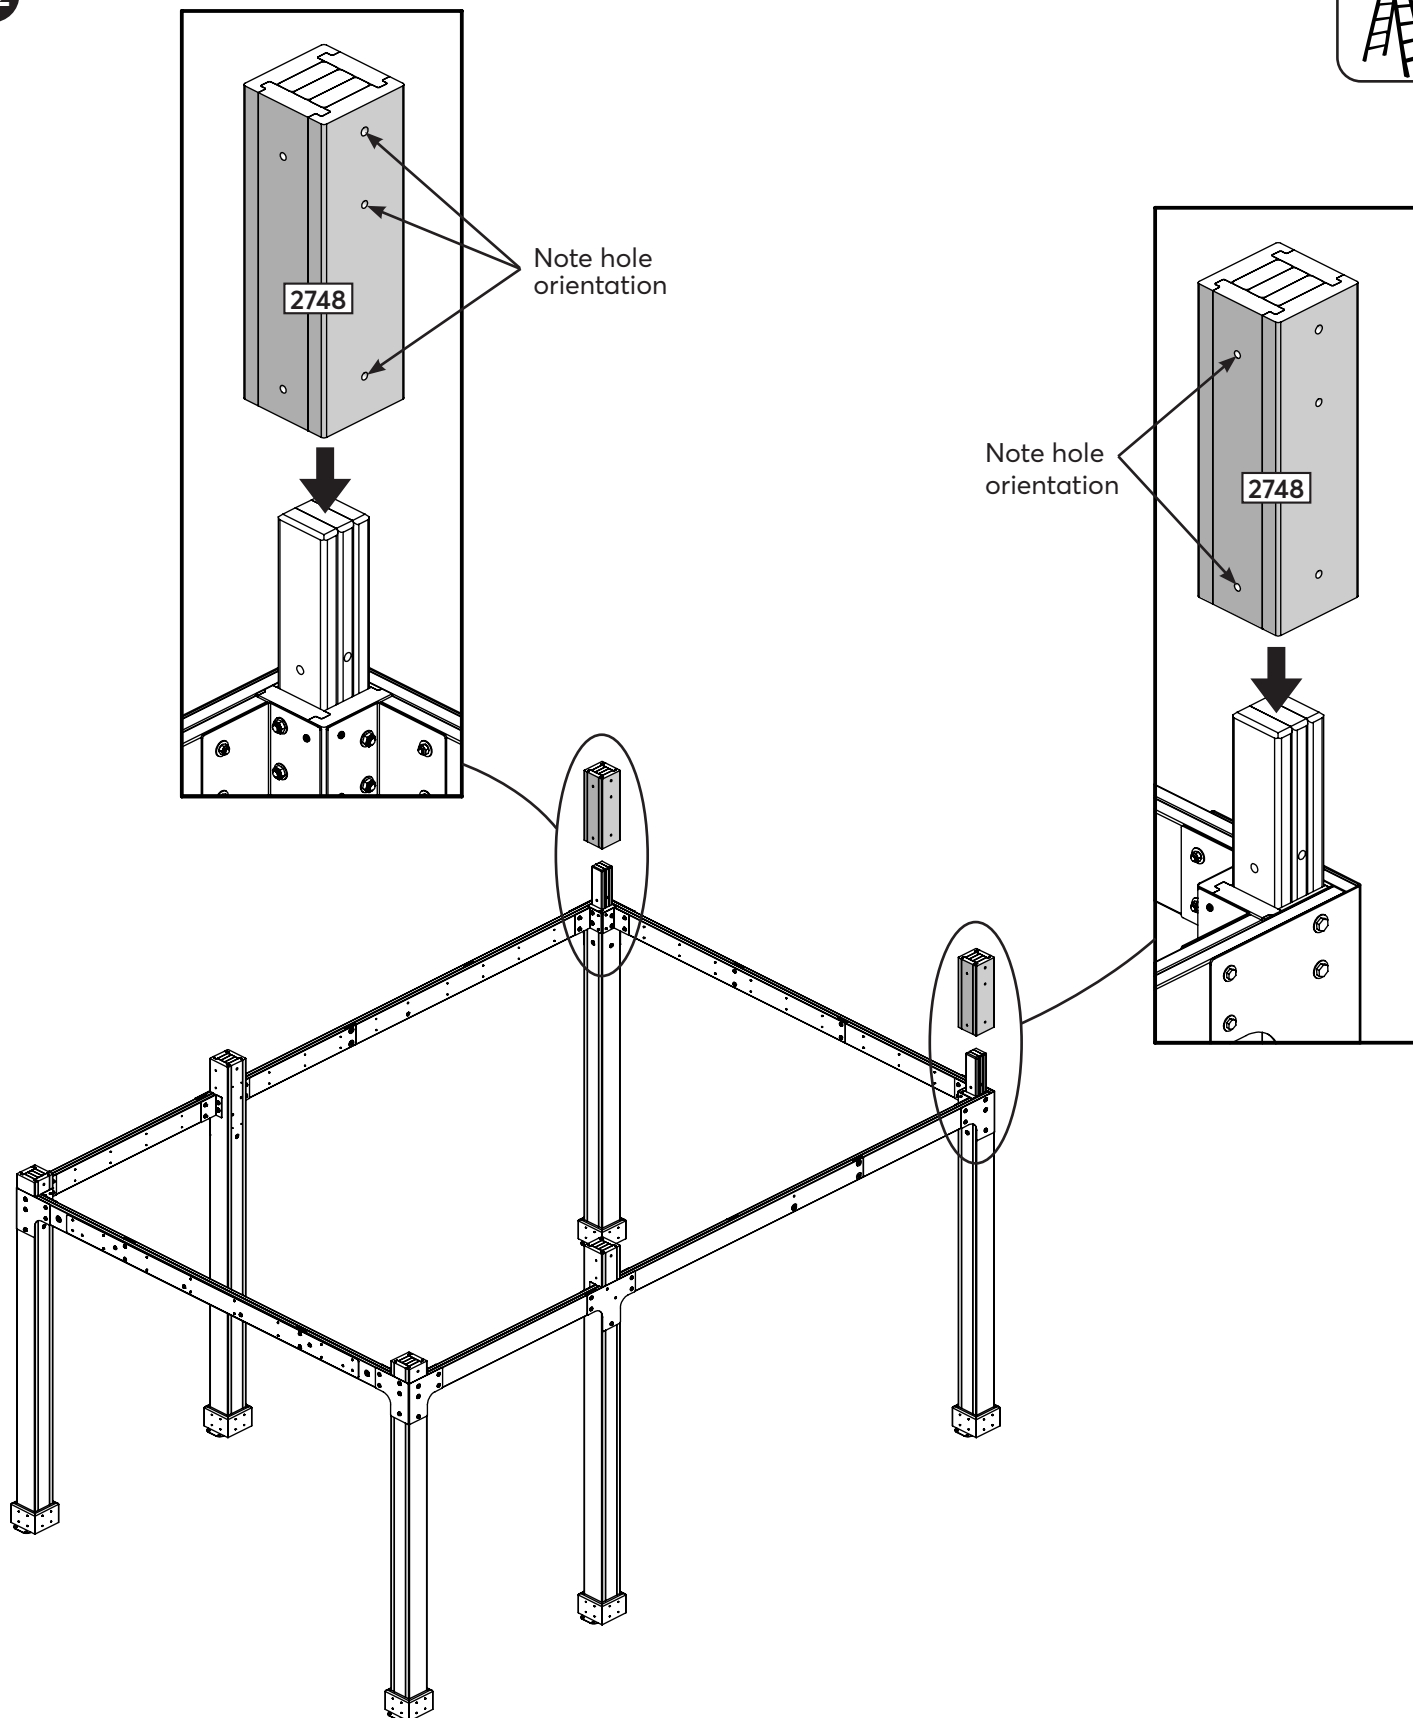**Wood Parts**



2 x 2748

43

Pre-drill all pilot holes using a 1/8" drill bit before installing Lag Screws (LS5).

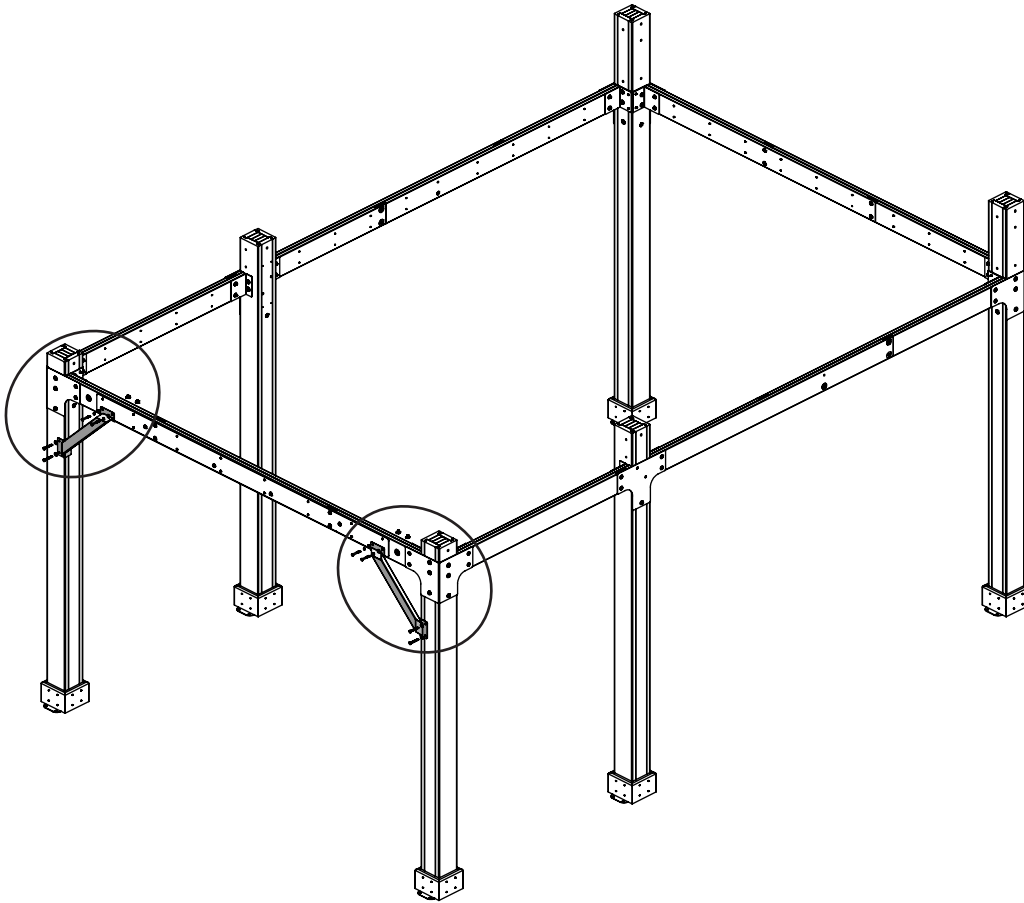

Underneath View

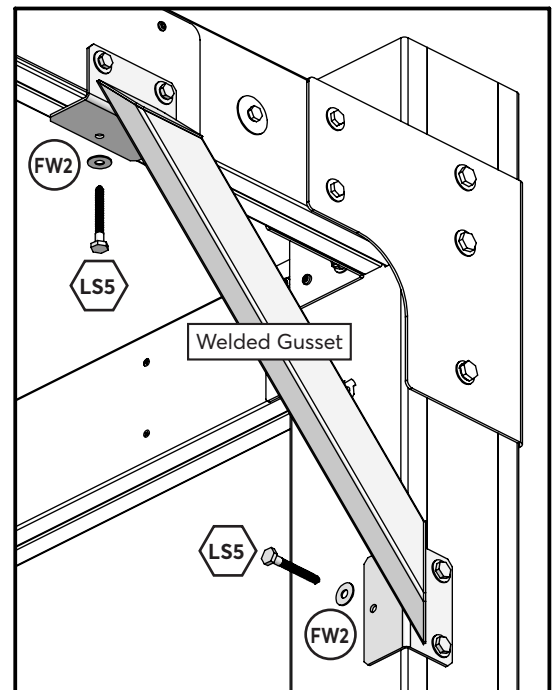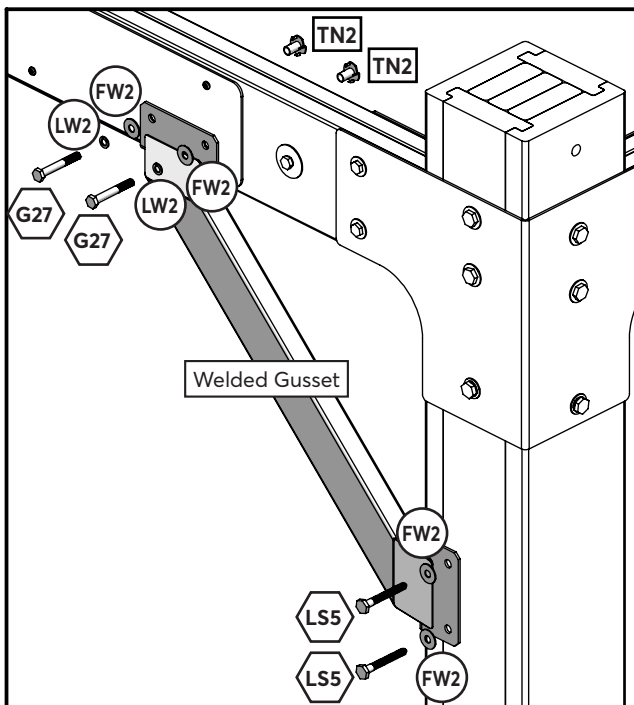

Hardware

- 8 x (FW2)
- 4 x (LW2, FW2, TN2)


Components

- 2 x Welded Gusset


Check Frame Dimensions



The diagonal distance between the inside of two posts should be 18 ft 1 in (5.51 m) (measuring from posts not Post Mounts)

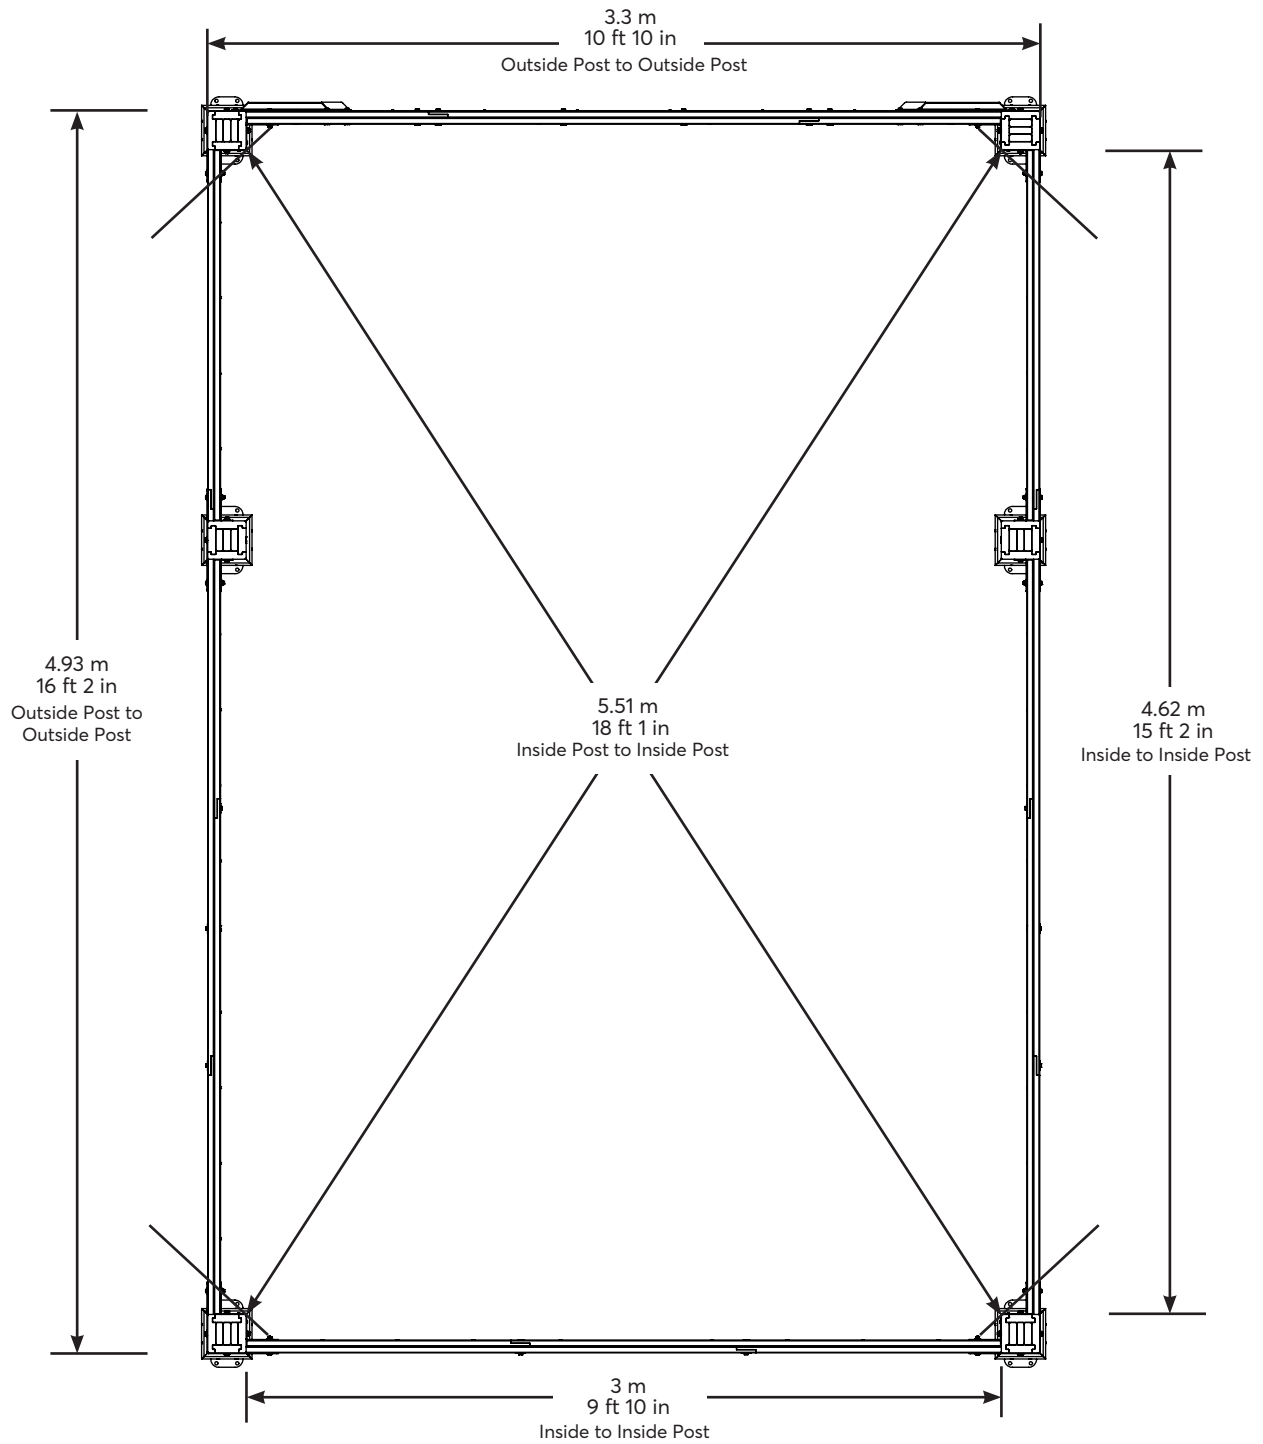

45 Truss Assembly



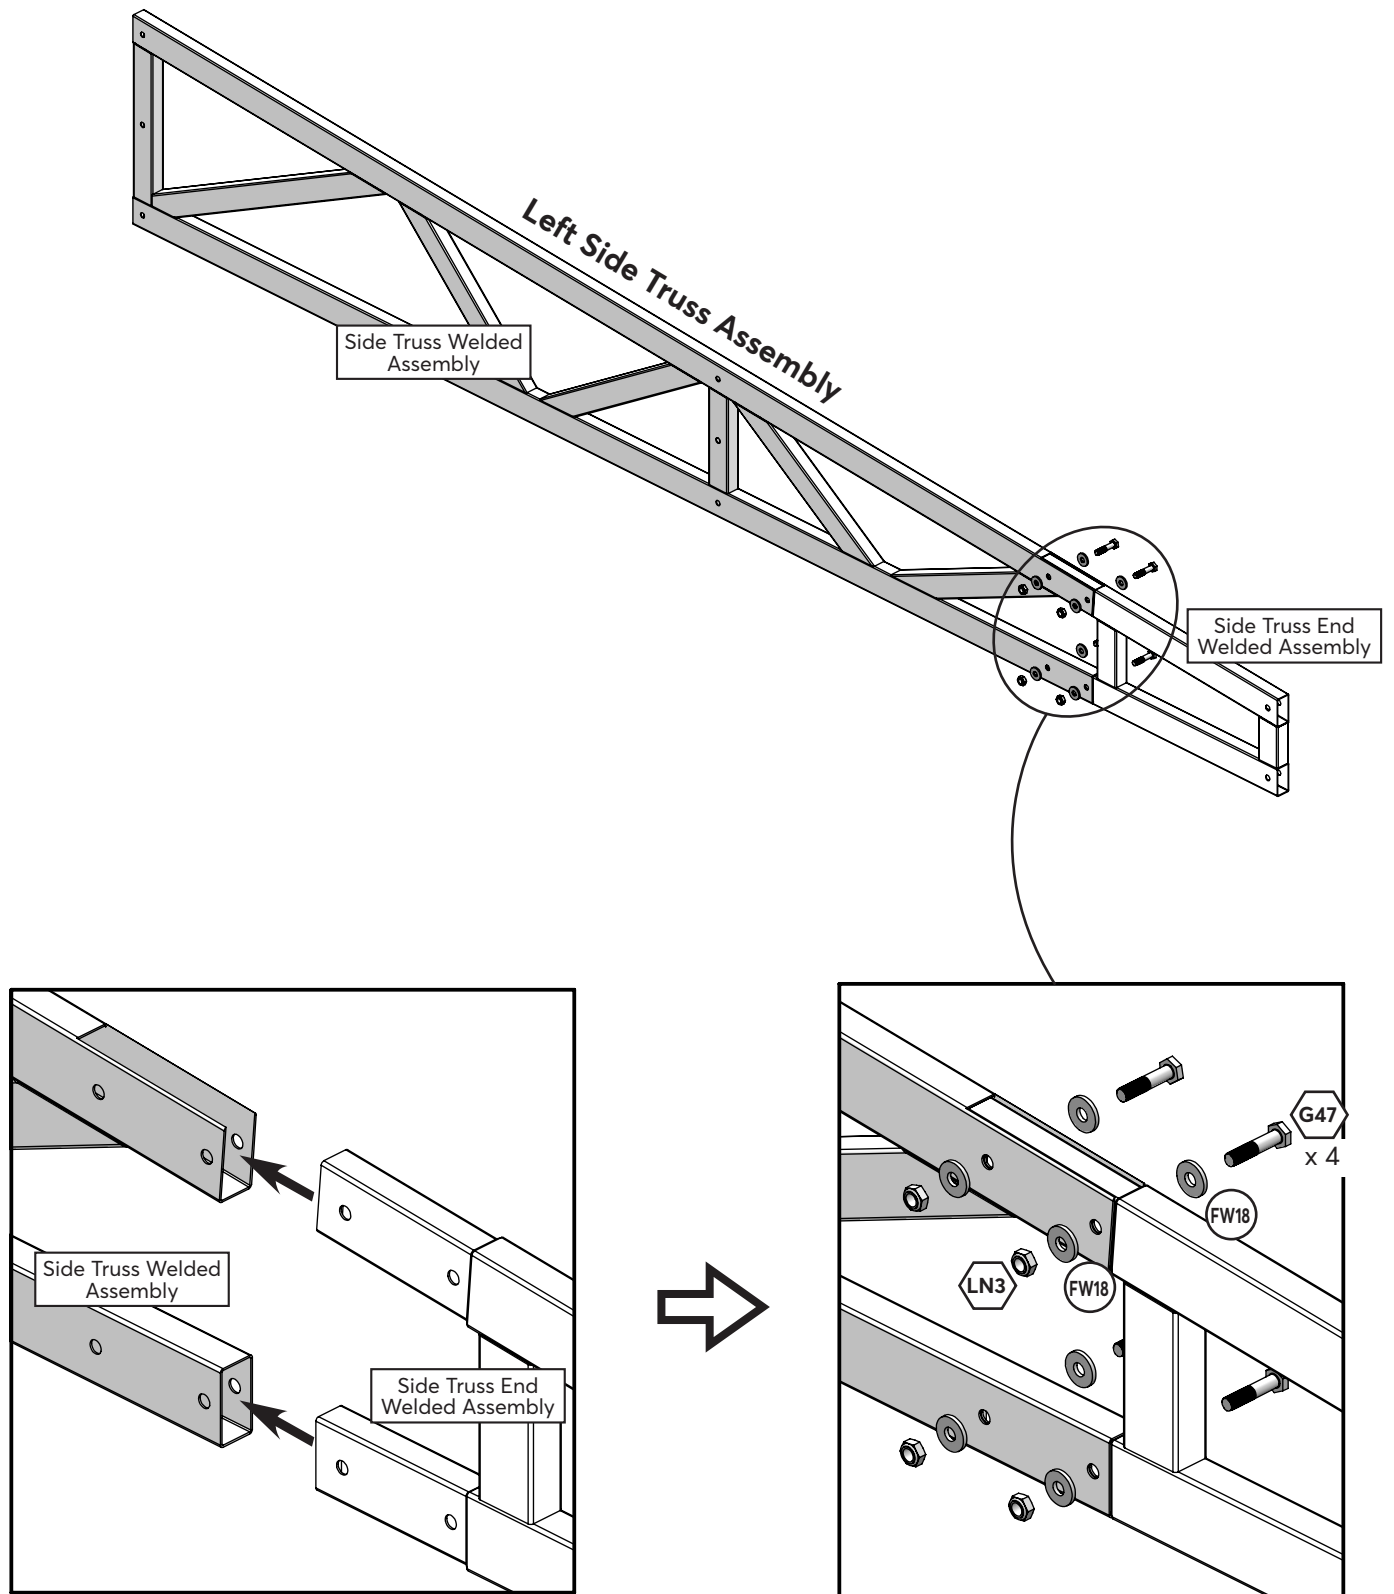


Hardware

4 x  (FW18 x 2, LN3)

Components

1 x Side Truss End Welded Assembly
1 x Side Truss Welded Assembly

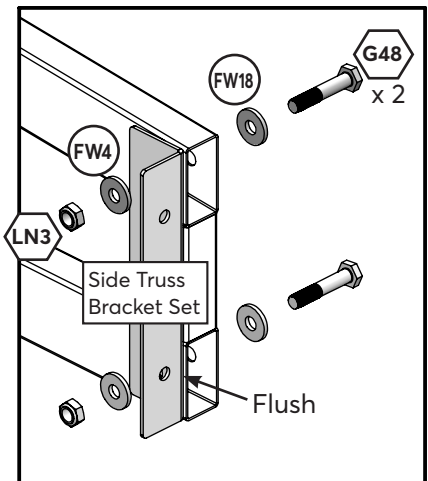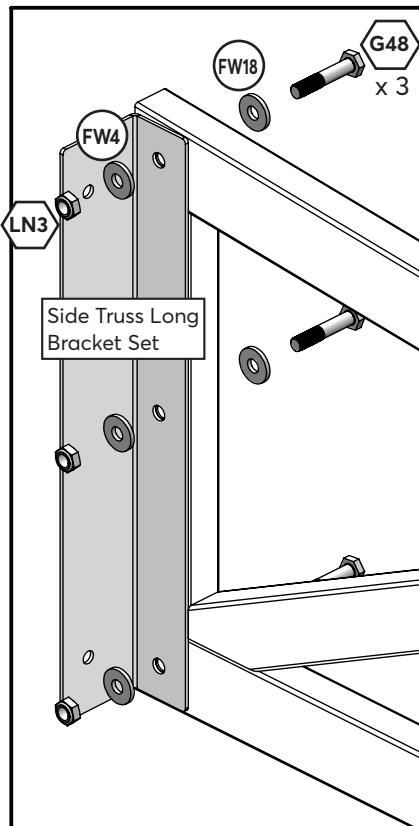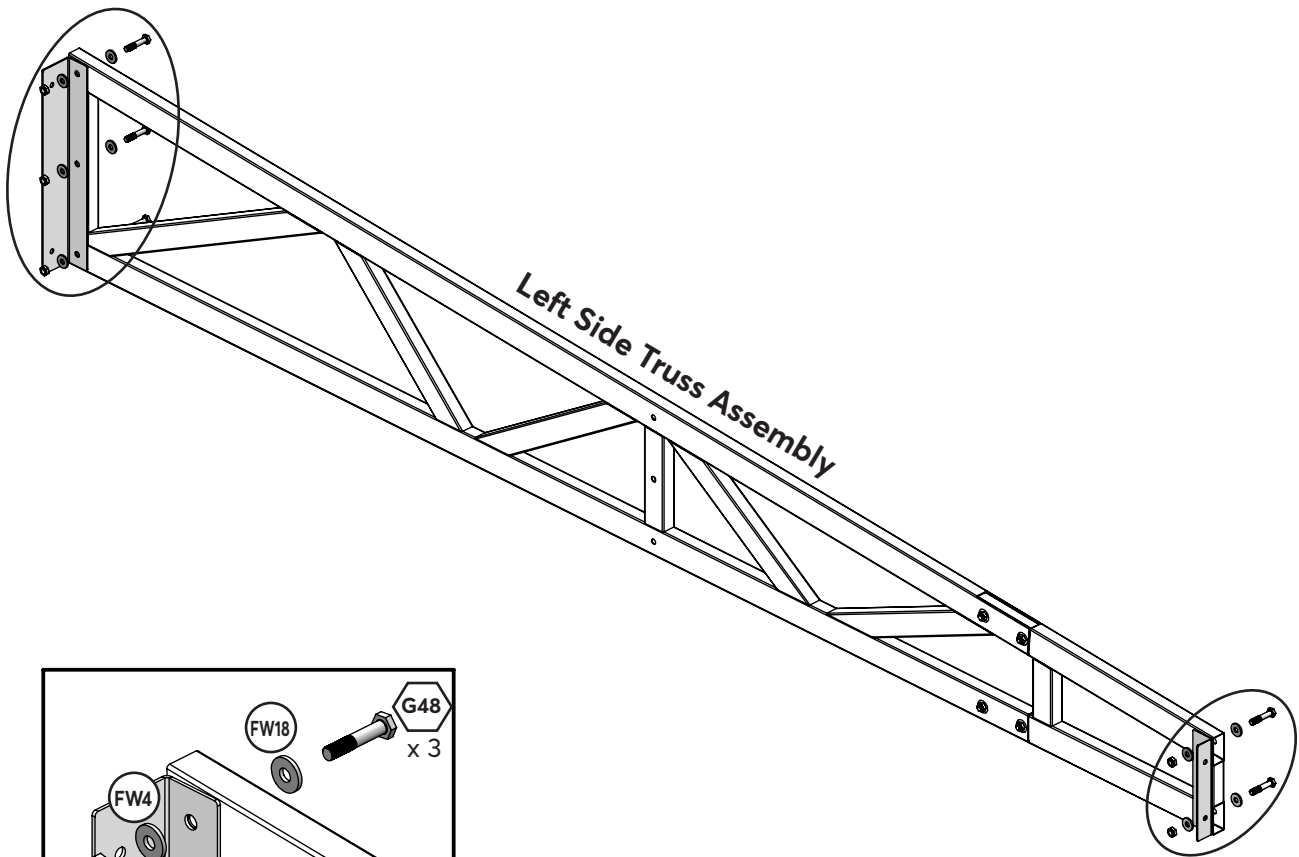


Hardware

5 x G48 (FW4, FW18, LN3)

Components

1 x Side Truss Long Bracket Set
1 x Side Truss Bracket Set



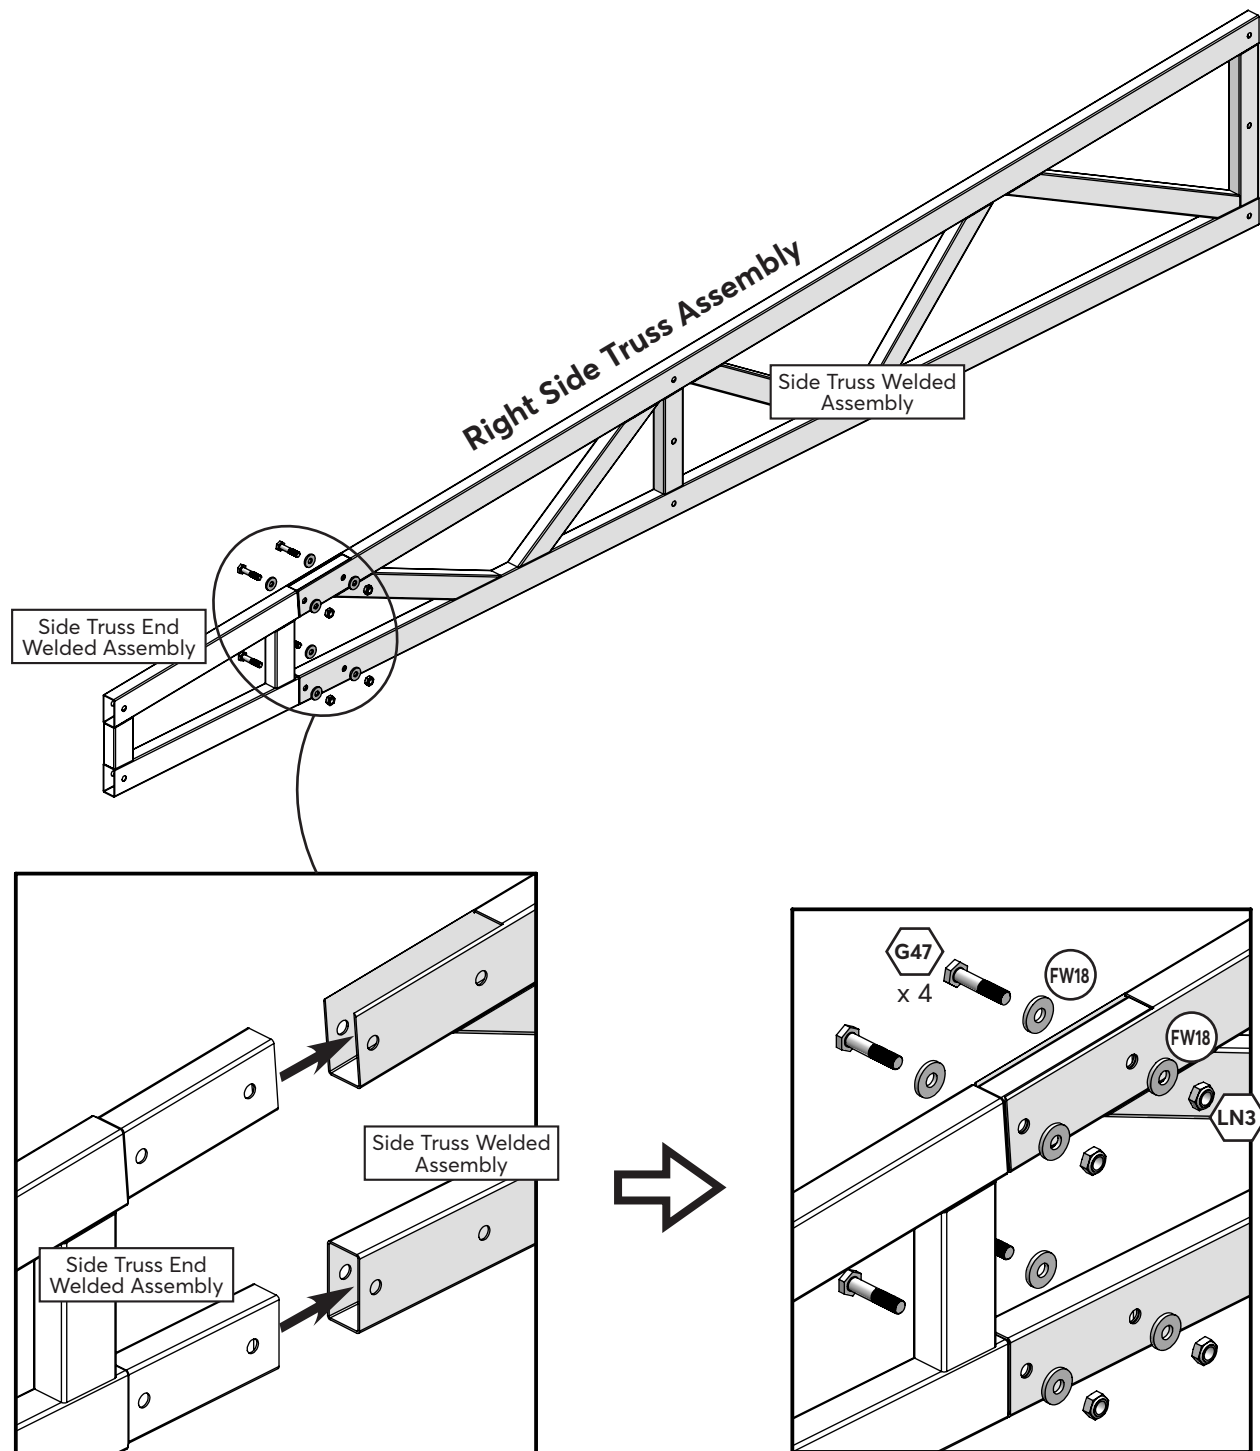
**Hardware**

4 x  (FW18 x 2, LN3)

Components

1 x Side Truss End Welded Assembly

1 x Side Truss Welded Assembly

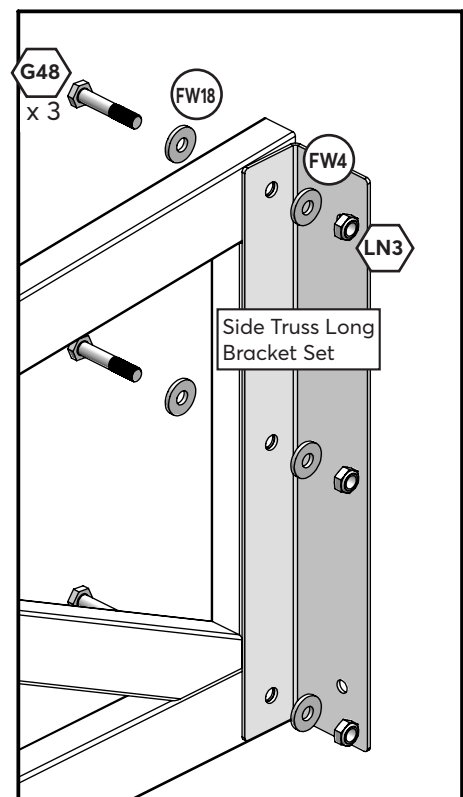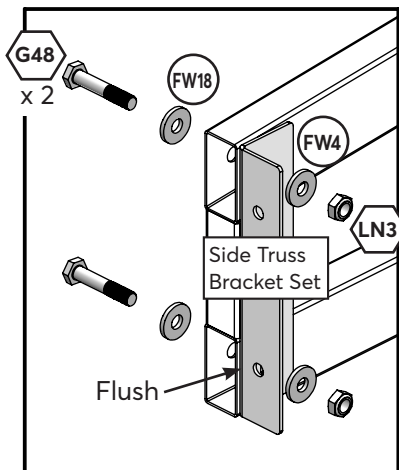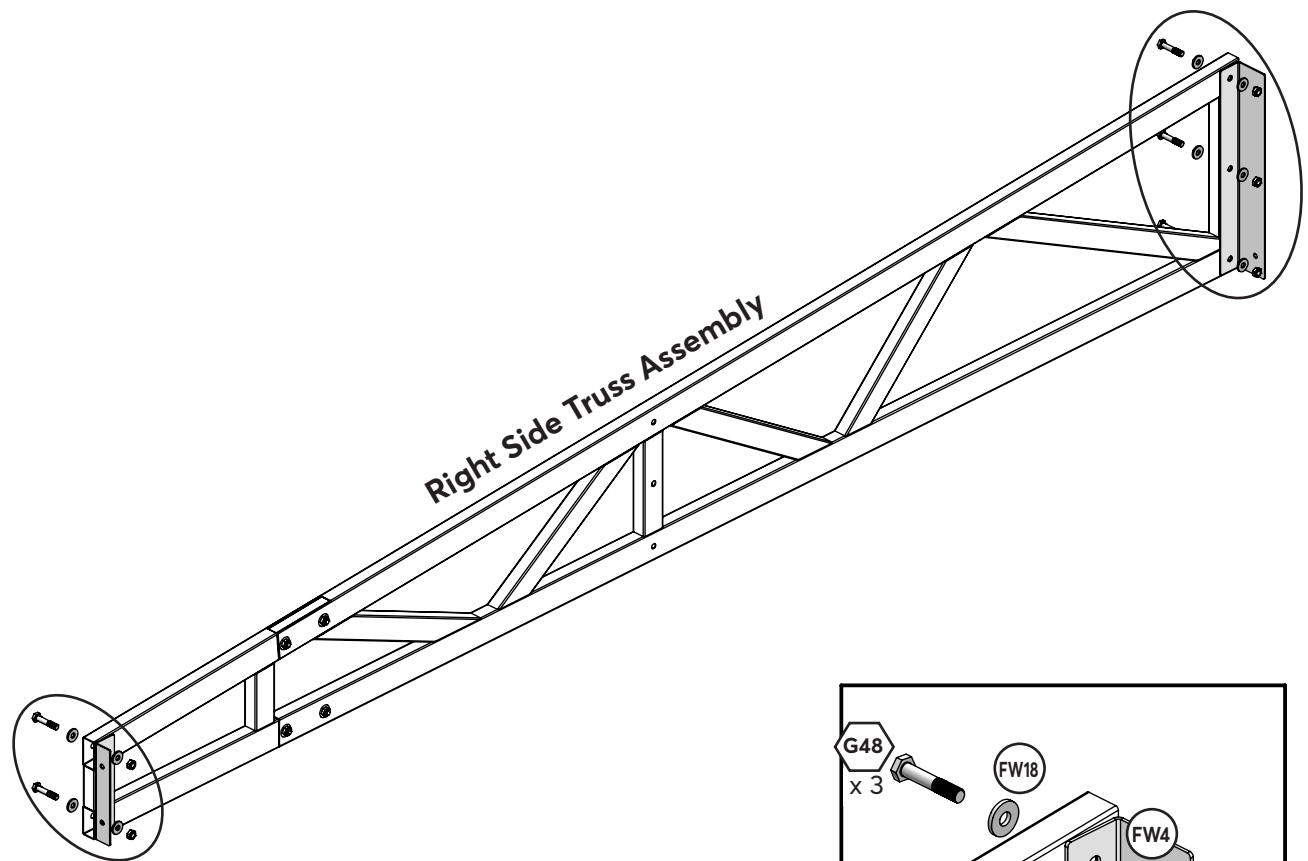





Hardware

5 x  (FW4, FW18, LN3)

Components

1 x Side Truss Long Bracket Set





1 x Side Truss Bracket Set

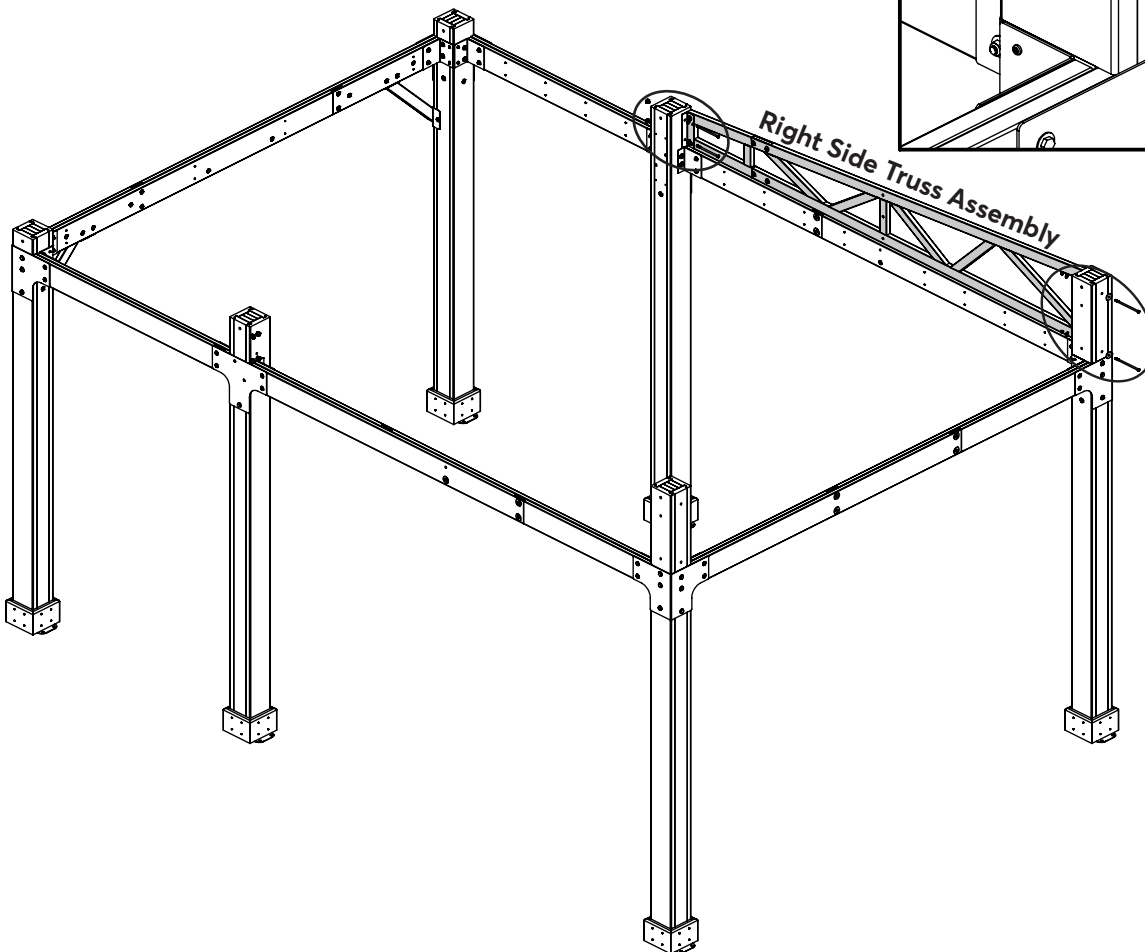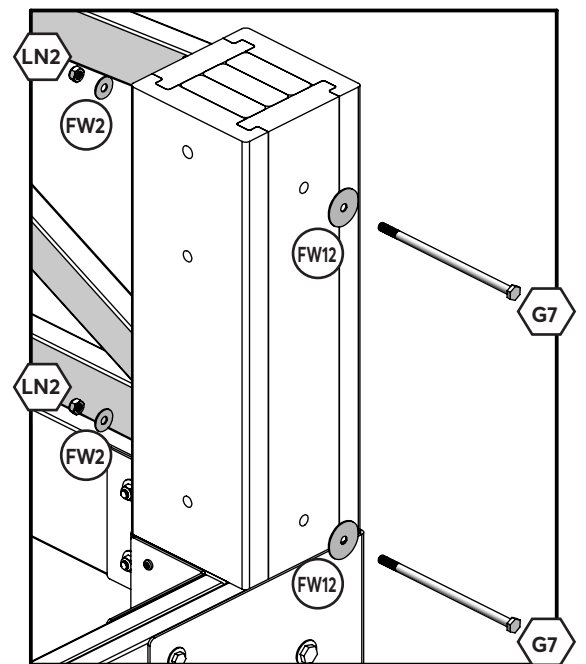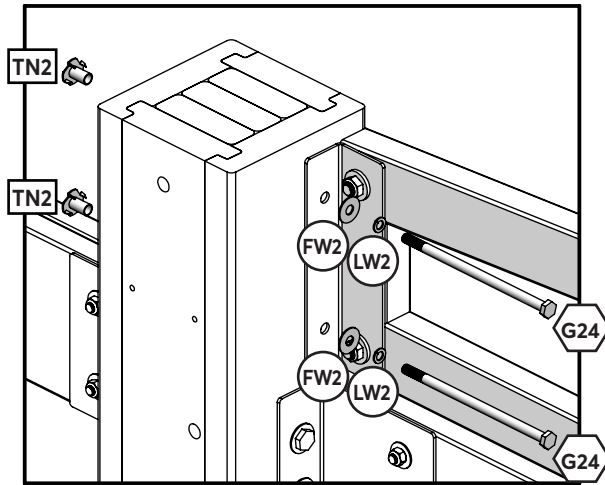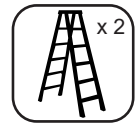

Hardware

2 x  (LW2, FW2, TN2)

2 x  (FW12, FW2, LN2)

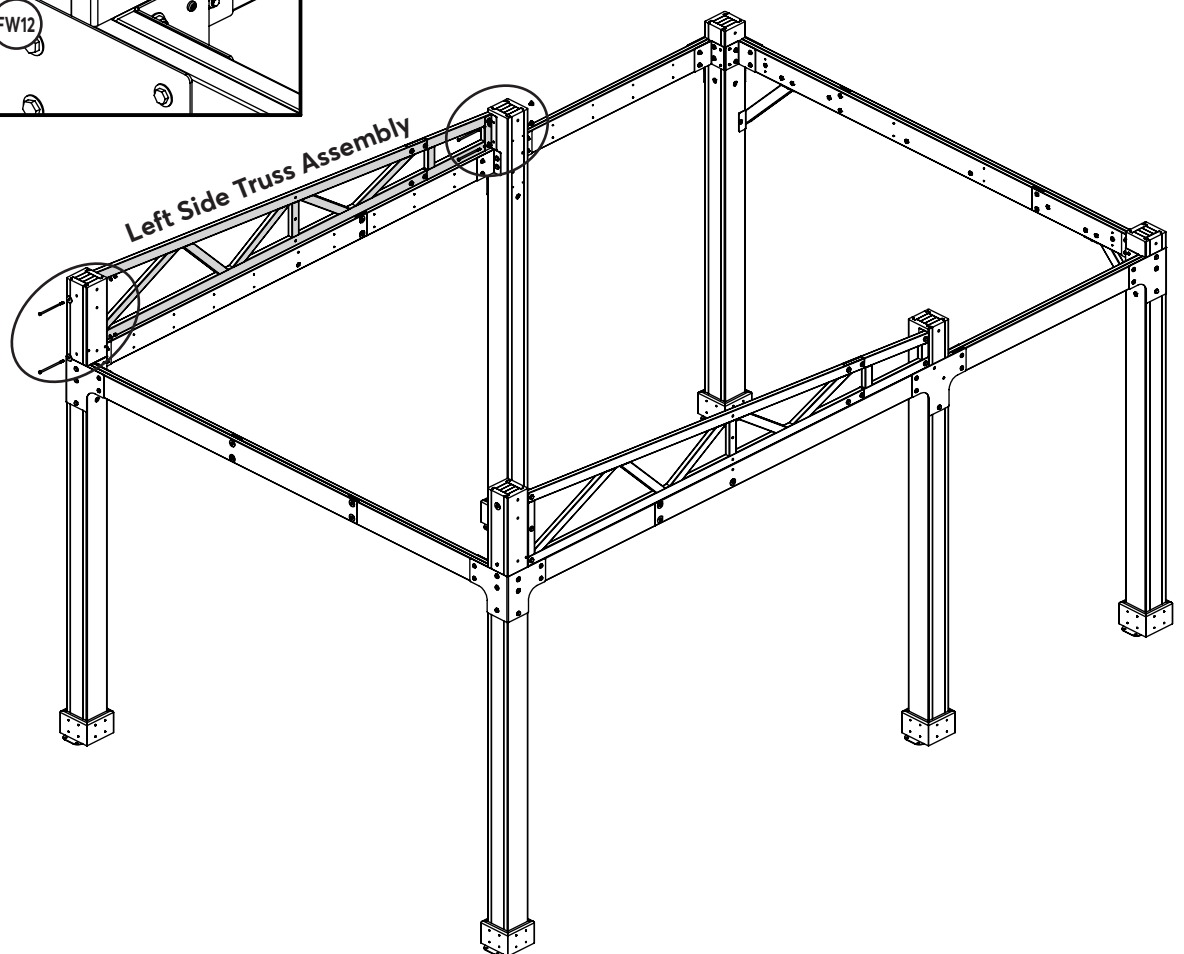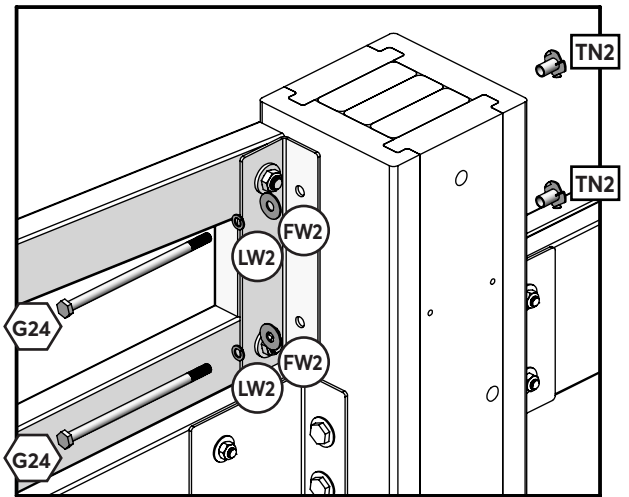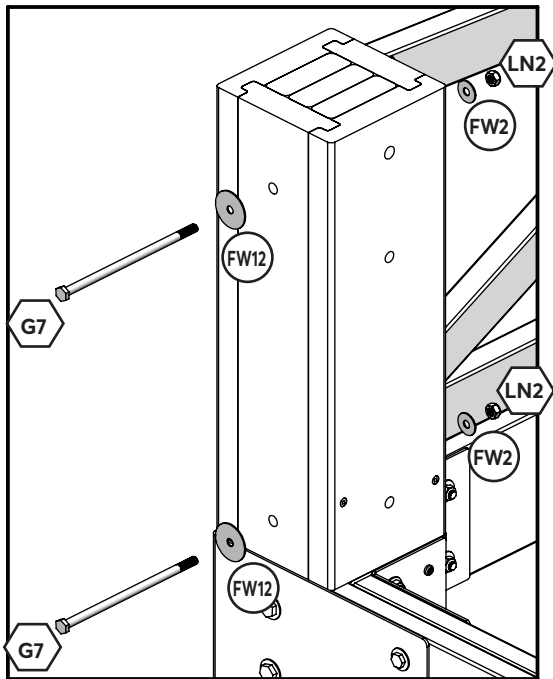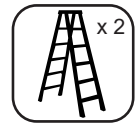




Hardware

2 x  (LW2, FW2, TN2)

2 x  (FW12, FW2, LN2)

51

Complete this step twice

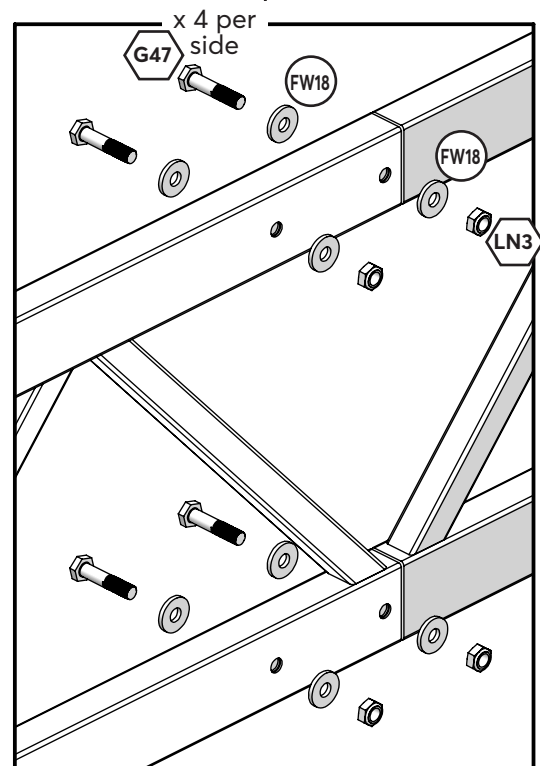
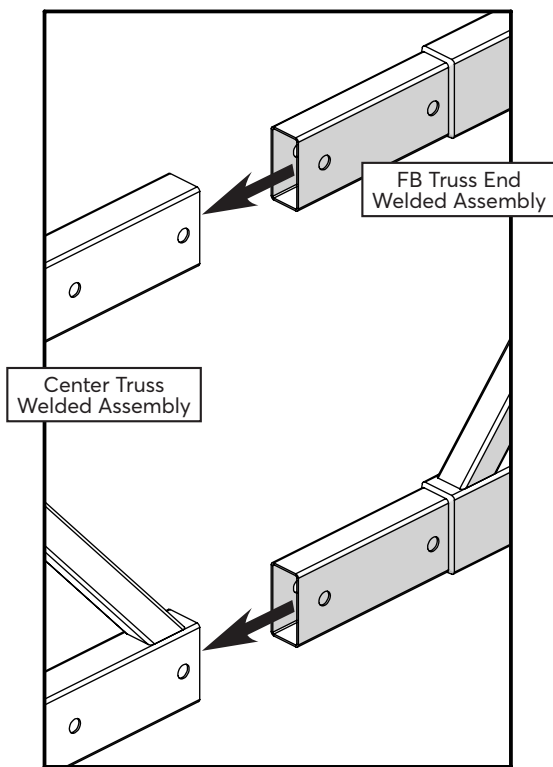
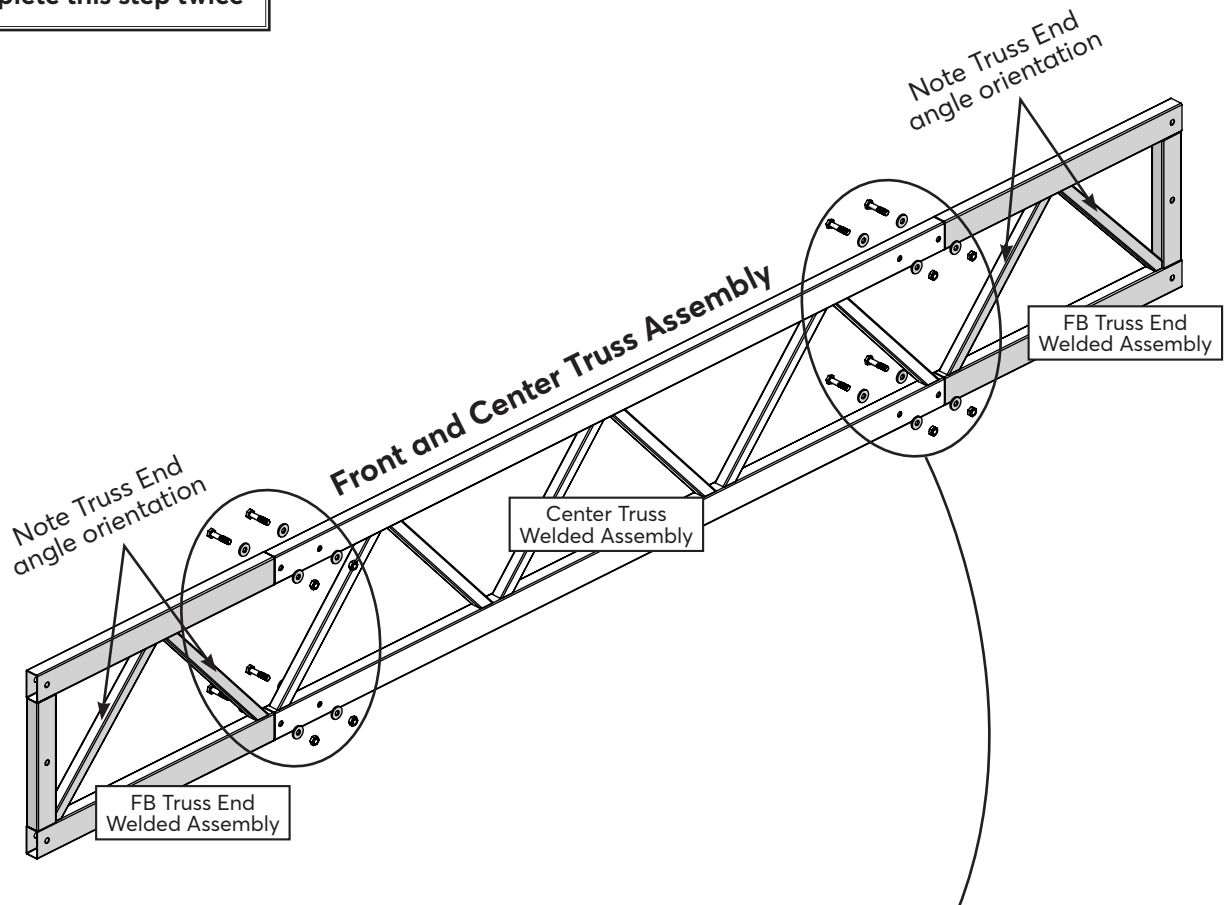


Hardware

16 x G47 (FW18 x 2, LN3)

Components

2 x Center Truss Welded Assembly
4 x FB Truss End Welded Assembly

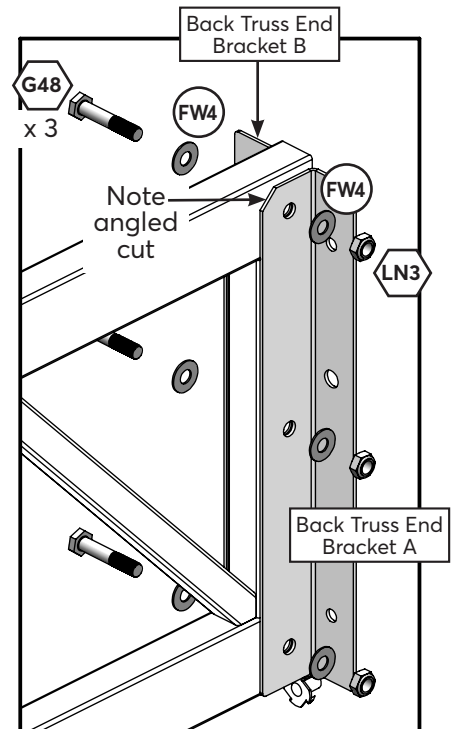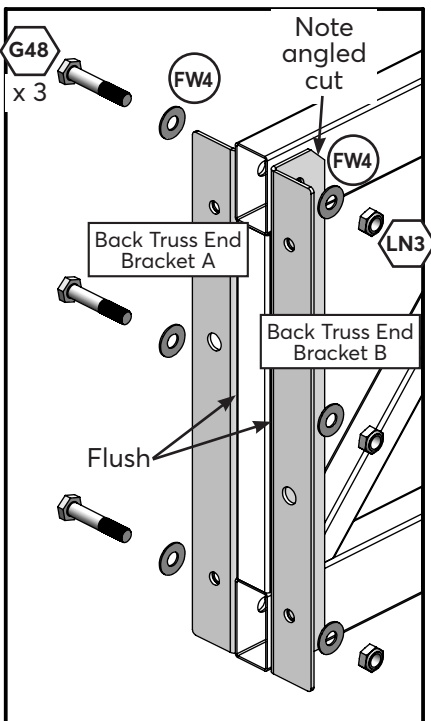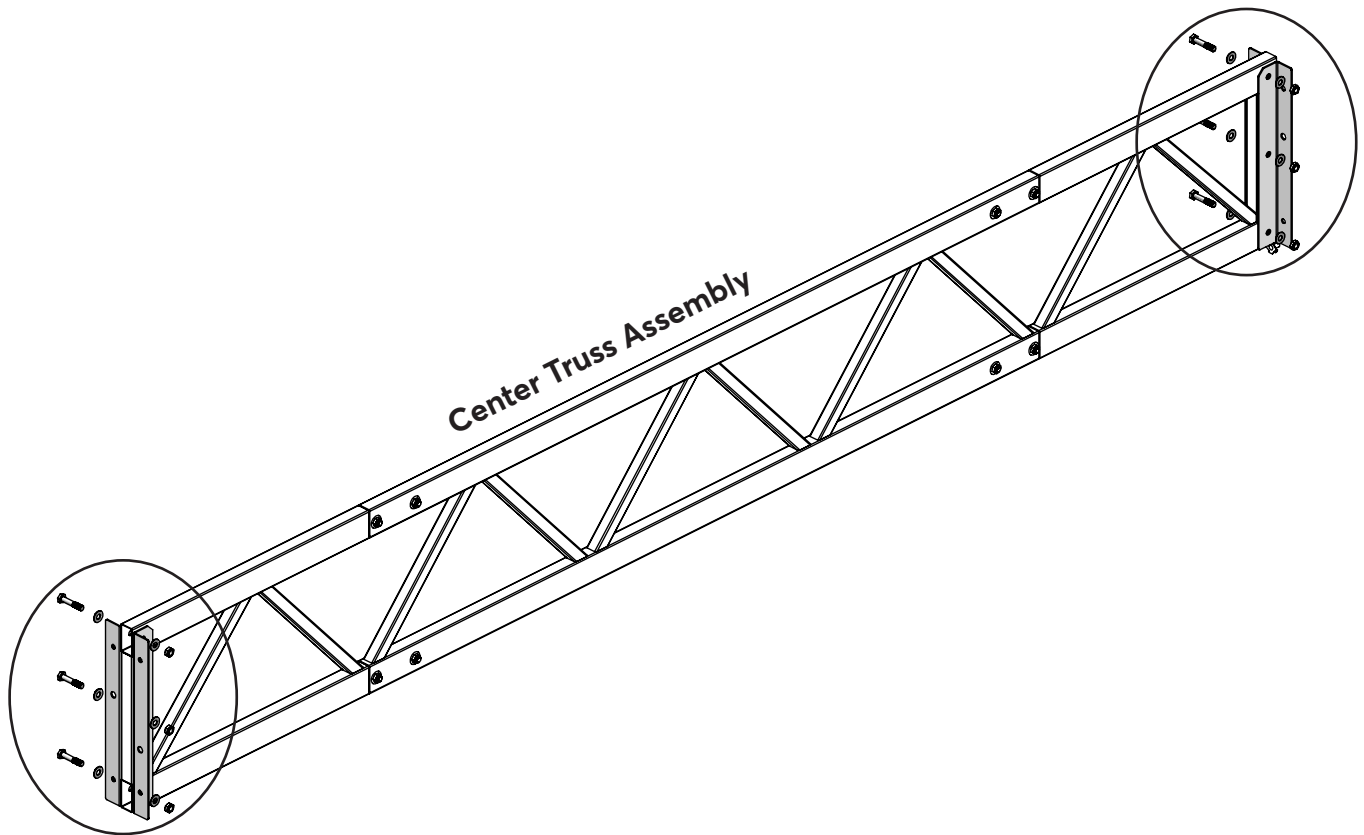




Hardware

6 x G48 (FW4 x 2, LN3)

Components

2 x Back Truss End Bracket A

2 x Back Truss End Bracket B

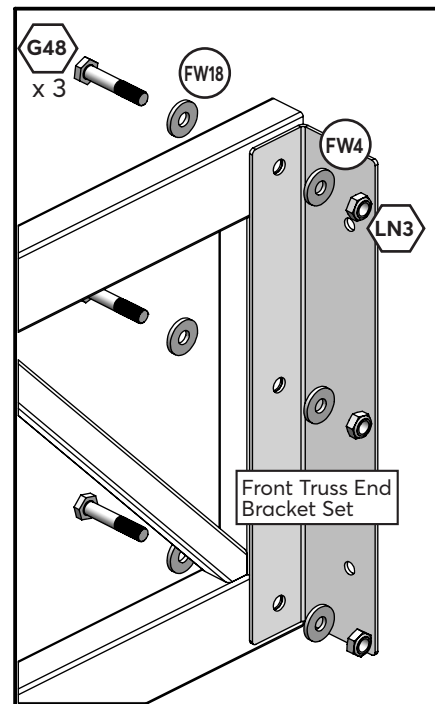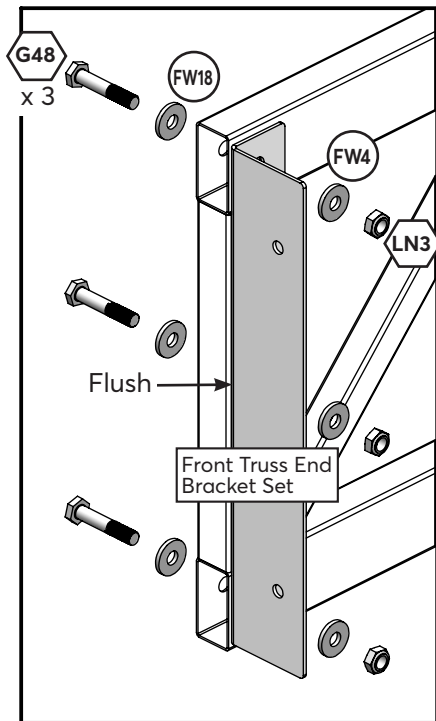
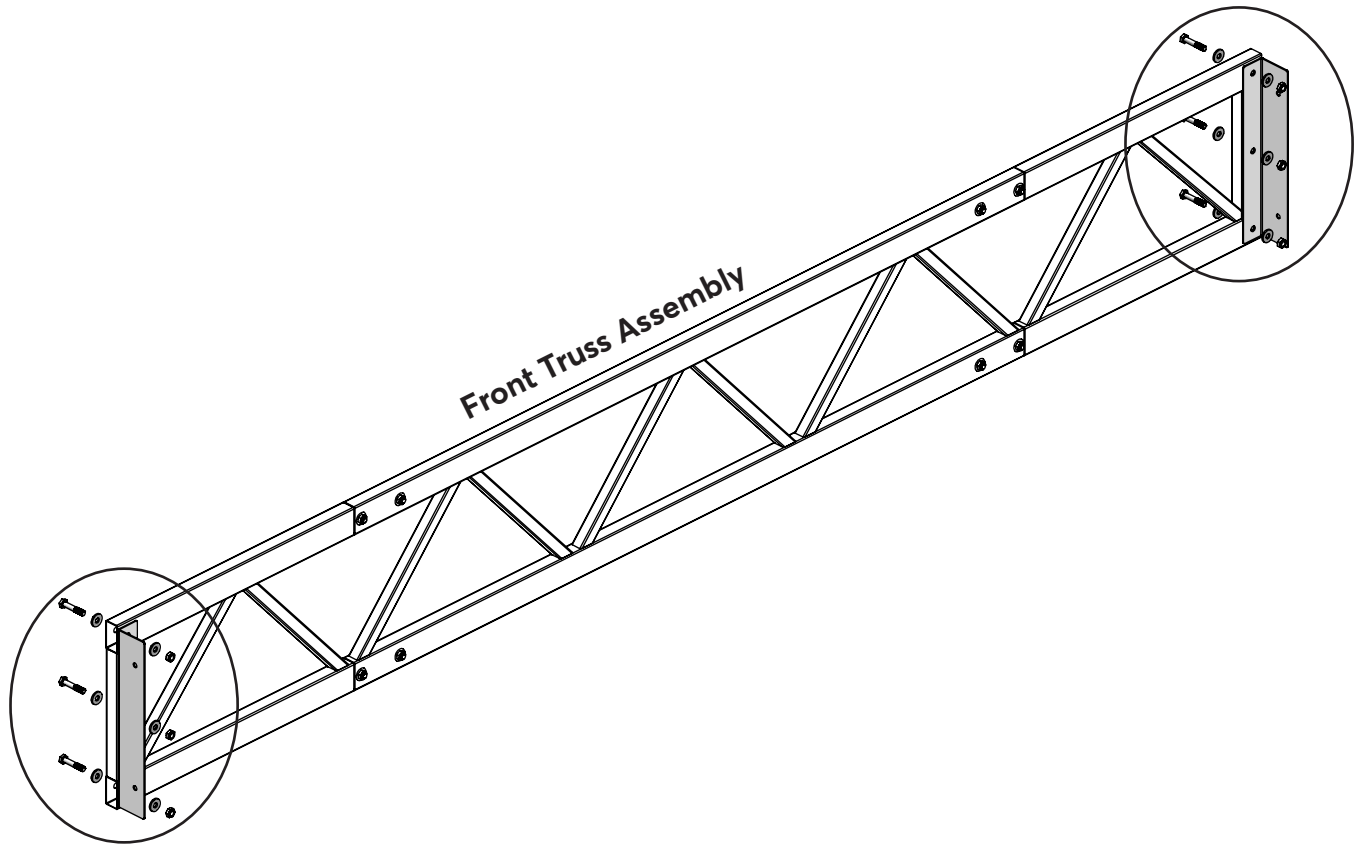


Hardware

6 x G48 (FW4, FW18, LN3)



Components



2 x Front Truss End Bracket Set

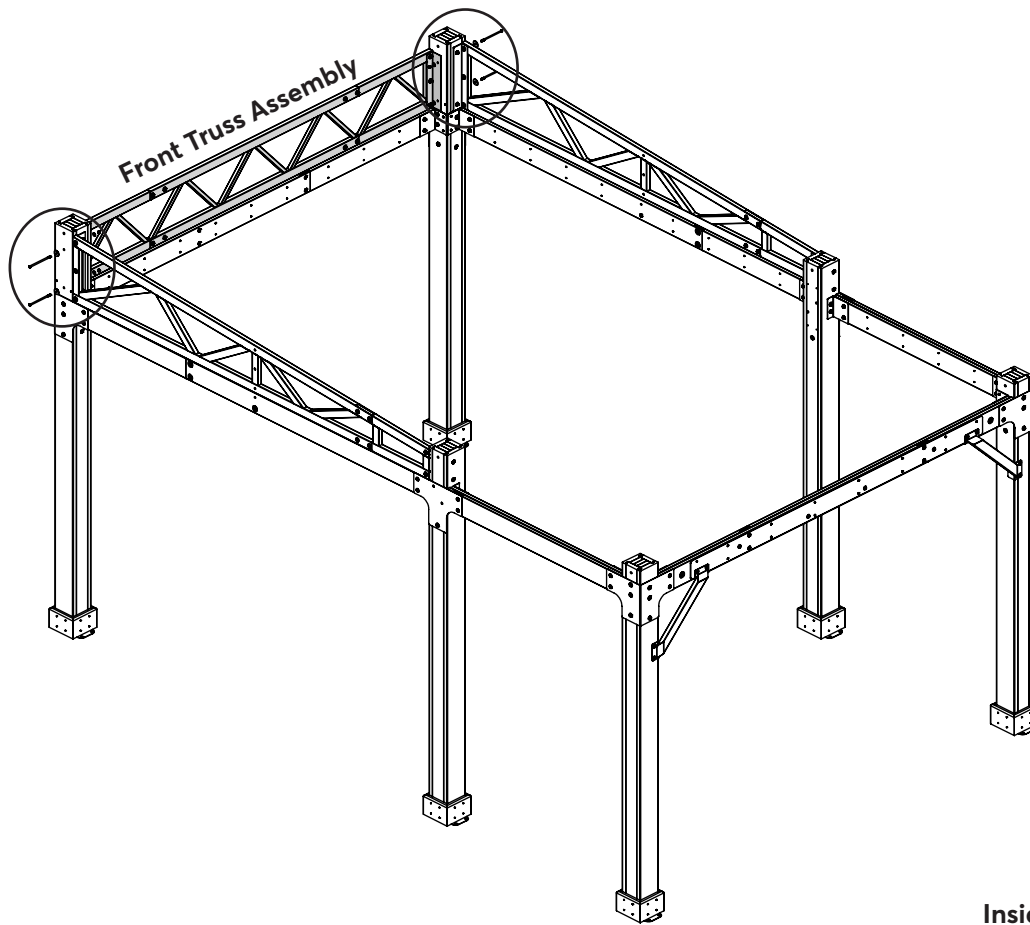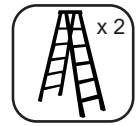


Inside View

Outside View

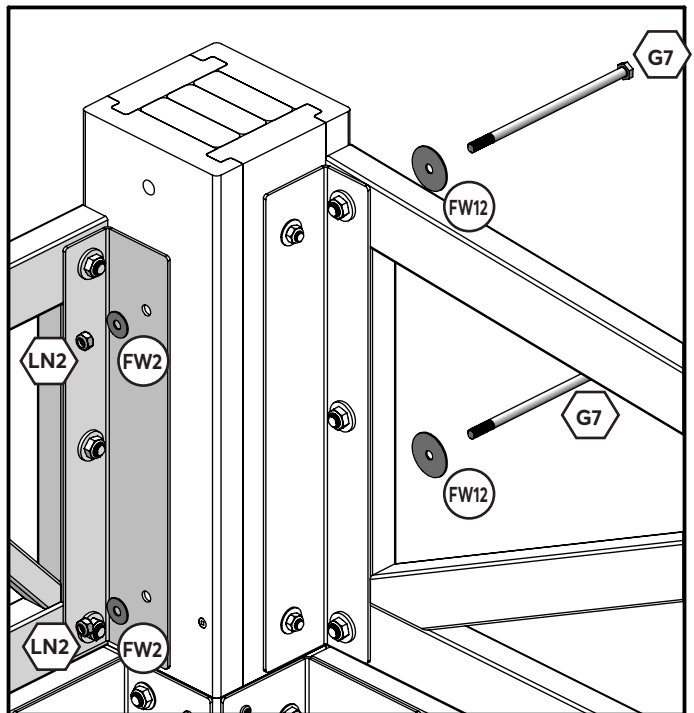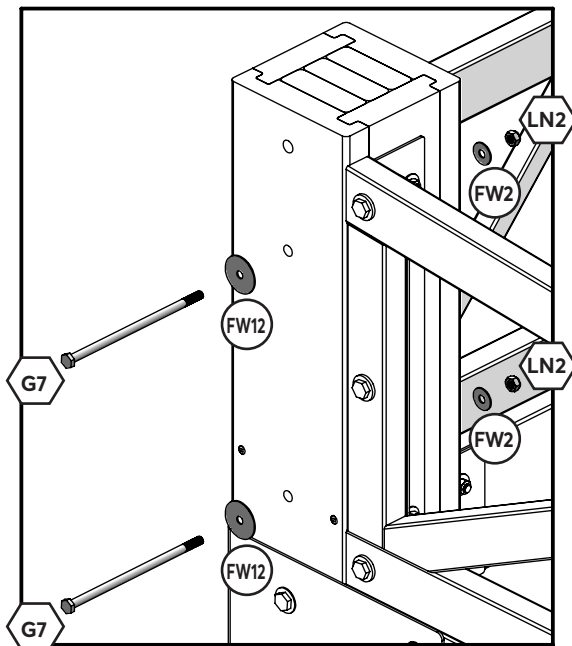
**Hardware**4 x  (FW12, FW2, LN2)

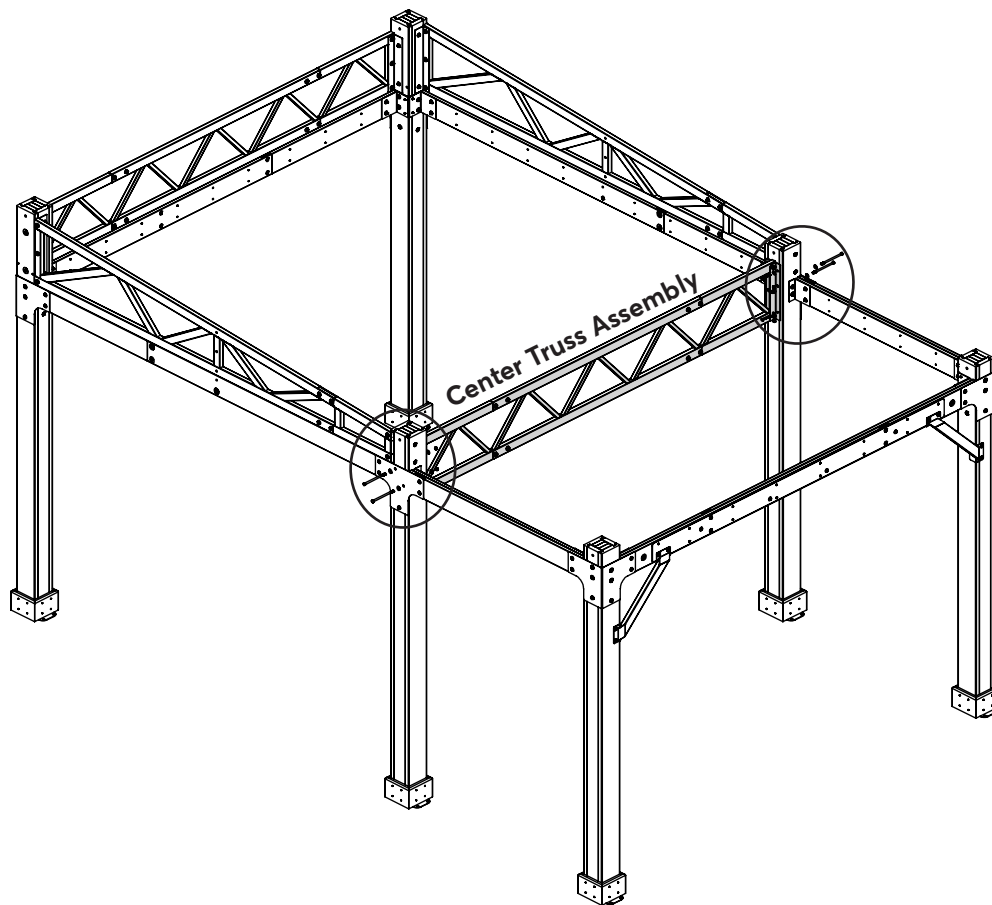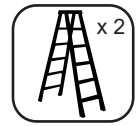

Outside View




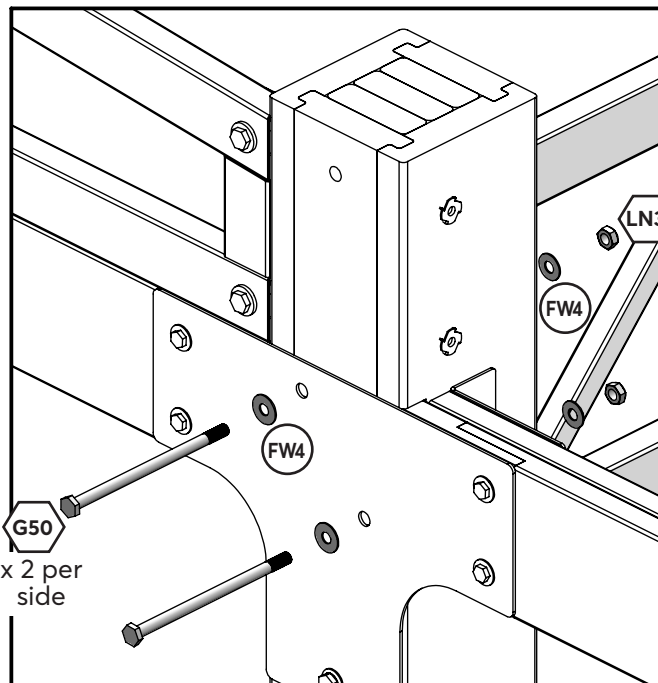


Rotated & Inside View

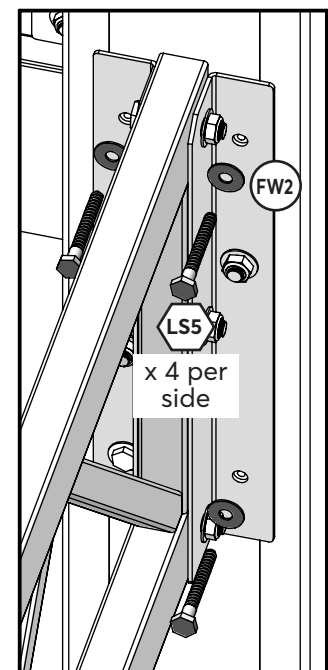**Hardware**

4 x (FW4 x 2, LN3)

8 x (FW2)

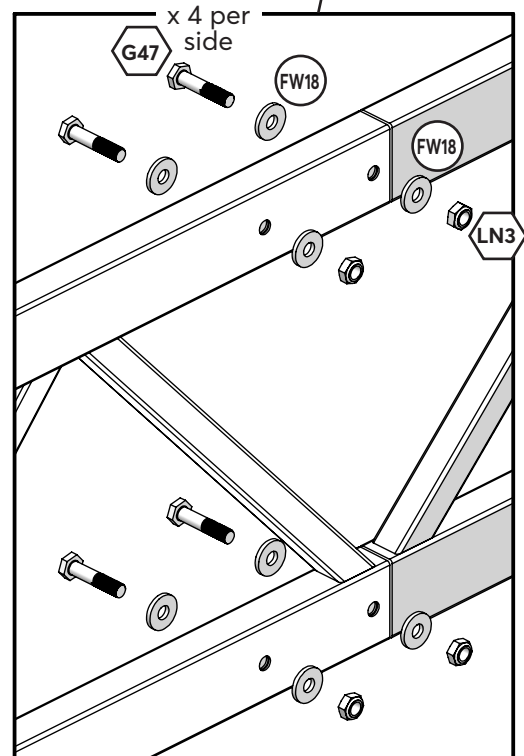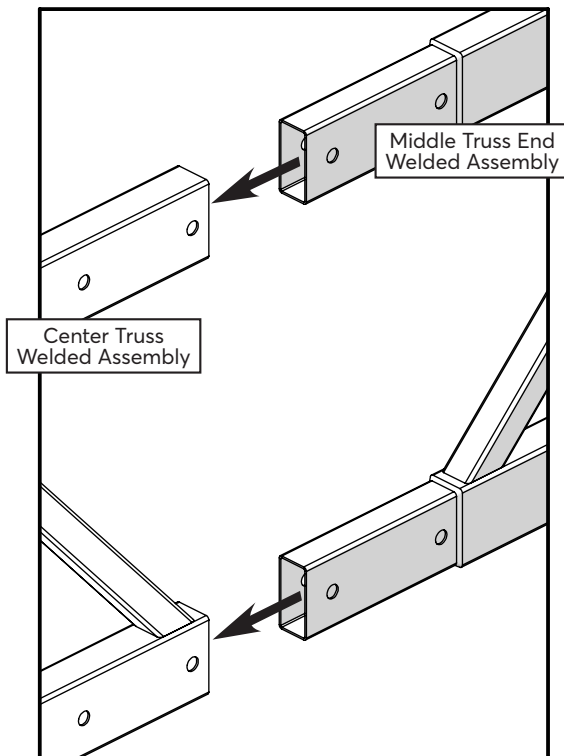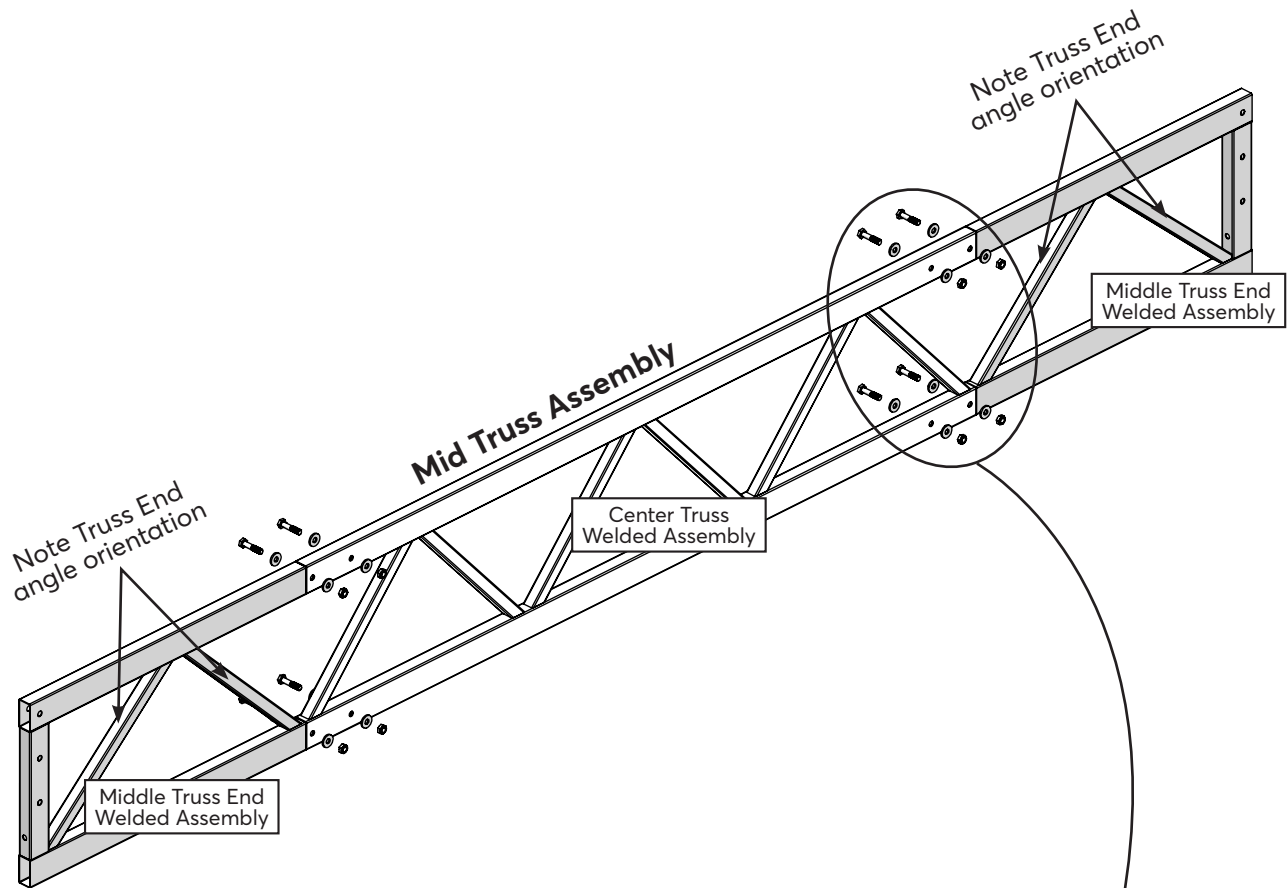

Hardware




8 x G47 (FW18 x 2, LN3)

Components

1 x Center Truss Welded Assembly
2 x Middle Truss End Welded Assembly







Rotated View

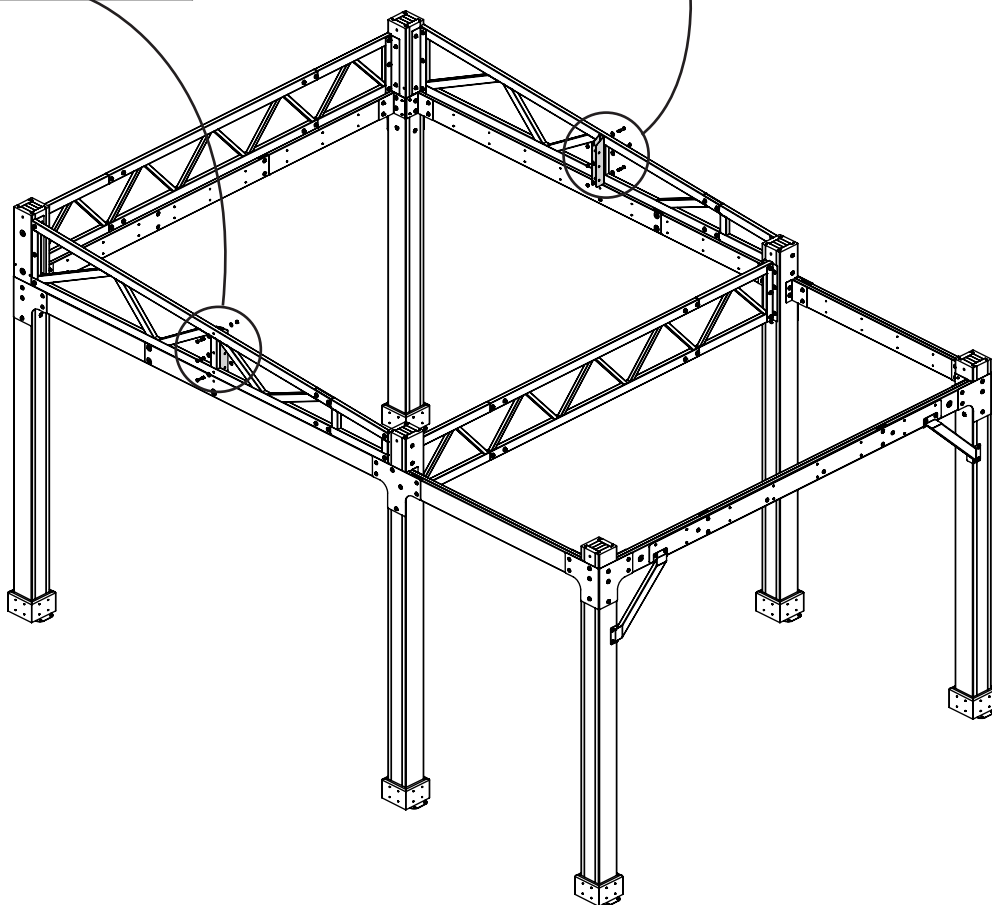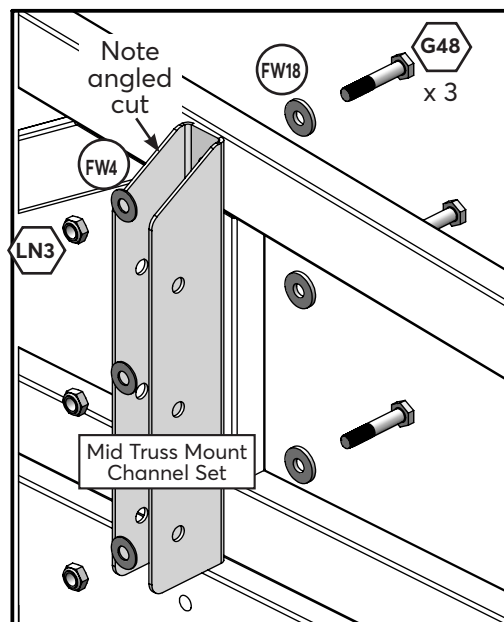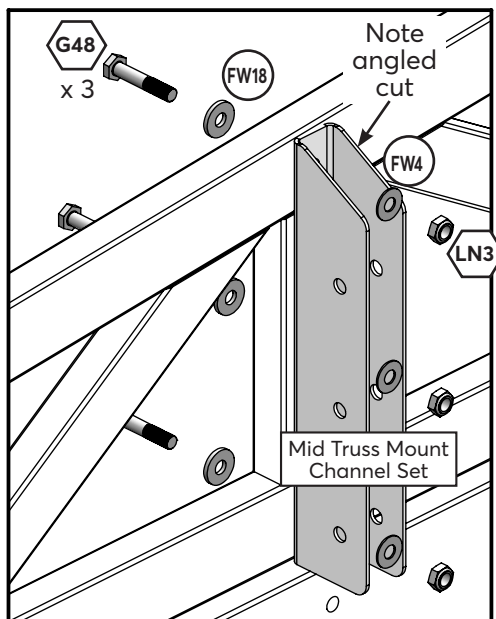**Hardware**

6 x G48 (FW4, FW18, LN3)

Components

2 x Mid Truss Mount Channel Set

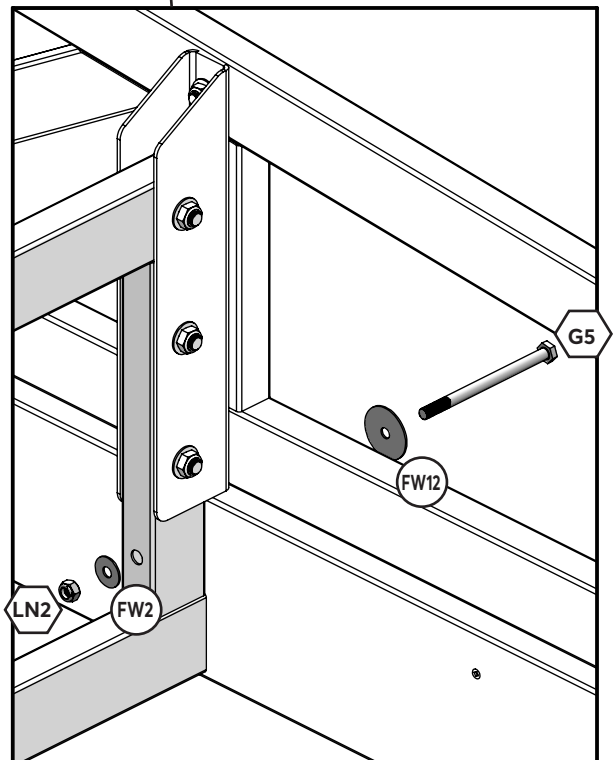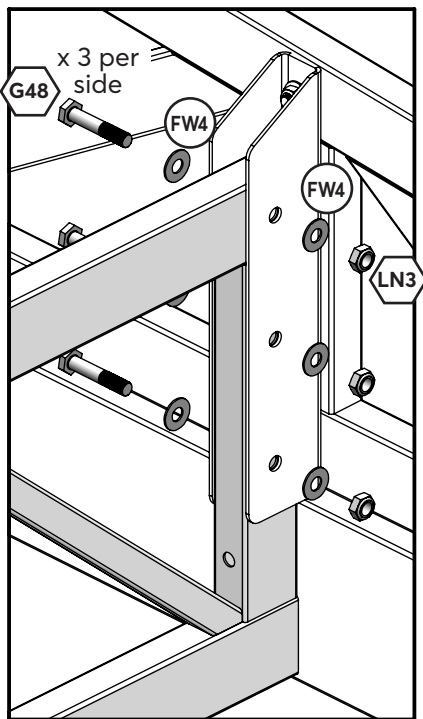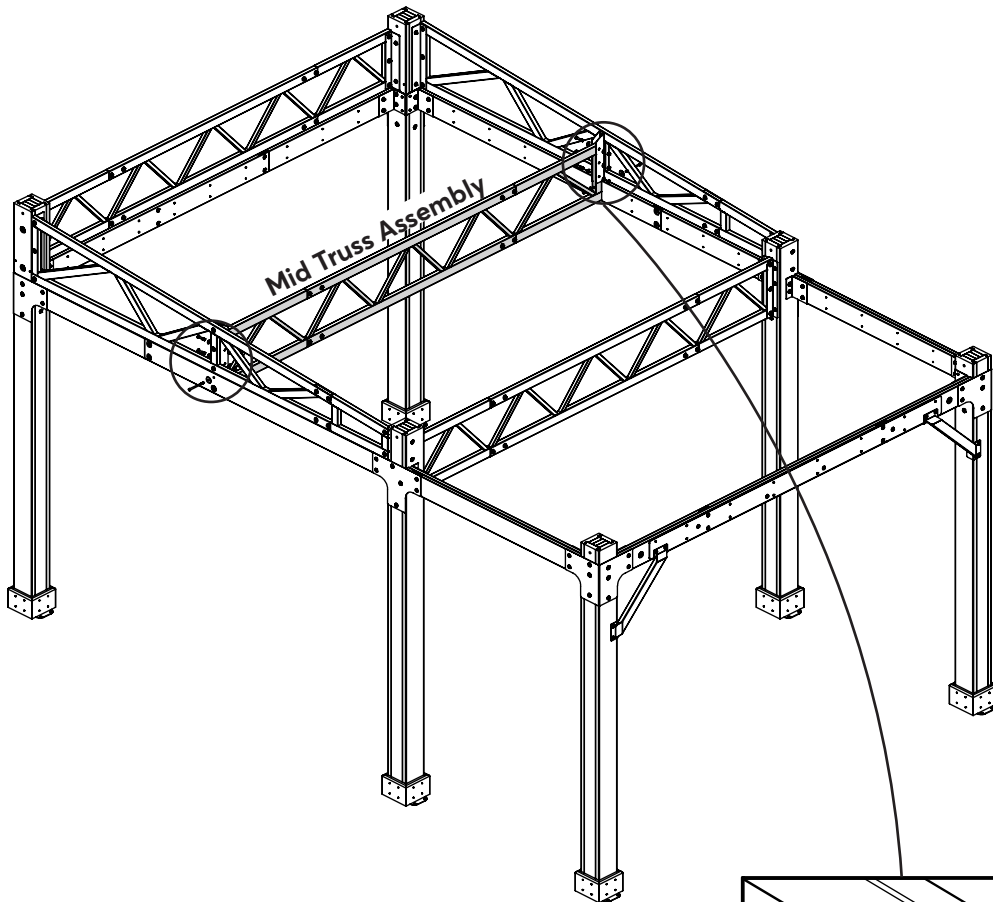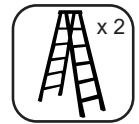


Hardware

6 x  G48 (FW4 x 2, LN3)

2 x  G5 (FW12, FW2, LN2)

59 Right Roof Frame Assembly

Note bolt orientation

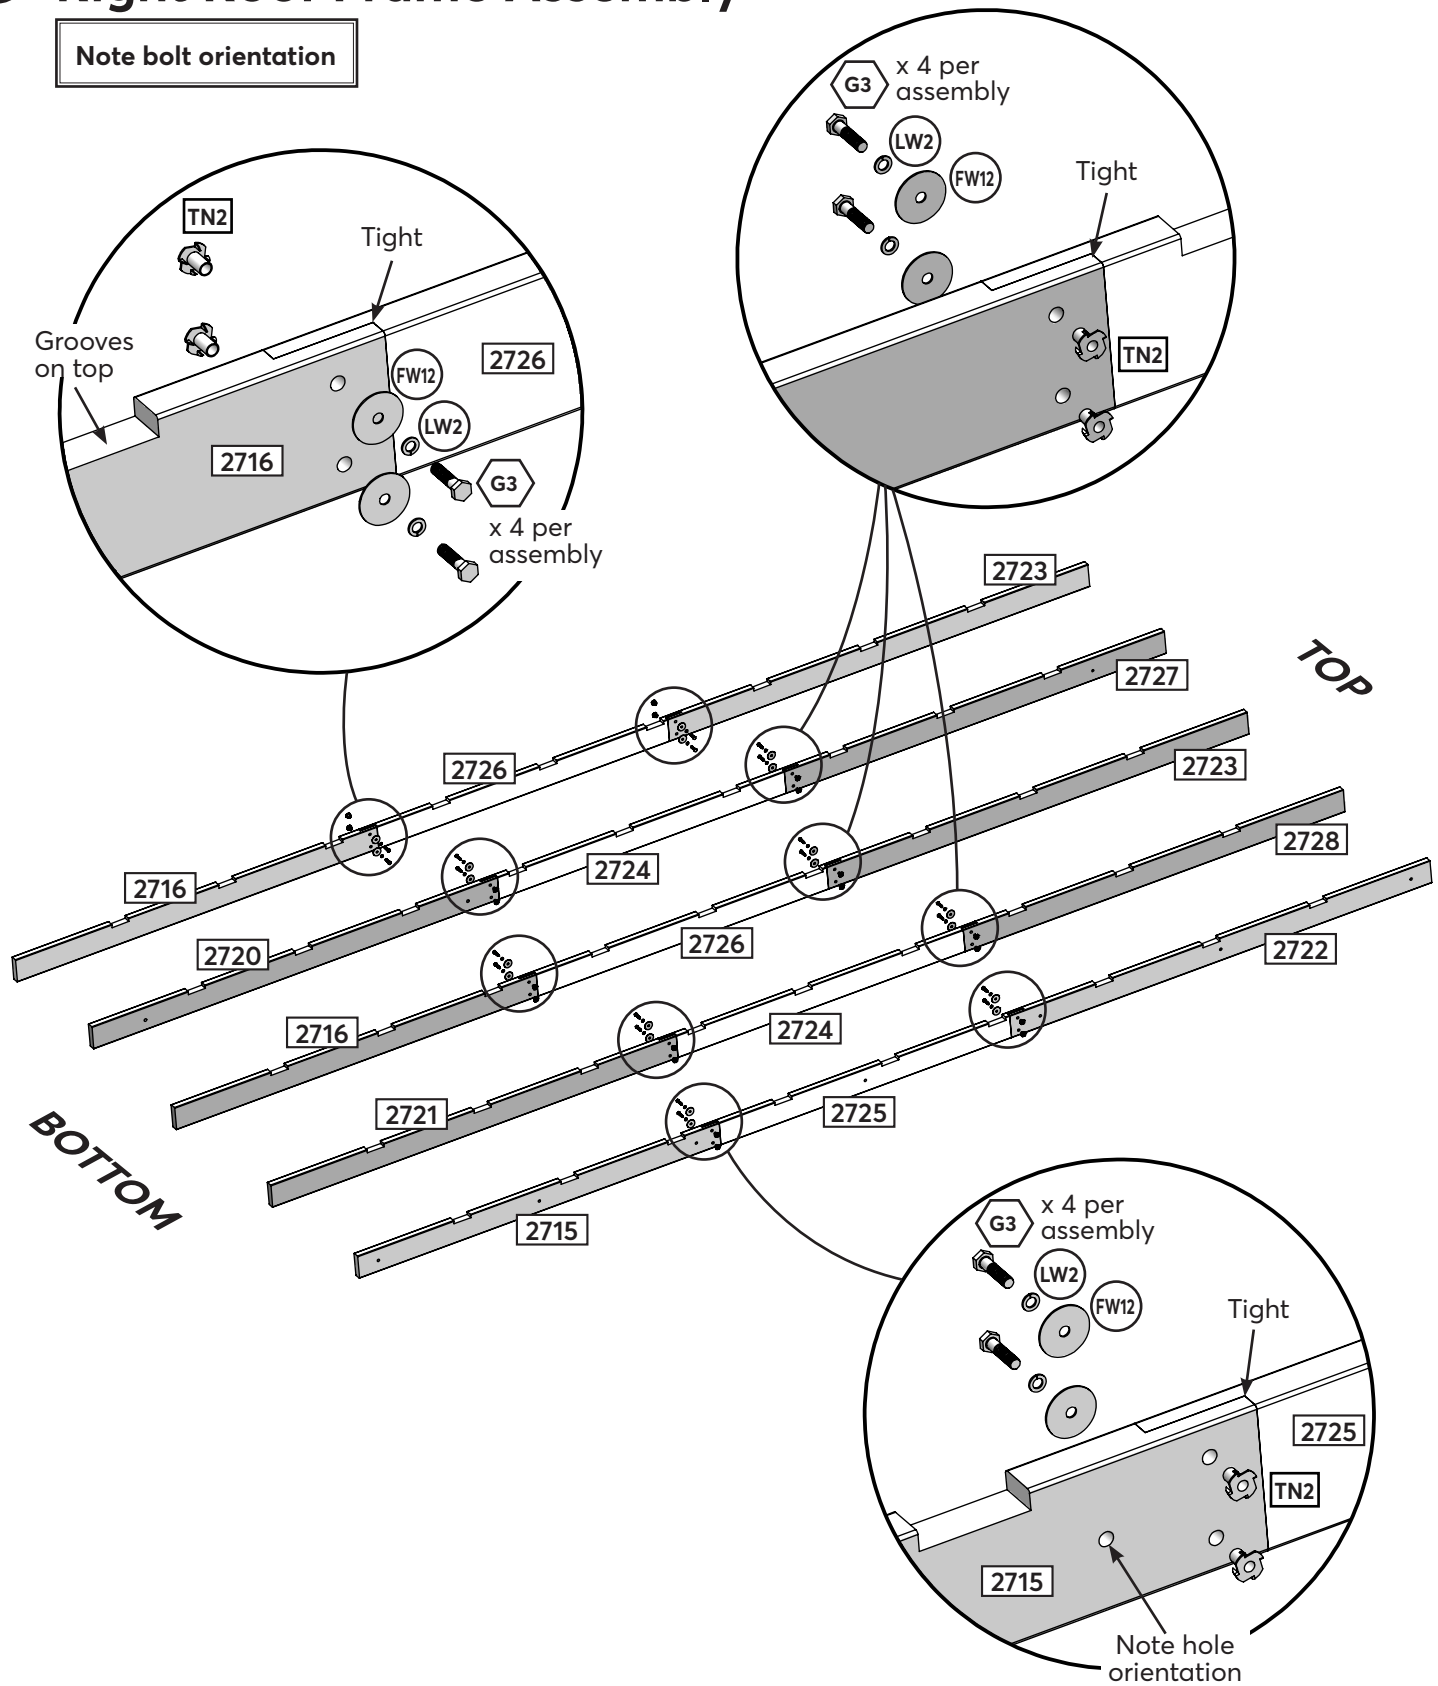

Wood Parts

1 x 2715	1 x 2721	2 x 2724	1 x 2727
2 x 2716	1 x 2722	1 x 2725	1 x 2728
1 x 2720	2 x 2723	2 x 2726	

Hardware

20 x G3 (FW12, LW2, TN2)

Wood Parts
2 x **2719**

Hardware
20 x (S3)


61 Check Frame Dimensions



Make sure the Rafter Assembly is square.

The diagonal distance between the corners of the Frame's are 5.61 m (18 ft 4-7/8 in).




Top View

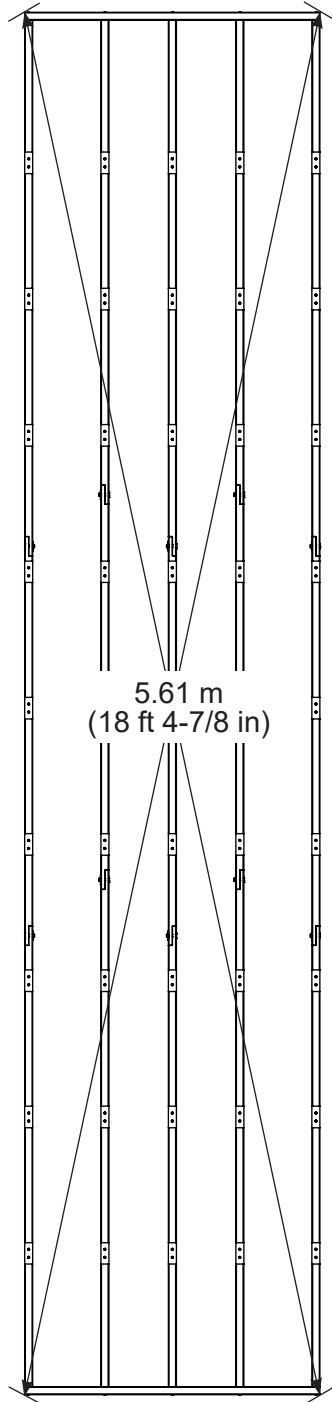

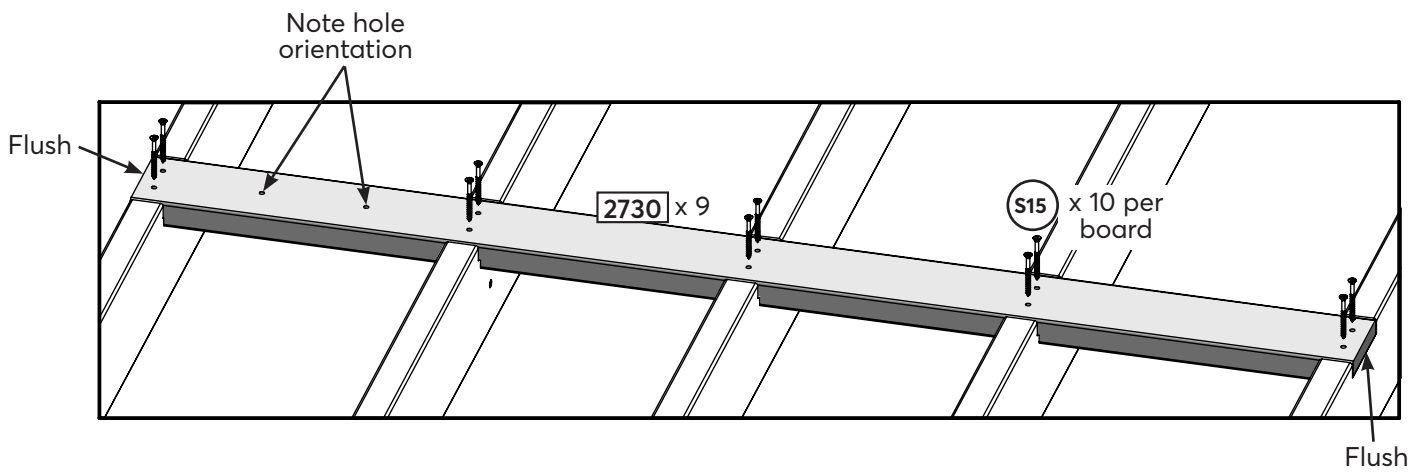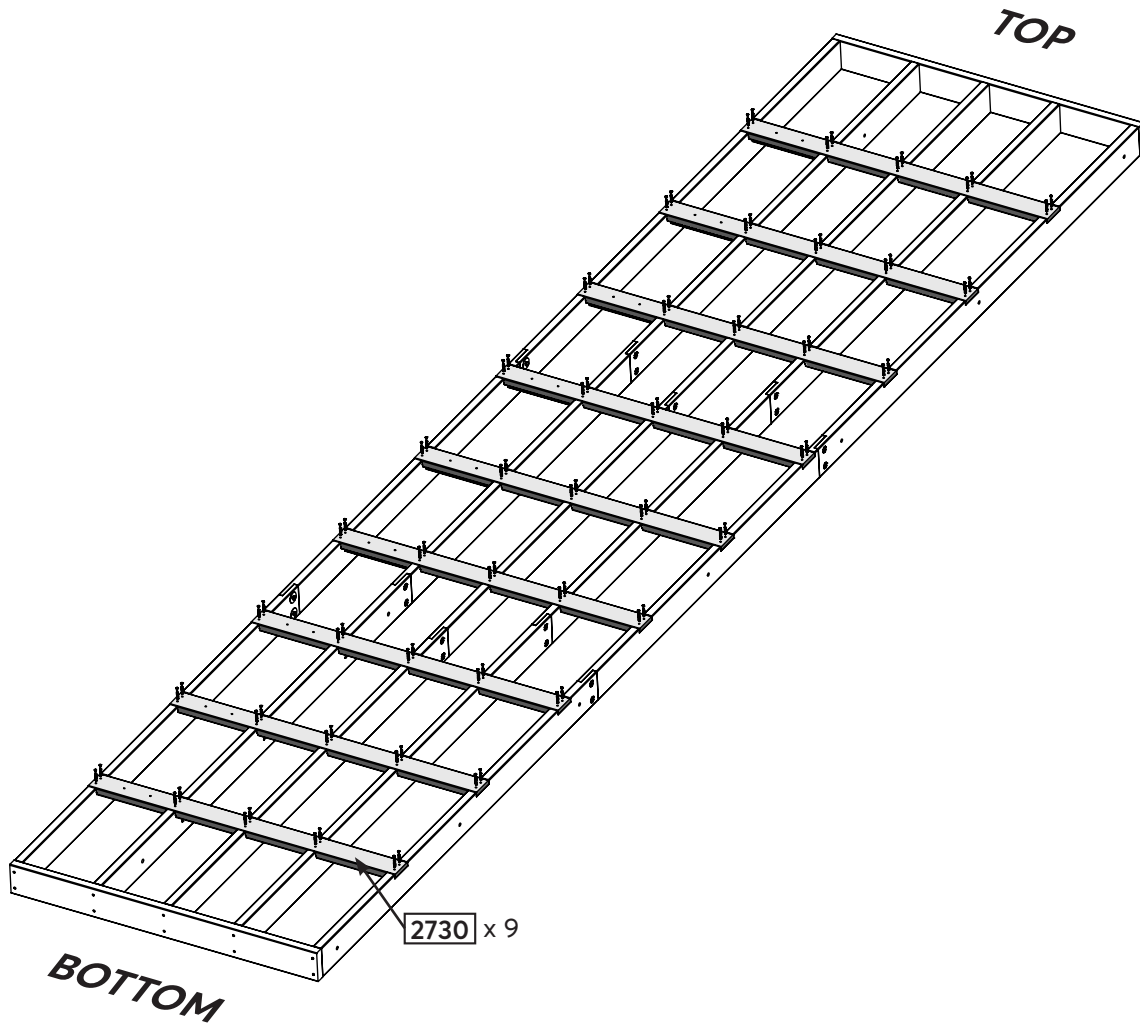


Wood Parts
9 x 2730


Hardware
90 x S15




Top View

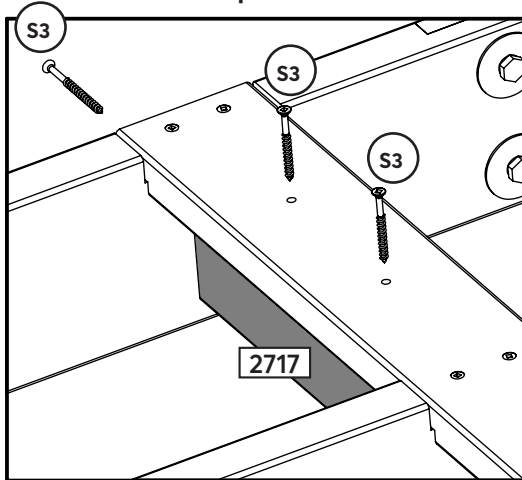

Bottom View

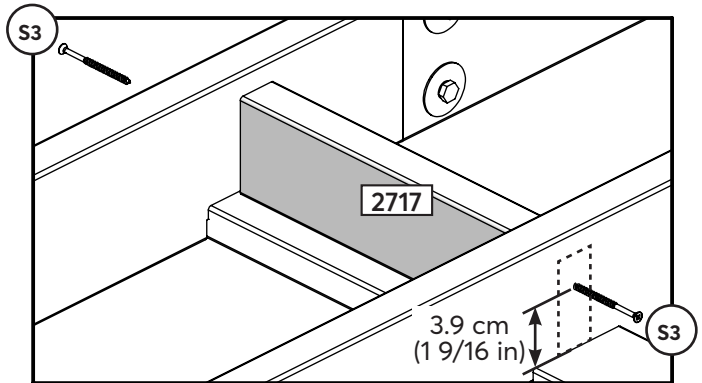



Pre-drill holes using a 1/8" drill bit.

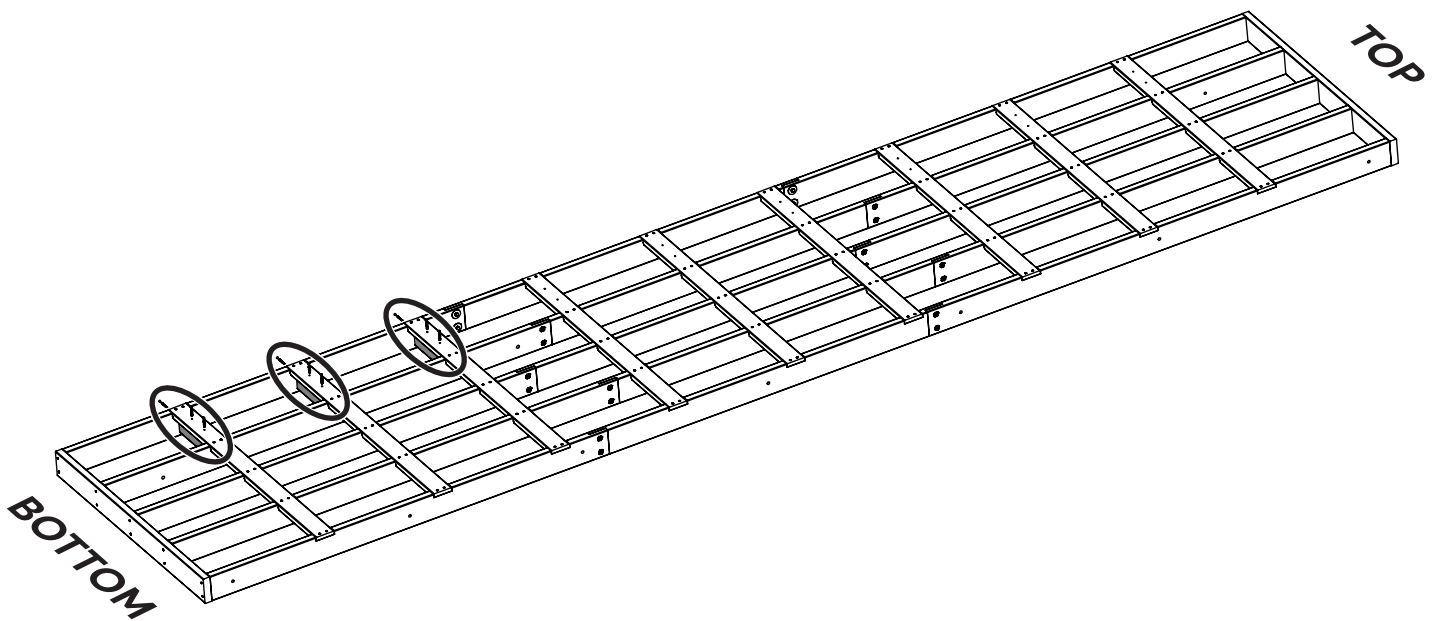


Wood Parts
3 x 2717

Hardware
12 x S3

Top View

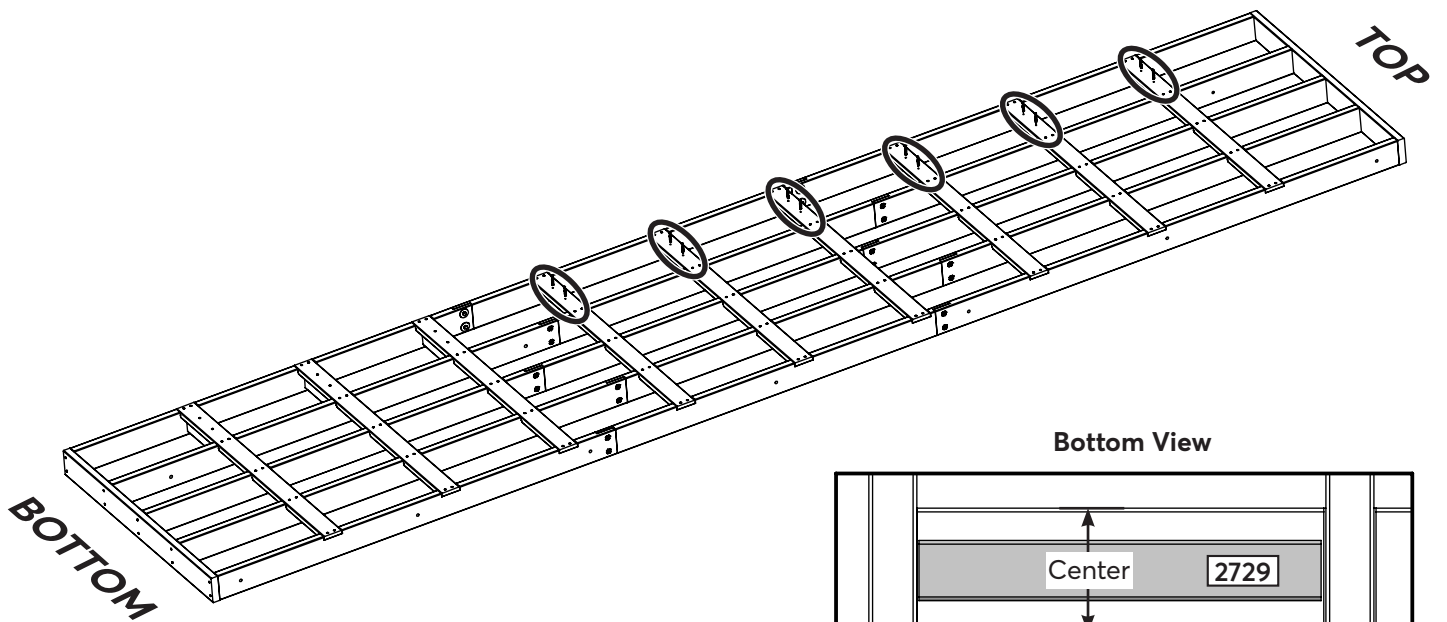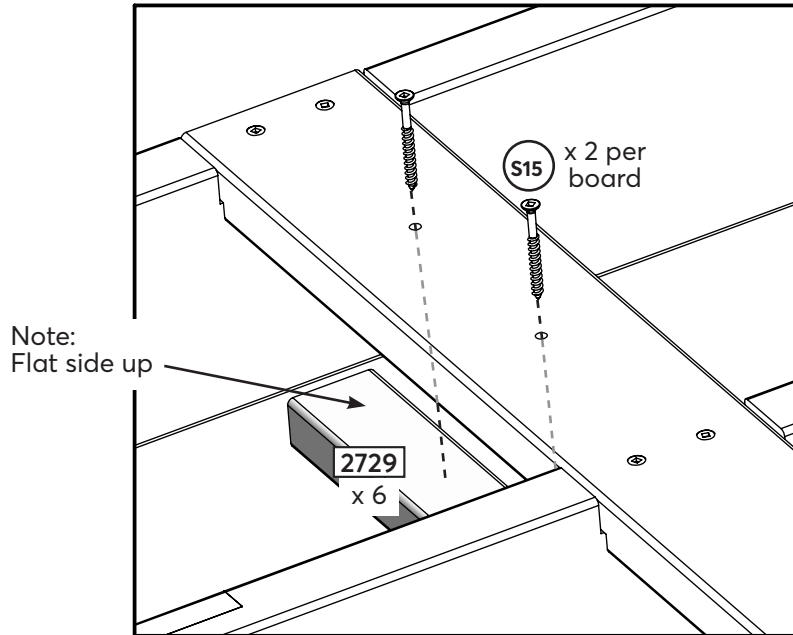

Bottom View

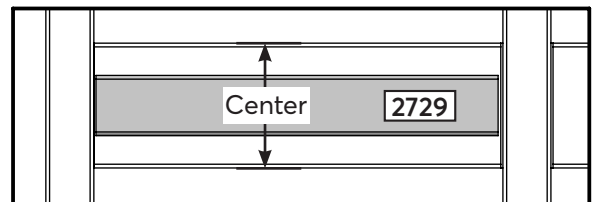


Wood Parts
6 x 2729

Hardware
12 x S15

65 Left Roof Frame Assembly

Note bolt orientation

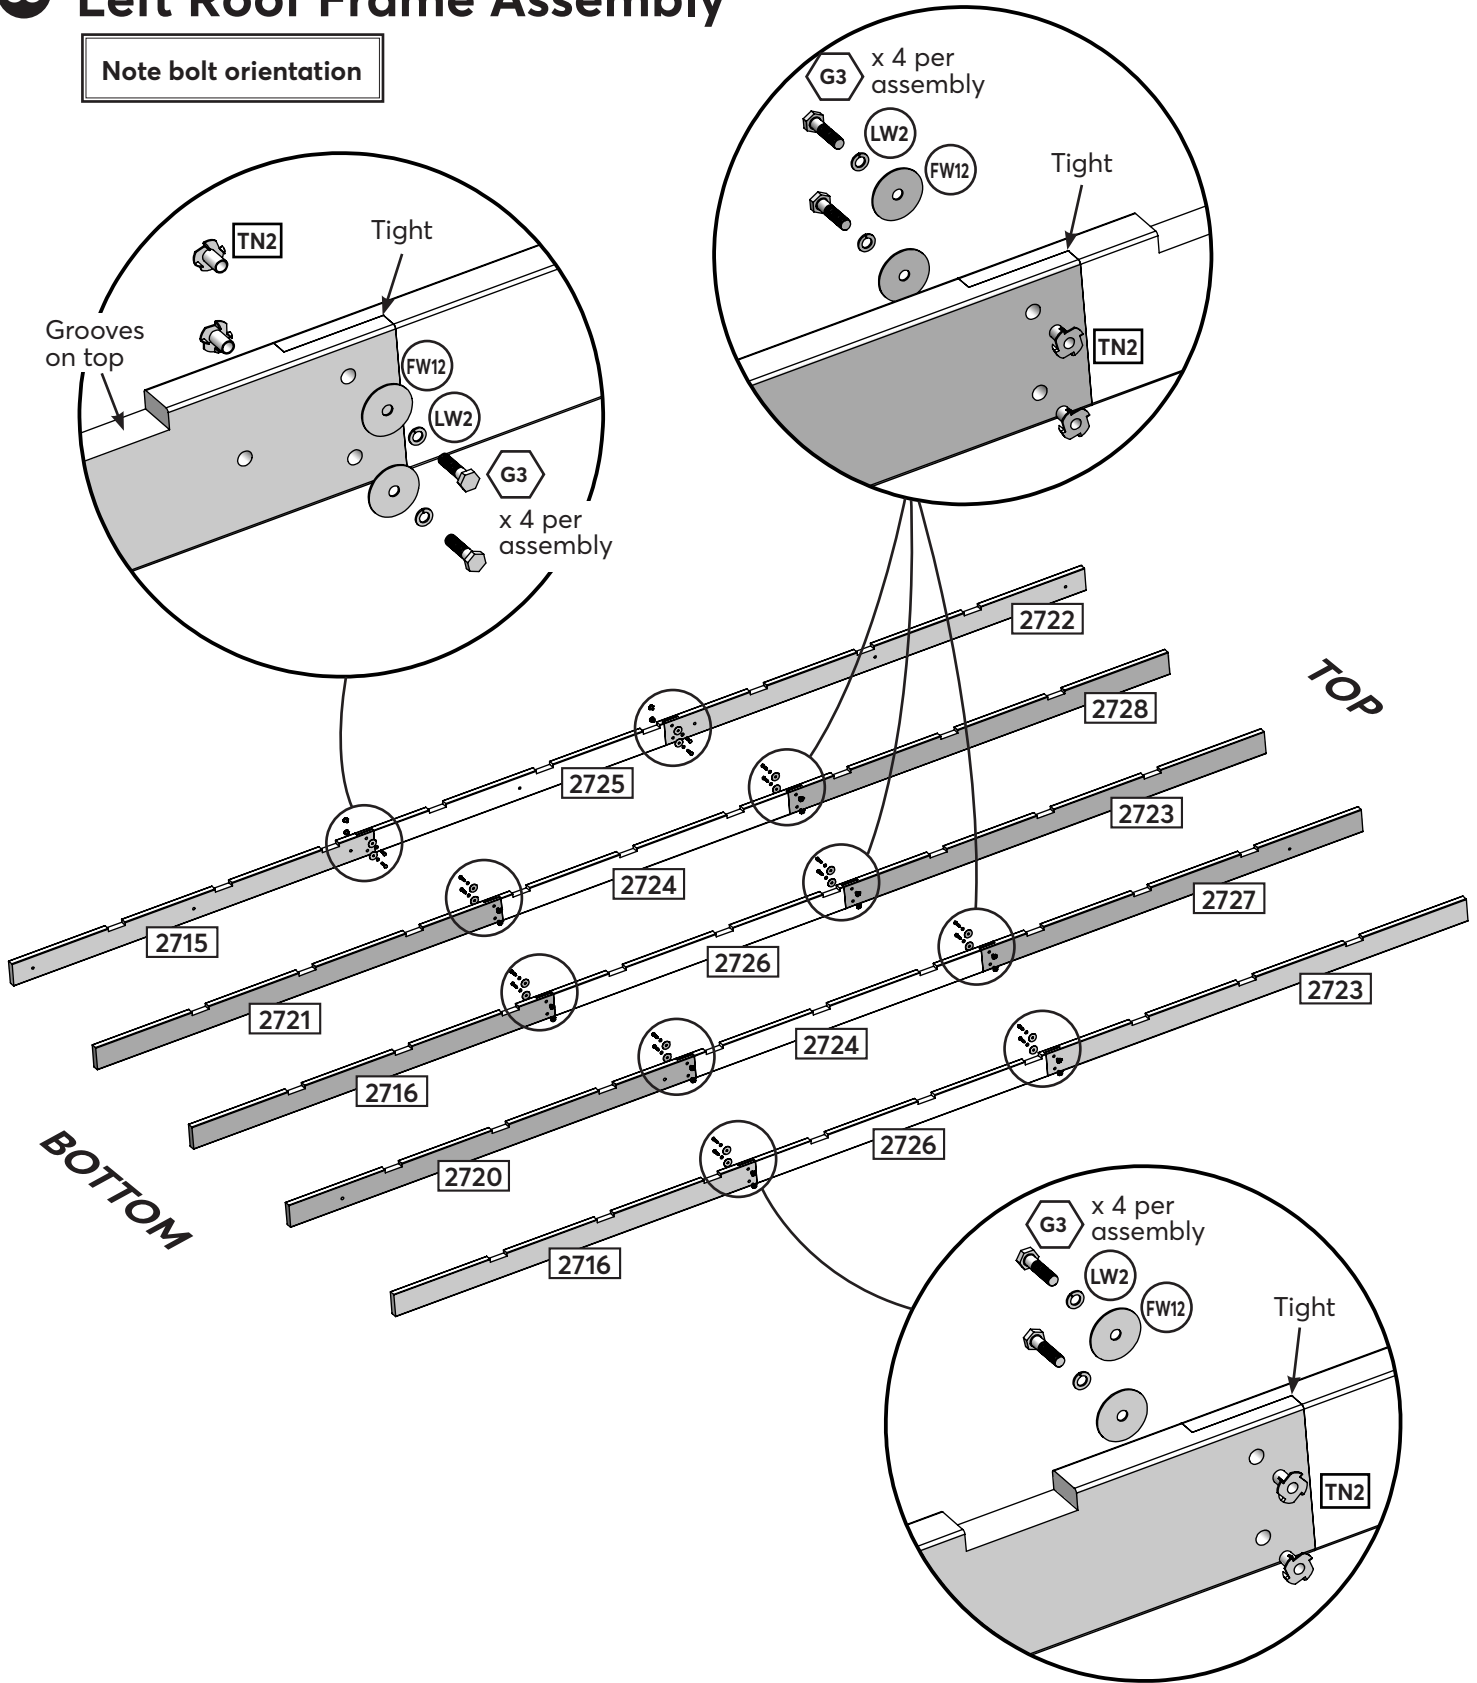


Wood Parts

1 x 2715	1 x 2721	2 x 2724	1 x 2727
2 x 2716	1 x 2722	1 x 2725	1 x 2728
1 x 2720	2 x 2723	2 x 2726	

Hardware

20 x G3 (FW12, LW2, TN2)

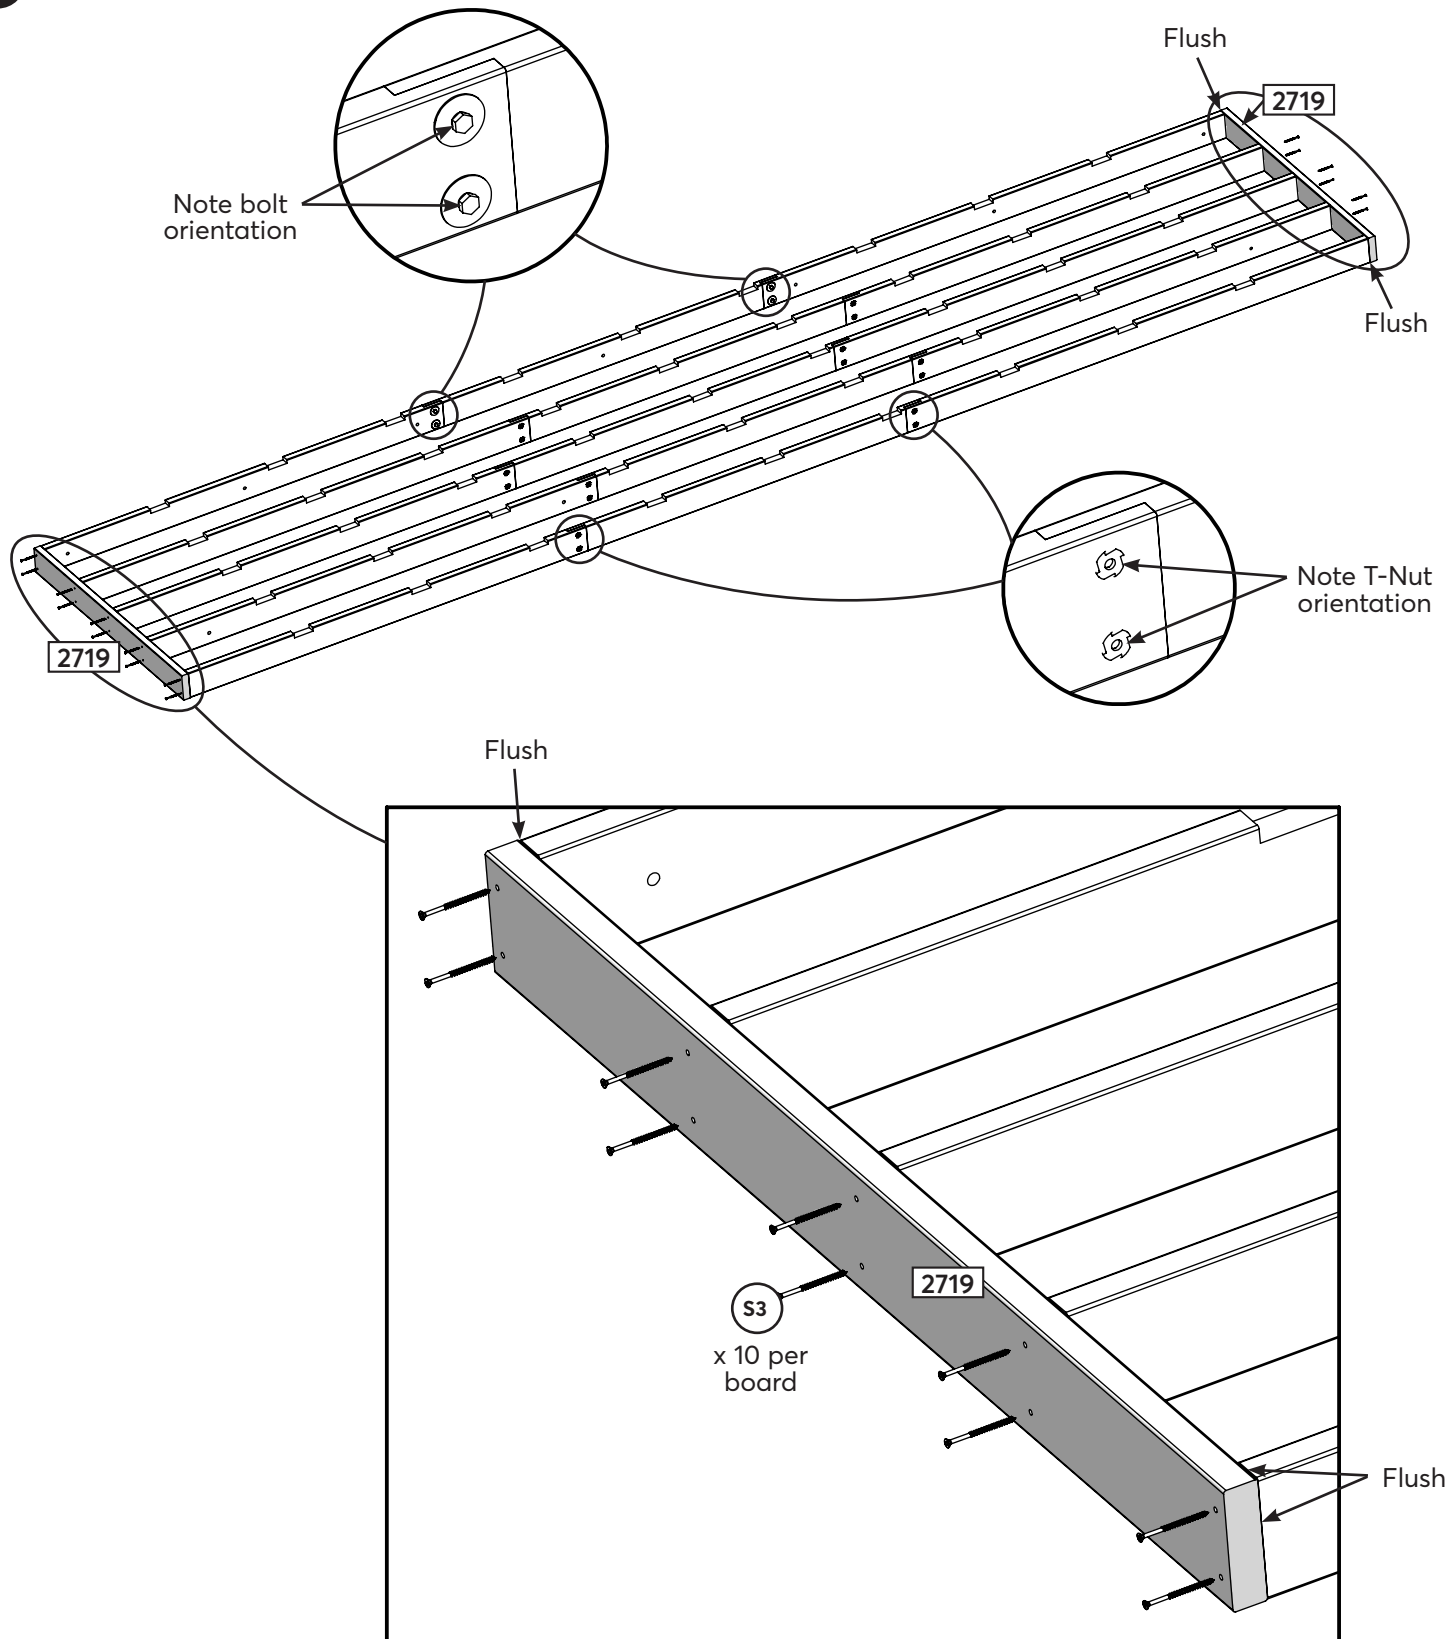

Wood Parts
2 x 2719


Hardware
20 x S3



67 Check Frame Dimensions



Make sure the Rafter Assembly is square.



The diagonal distance between the corners of the Frame's are 5.61 m (18 ft 4-7/8 in).

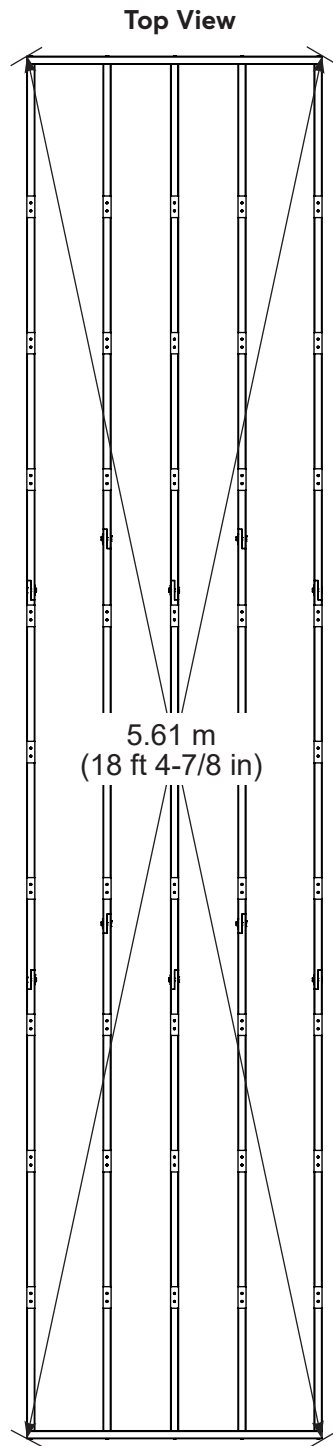

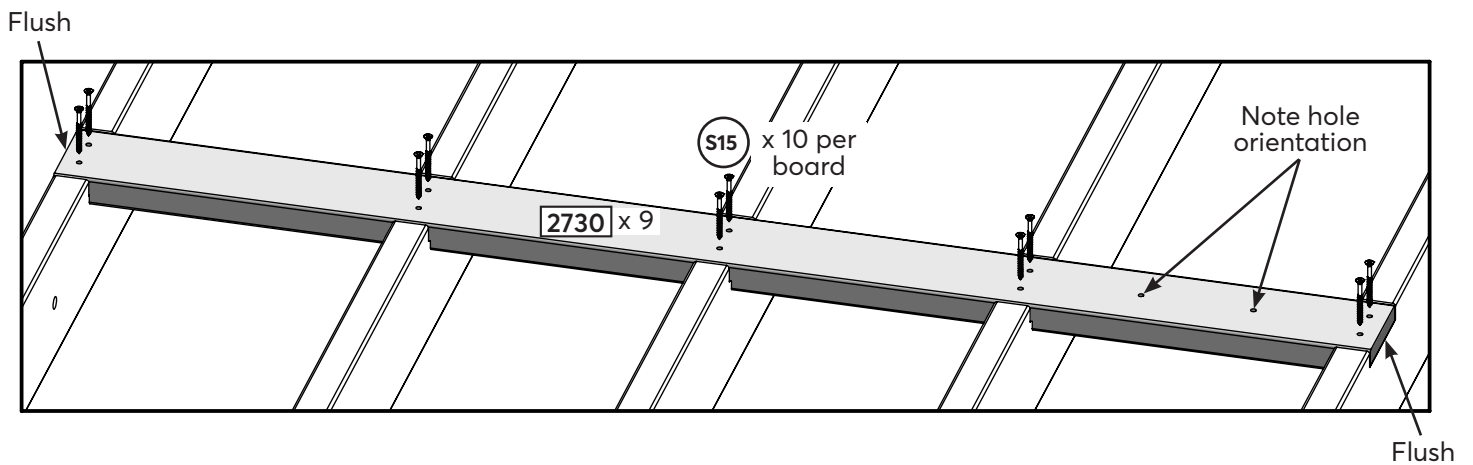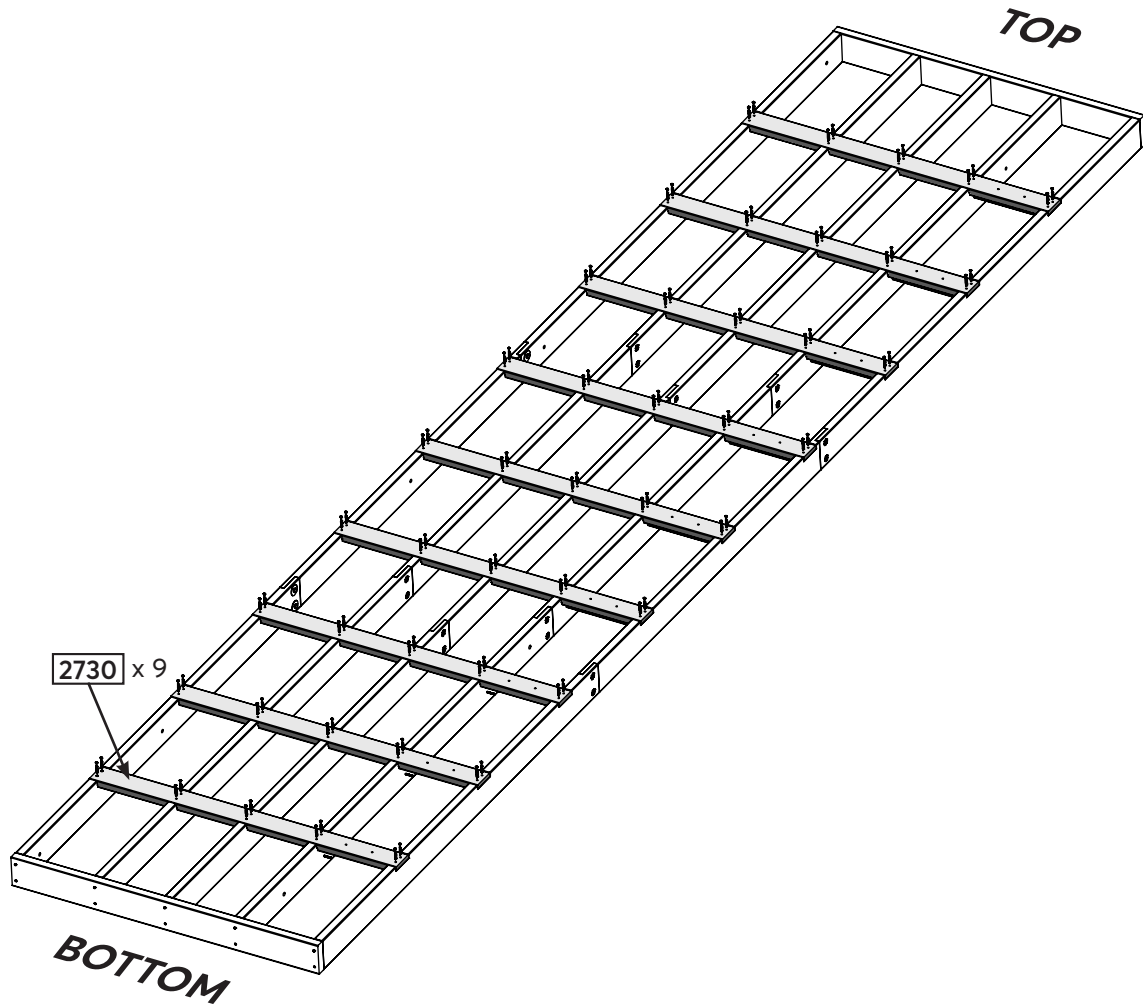


Wood Parts
9 x 2730


Hardware
90 x S15

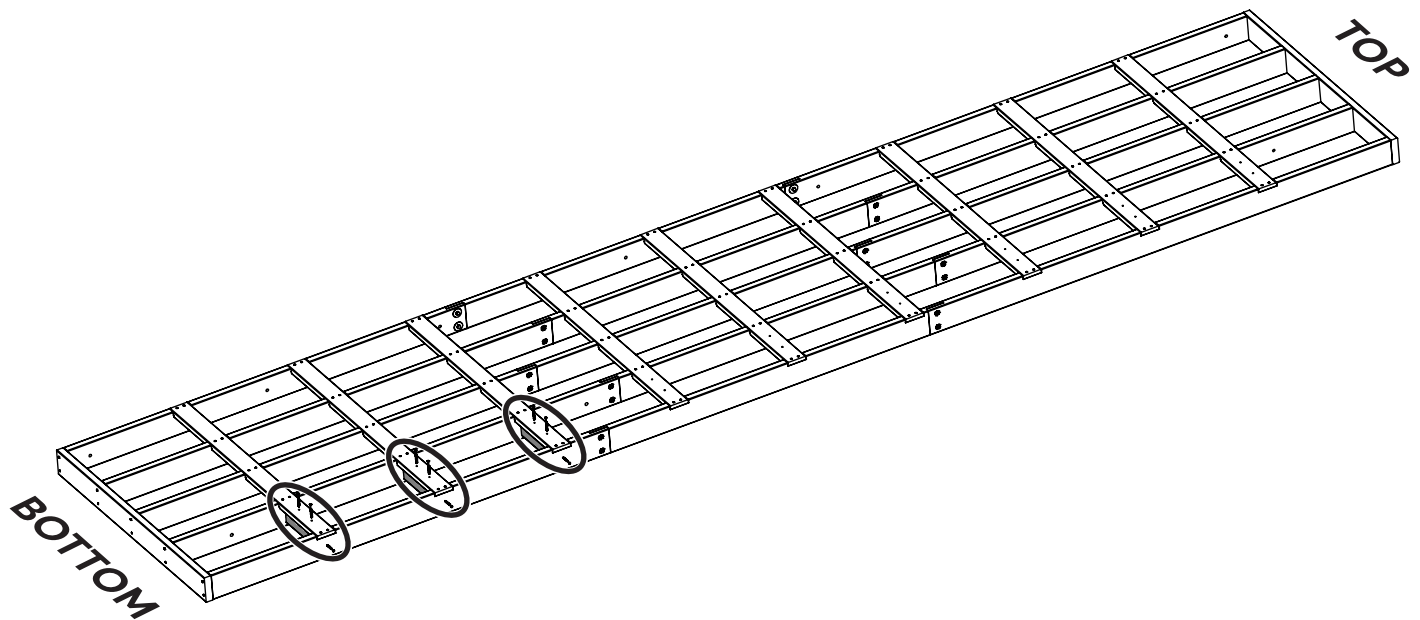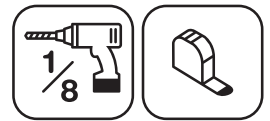

Top View

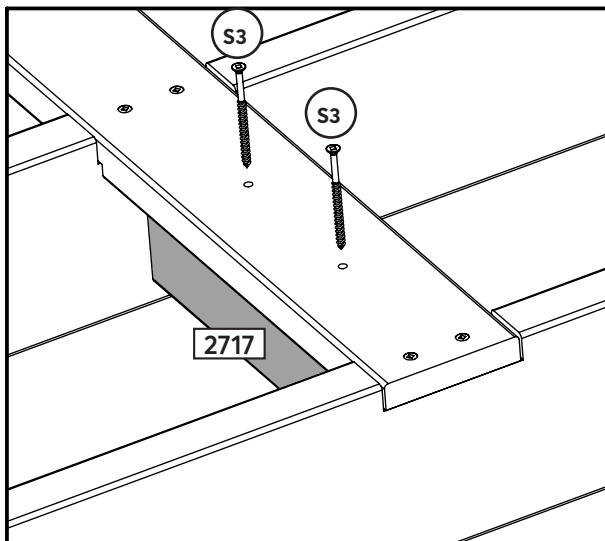

Bottom View

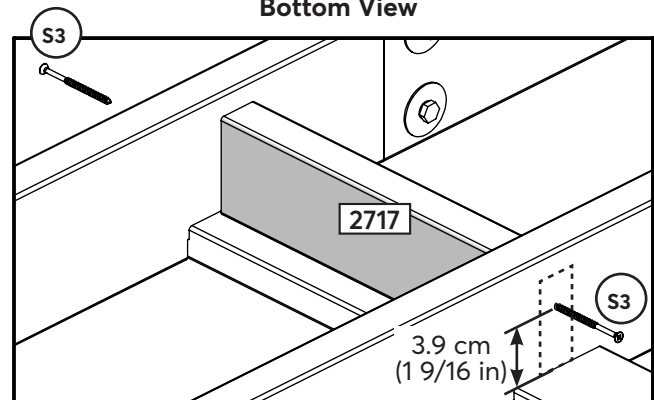


Pre-drill holes using a 1/8" drill bit.

Wood Parts


3 x 2717

Hardware


12 x S3

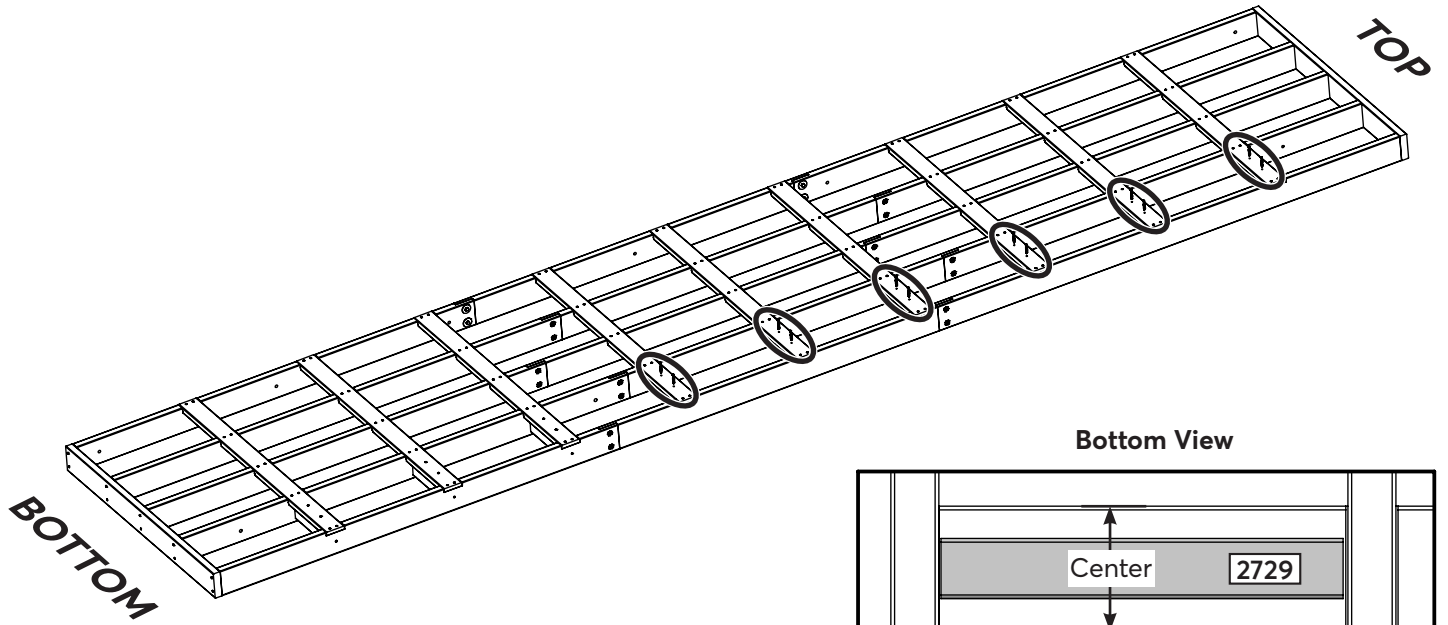

Bottom View

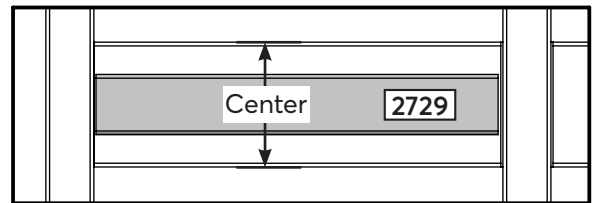

Top View

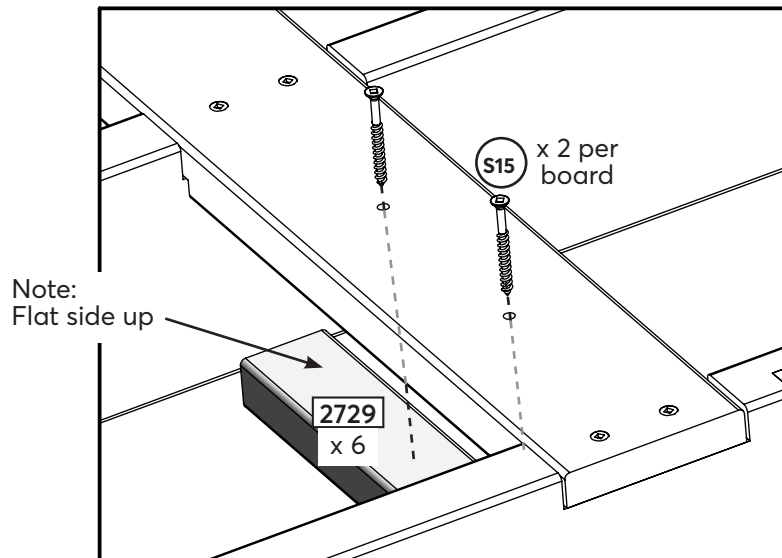


Wood Parts
6 x 2729

Hardware
12 x S15

71 Mid Roof Frame Assembly

Note bolt orientation

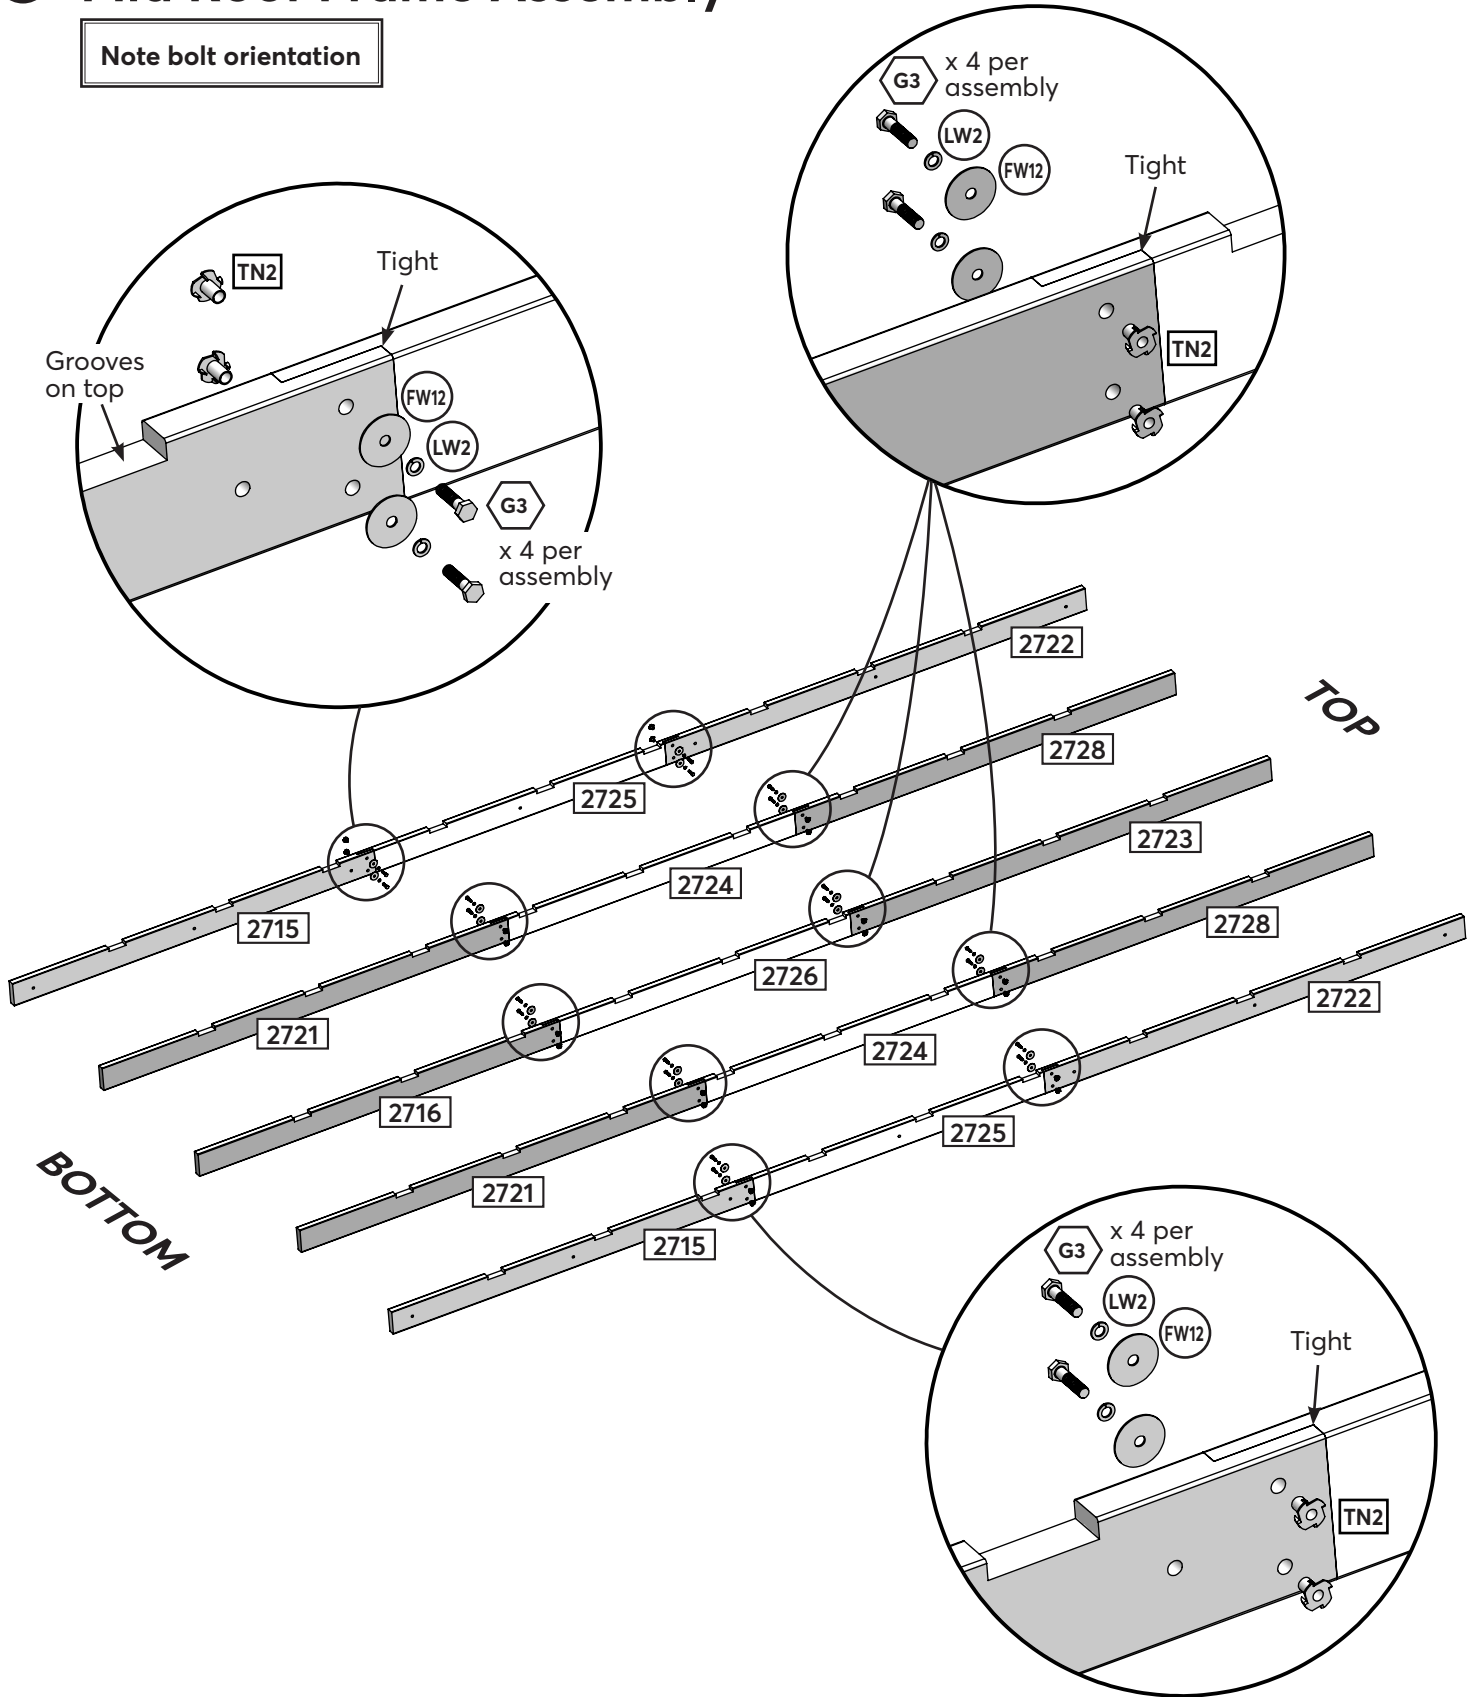


Wood Parts

2 x 2715	2 x 2722	2 x 2725
1 x 2716	1 x 2723	1 x 2726
2 x 2721	2 x 2724	2 x 2728

Hardware

20 x G3 (FW12, LW2, TN2)

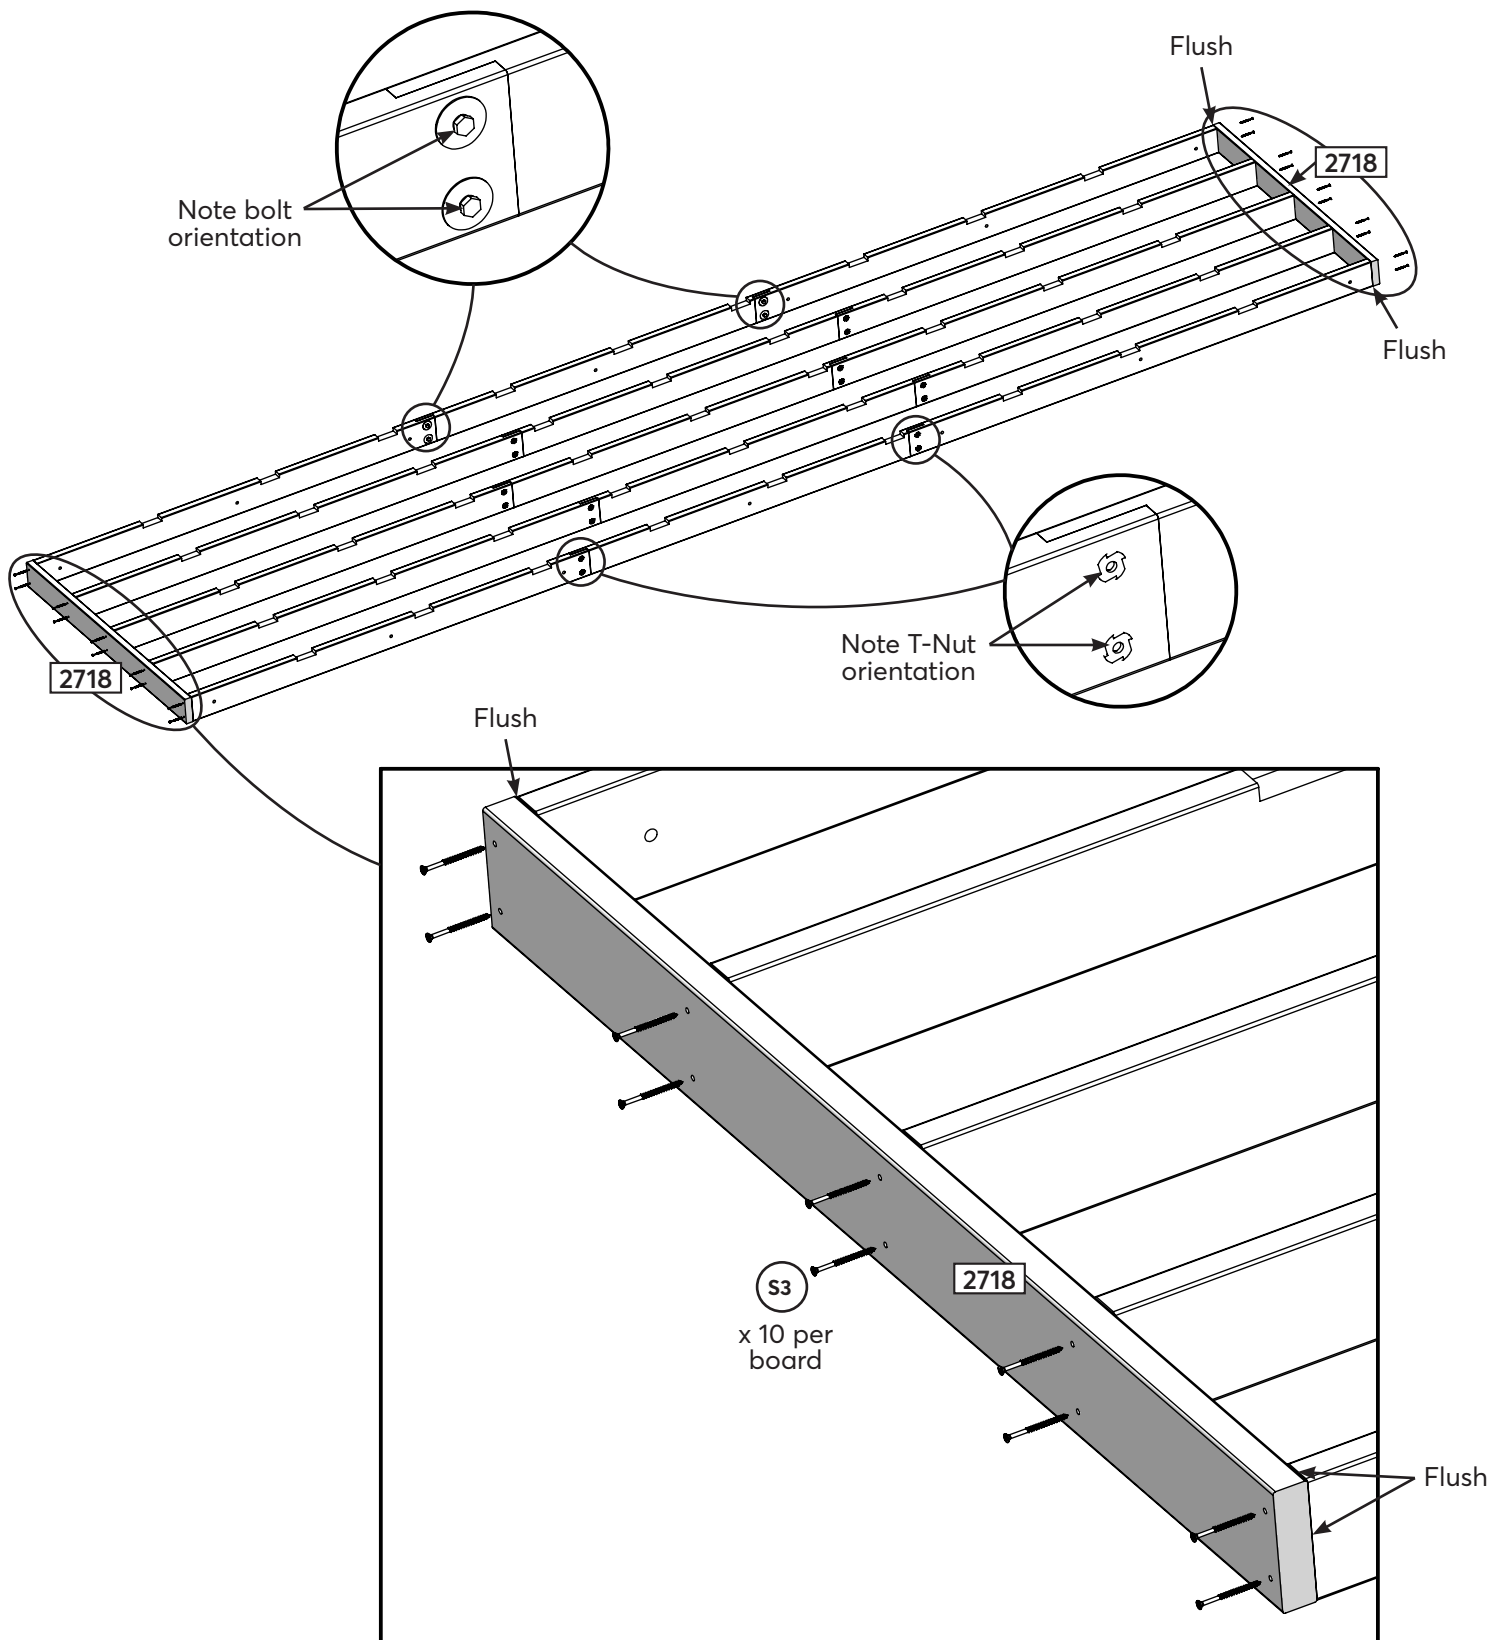

Wood Parts
2 x 2718

Hardware
20 x S3


73 Check Frame Dimensions





Make sure the Rafter Assembly is square.

The diagonal distance between the corners of the Frame's are 5.63 m (18 ft 5-5/8 in).





Top View

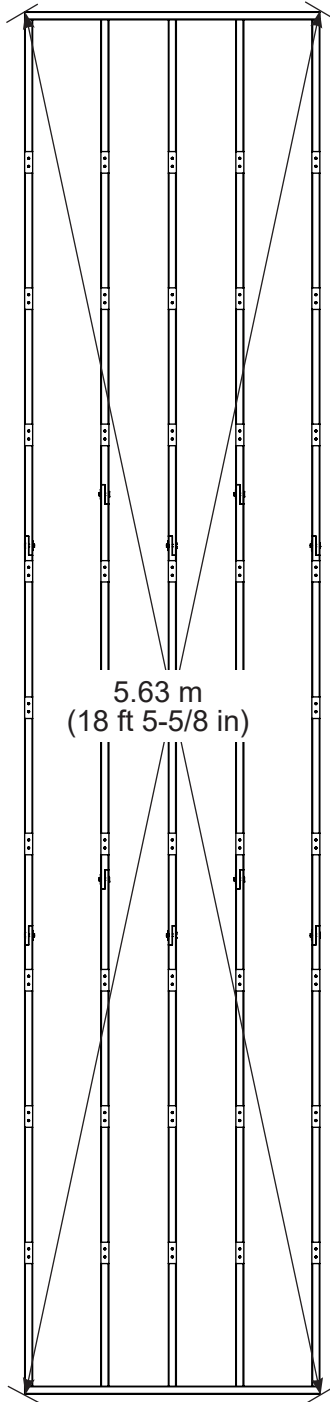

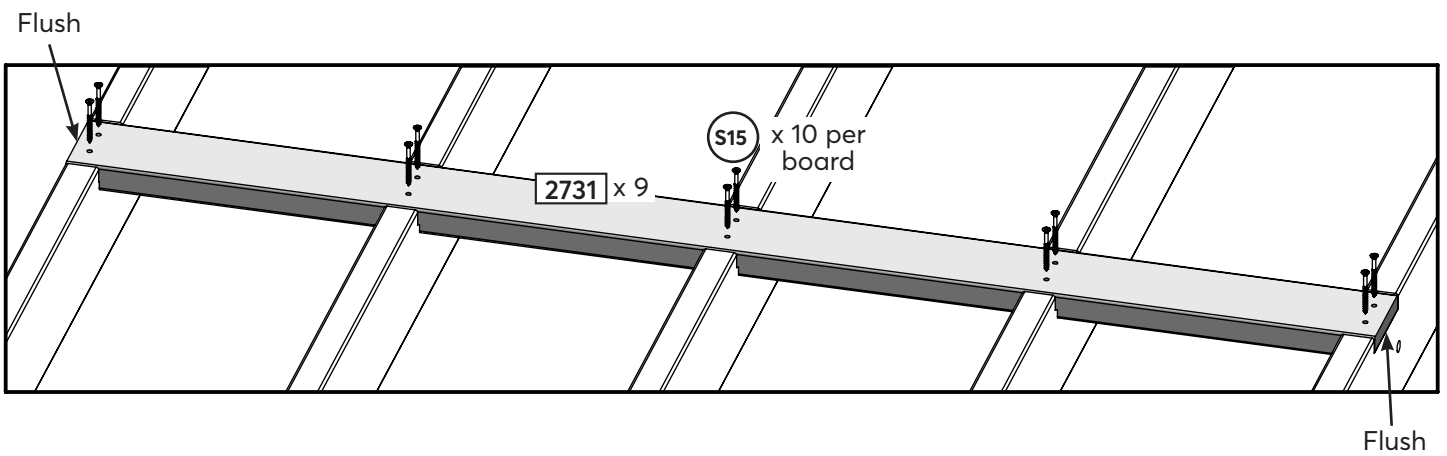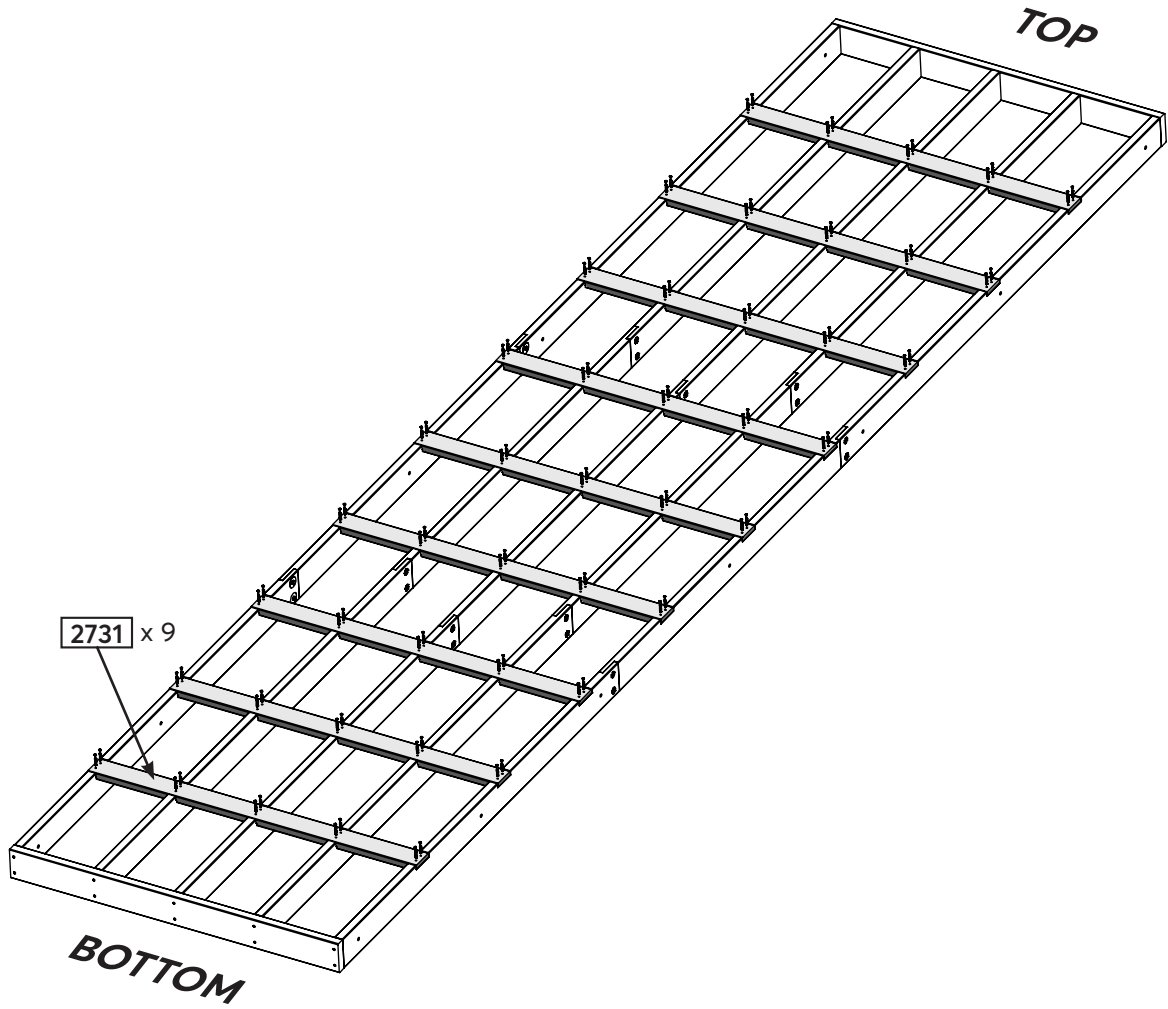

Wood Parts
9 x 2731

Hardware
90 x S15

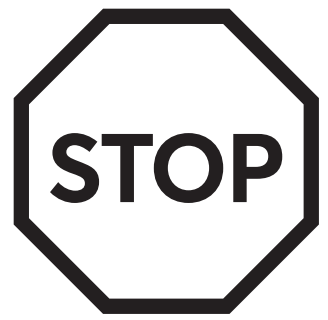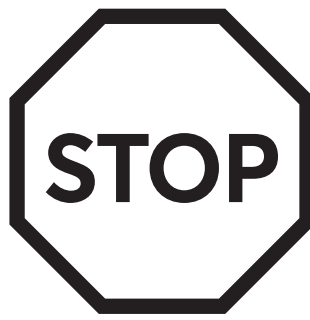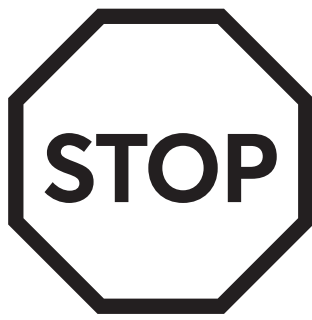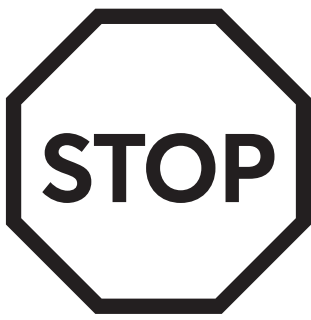

INSTALLING ROOFING MATERIAL



CAUTION!

Roofing material may have sharp edges! Wear gloves!





HANDLE WITH CARE!

Place roofing material on a non-abrasive surface before assembly as it can bend, dent and scratch easily.

WARNING – DO NOT OVER TIGHTEN ROOFING SCREWS!
Over tightening screws will cause roofing material to crush.

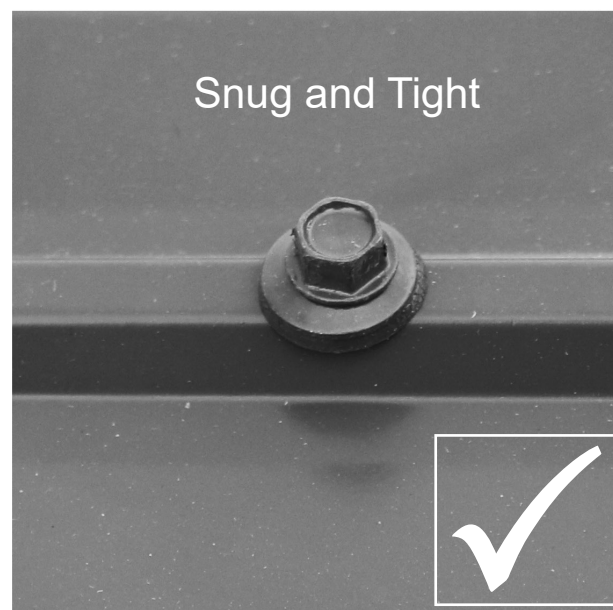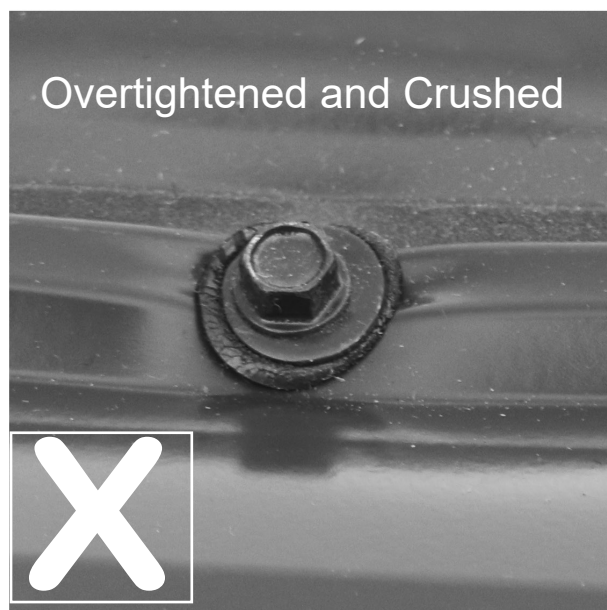

The roofing screws can easily crush the Roof Panels and Roof Edges when using a power drill. We recommend hand tightening the roofing screws so that they sit snug and tight to the roofing material.

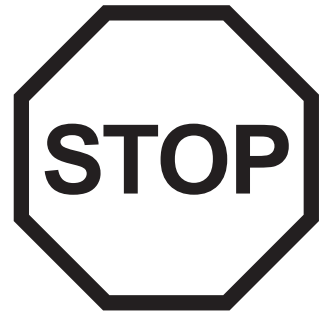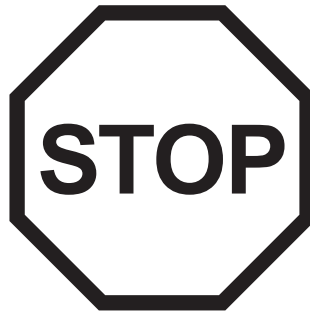
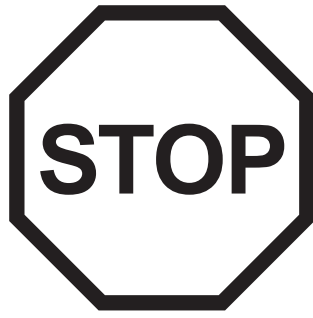
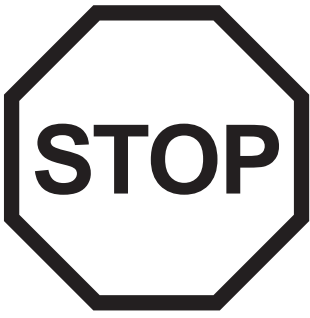


INSTALLING ROOFING MATERIAL



CAUTION!

Roofing material may have sharp edges! Wear gloves!

BE SURE TO REMOVE ALL PLASTIC COVERING, ON BOTH SIDES OF THE ALUMINUM PANELS AND TRIM, DIRECTLY BEFORE INSTALLING EACH PIECE.

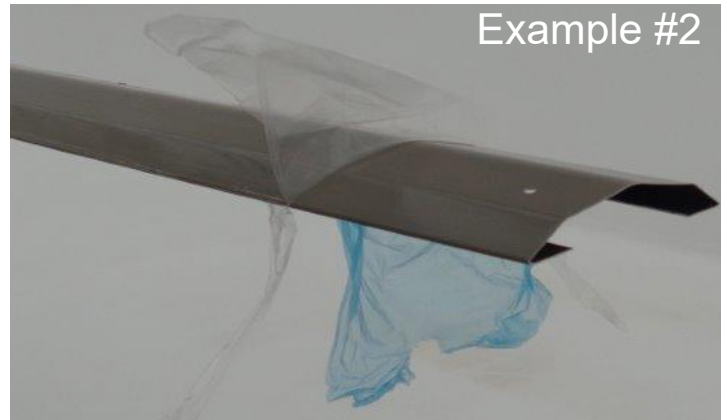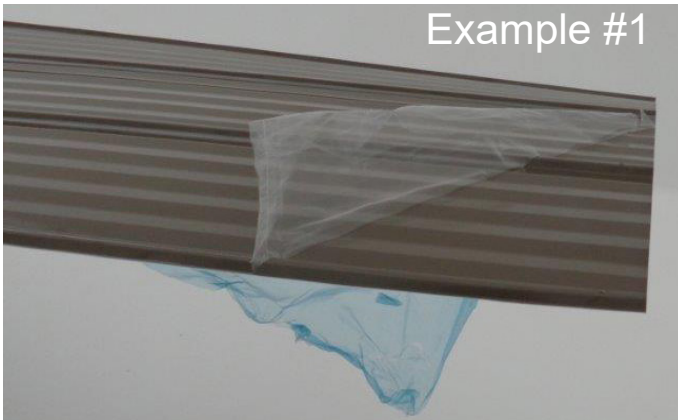


NOTE: If film is difficult to remove, spray a mixture of dish soap and water continuously between the film and the panel and peel back slowly.

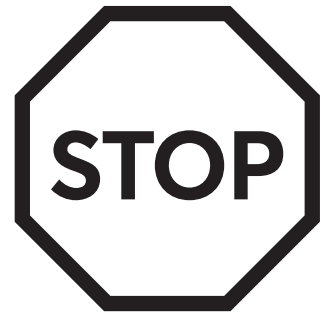
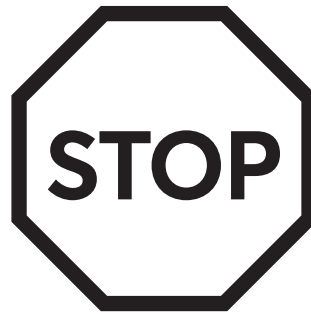


INSTALLING ROOFING MATERIAL

ROOF PANEL B


ROOF PANEL A

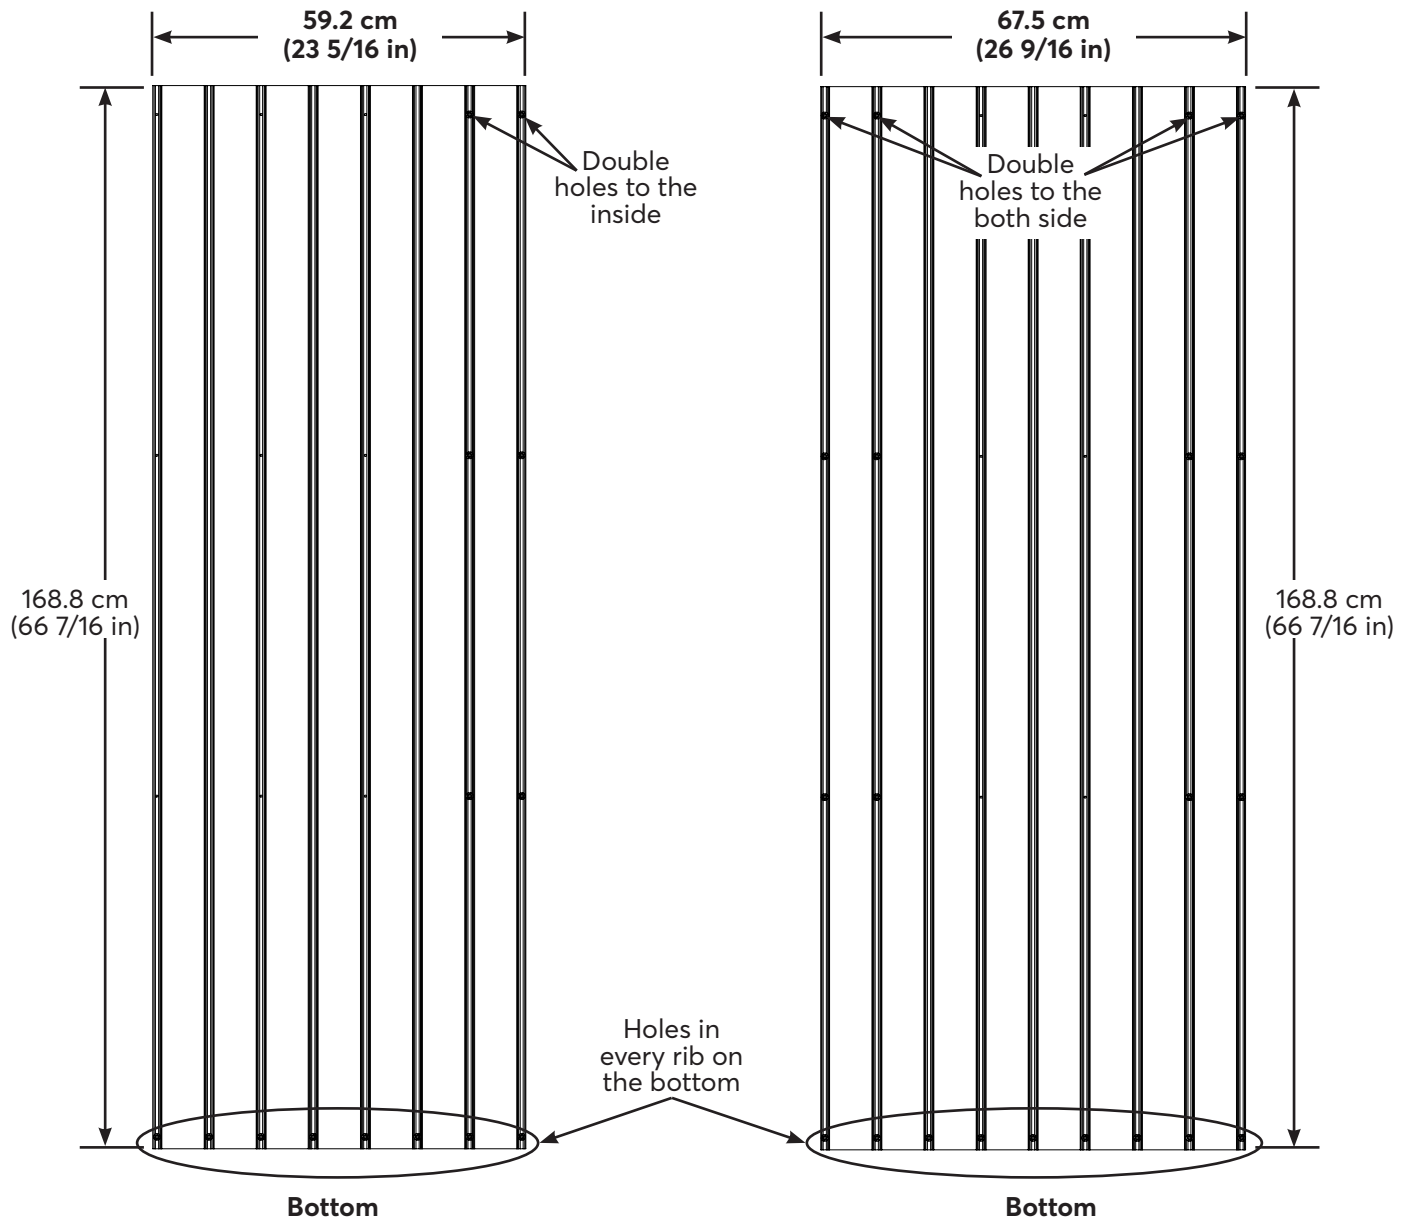

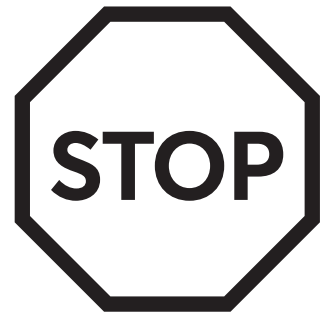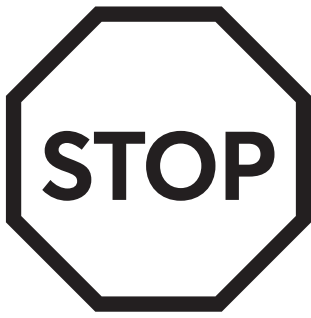


INSTALLING ROOFING MATERIAL

ROOF PANEL D

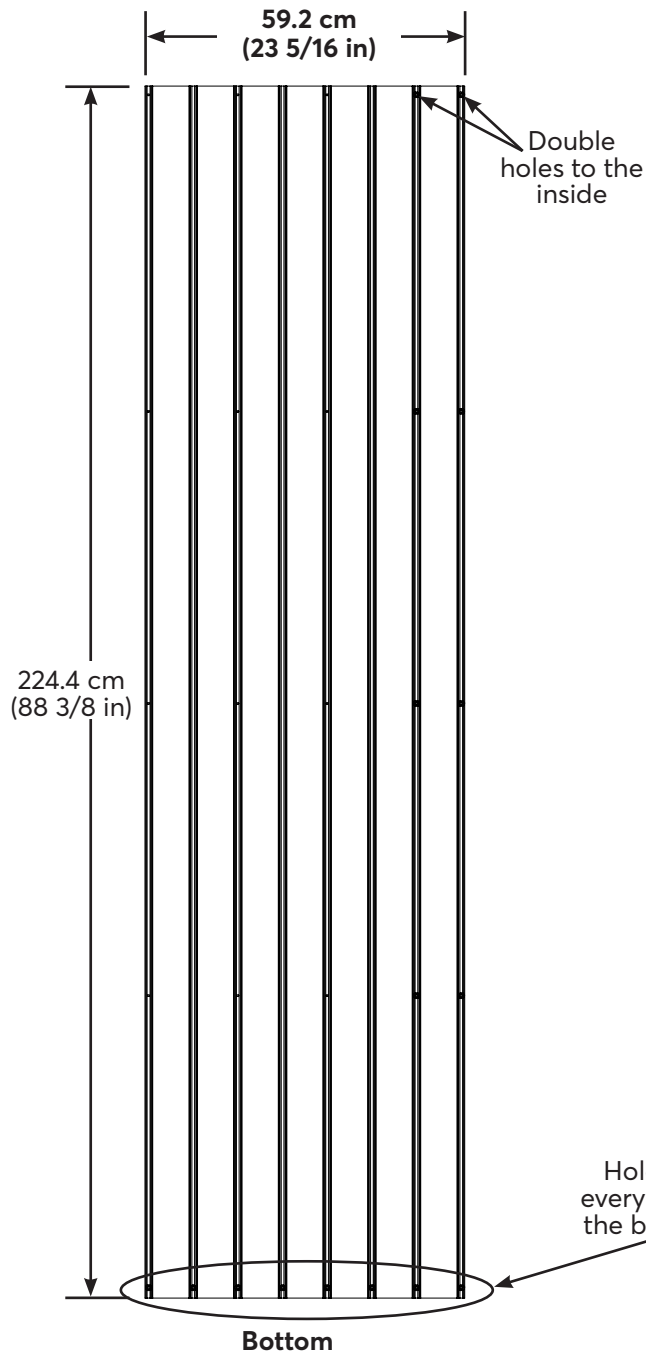

ROOF PANEL C

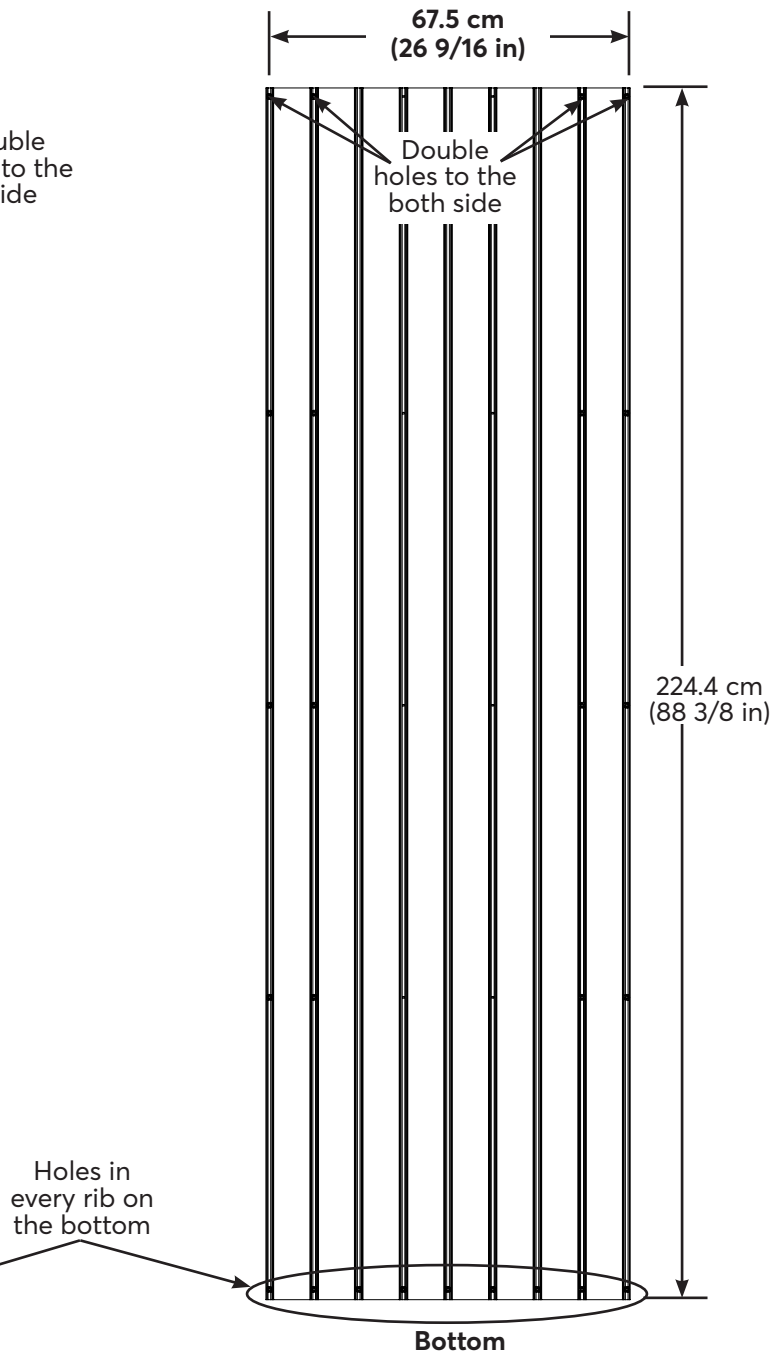

75 Roof Assembly



Work through Step 75 - 84, doing one panel at a time.

Note hole orientation on the Roof Panels.

Place Roof Panels on top of Roof Panel Assembly.


Refer to pages 95/96 for Roof Panel Identification.

On the left side of Roof Panel A between the first two ribs apply a small, evenly distributed bead of sealant over the perimeter of the flat surface.

Note: All surfaces to be clean, dry, dust and grease free before application with temperatures above 5°C (41°F), no warmer than 35°C (95°F).

- Apply sealant in small beads and smooth as required.
- Clean excess with a cloth or paper towel before it skins over.
- Always wear safety glasses and rubber gloves when using product.

See page 6 for Warning and First Aid Information.

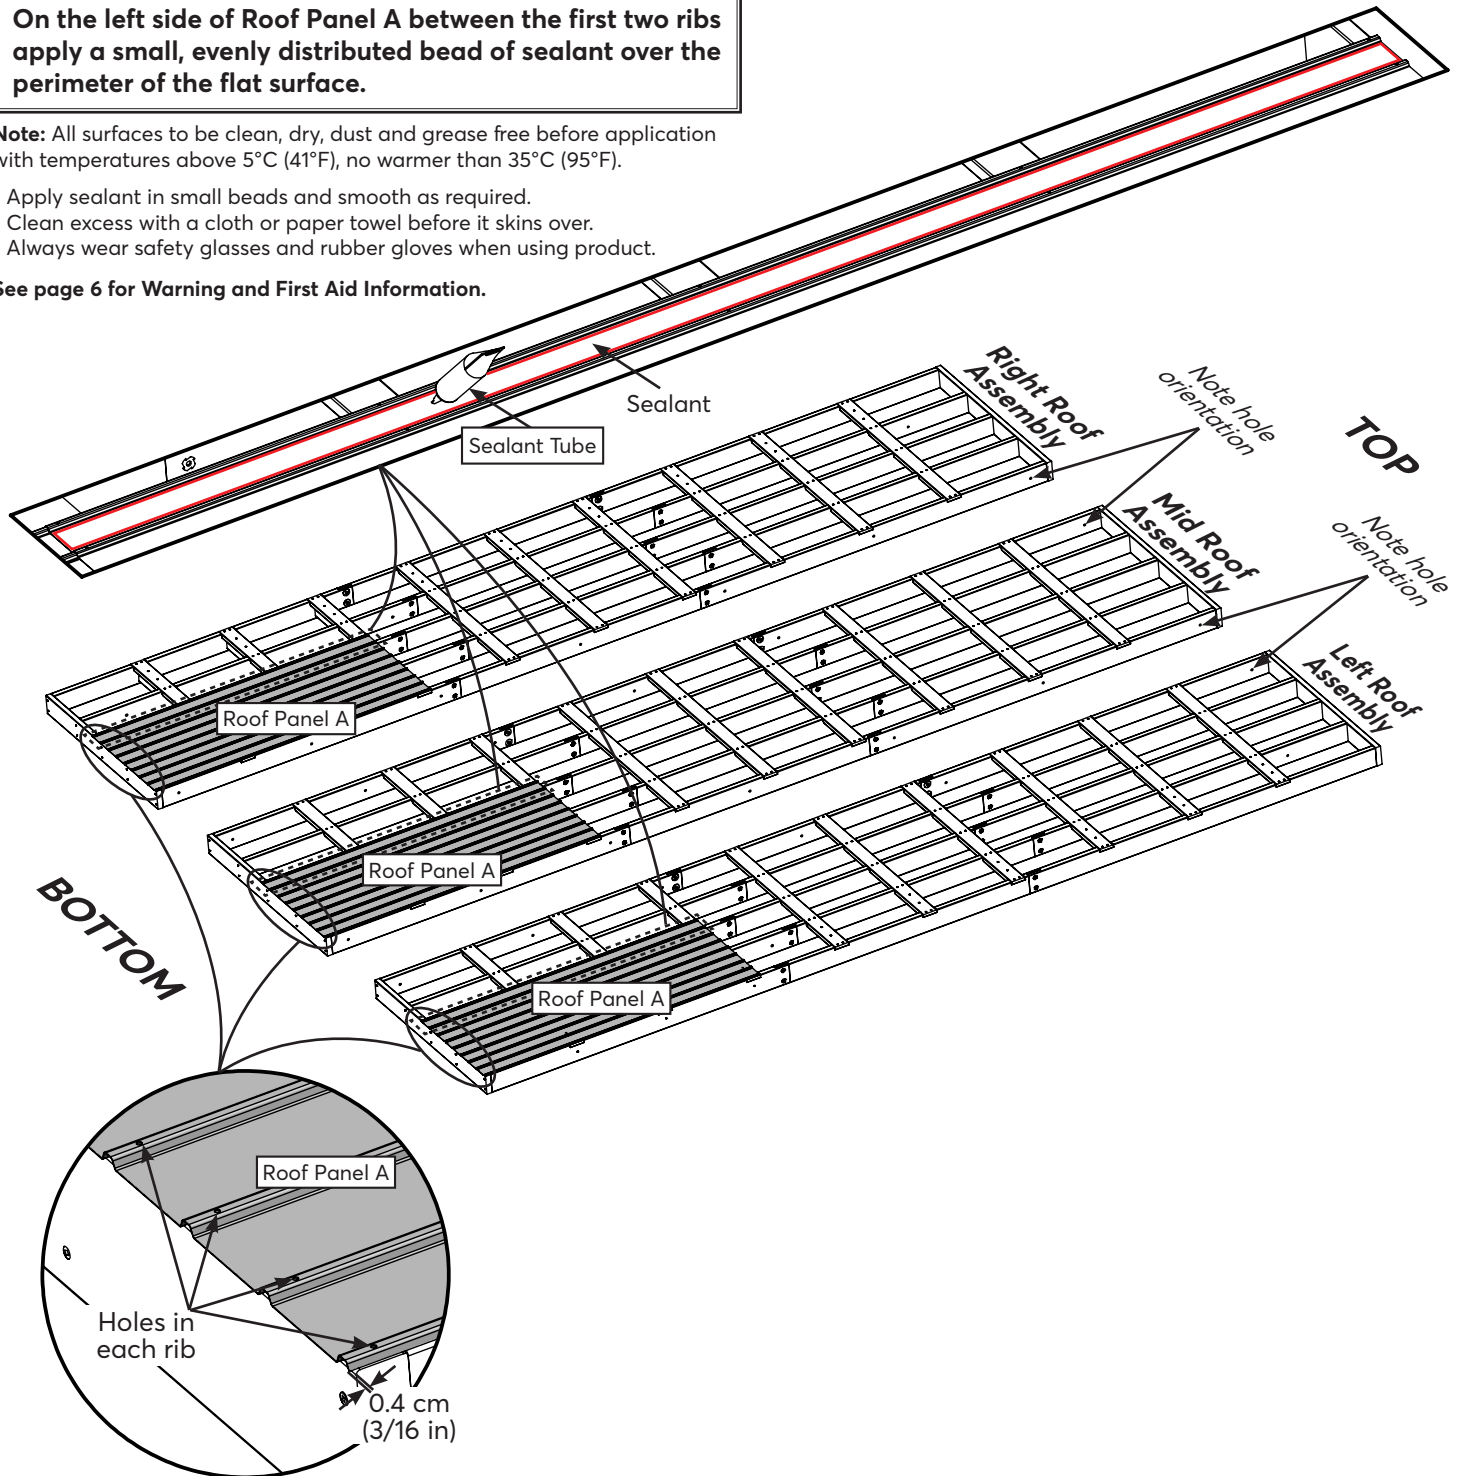

Components

3 x Roof Panel A
1 x Sealant Tube



Refer to pages 95/96 for Roof Panel Identification.


Across the top of Roof Panel A and Roof Panel

B apply two small, evenly distributed beads of sealant 1-1/2 in apart.

Note: All surfaces to be clean, dry, dust and grease free before application with temperatures above 5°C (41°F), no warmer than 35°C (95°F).

- Apply sealant in small beads and smooth as required.
- Clean excess with a cloth or paper towel before it skins over.
- Always wear safety glasses and rubber gloves when using product.

See page 6 for Warning and First Aid Information.

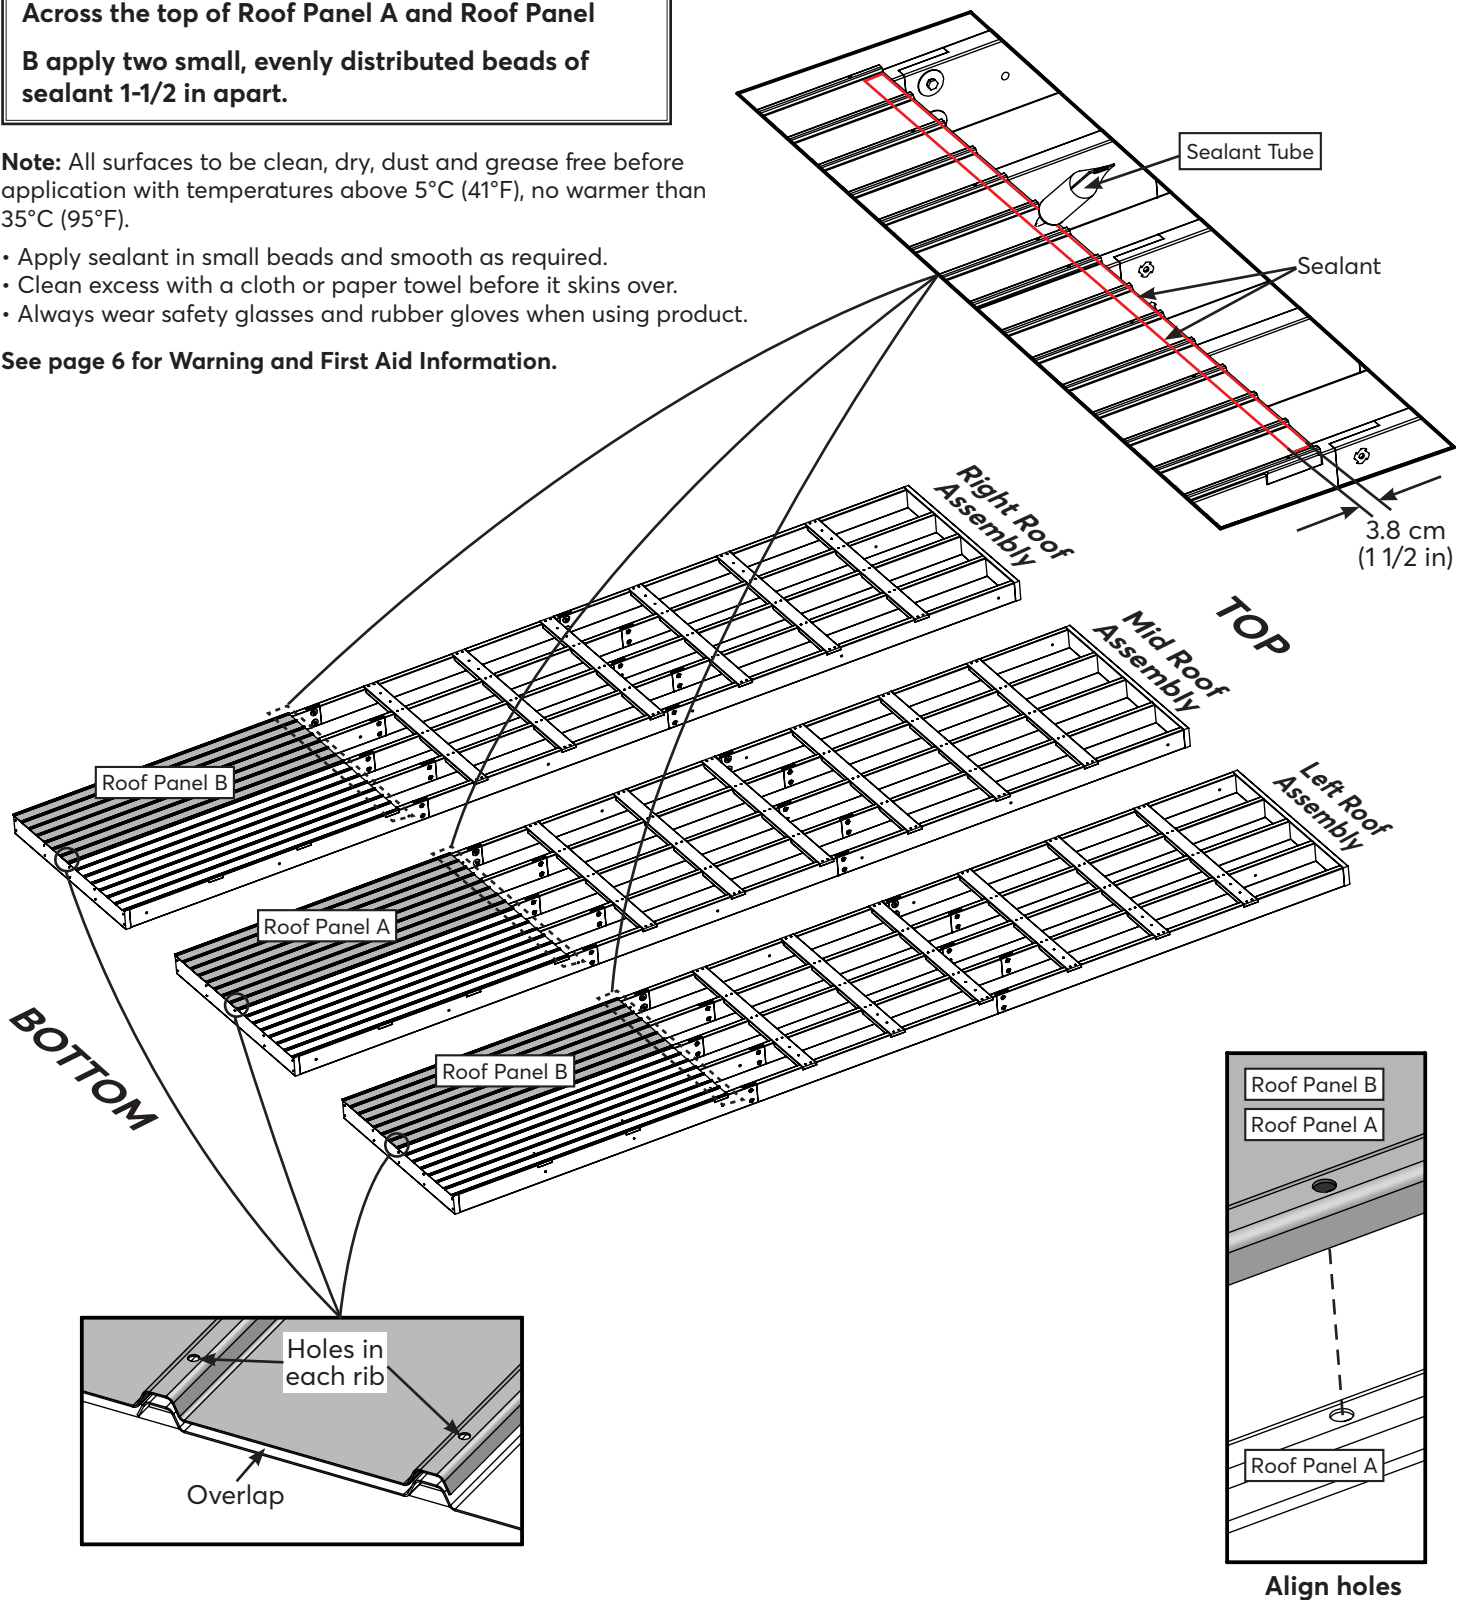

Components

2 x Roof Panel B

1 x Roof Panel A


Refer to pages 95/96 for Roof Panel Identification.

On the left side of Flat Roof Panel A between the first two ribs apply a small, evenly distributed bead of sealant over the perimeter of the flat surface.

Note: All surfaces to be clean, dry, dust and grease free before application with temperatures above 5°C (41°F), no warmer than 35°C (95°F).

- Apply sealant in small beads and smooth as required.
- Clean excess with a cloth or paper towel before it skins over.
- Always wear safety glasses and rubber gloves when using product.

See page 6 for Warning and First Aid Information.

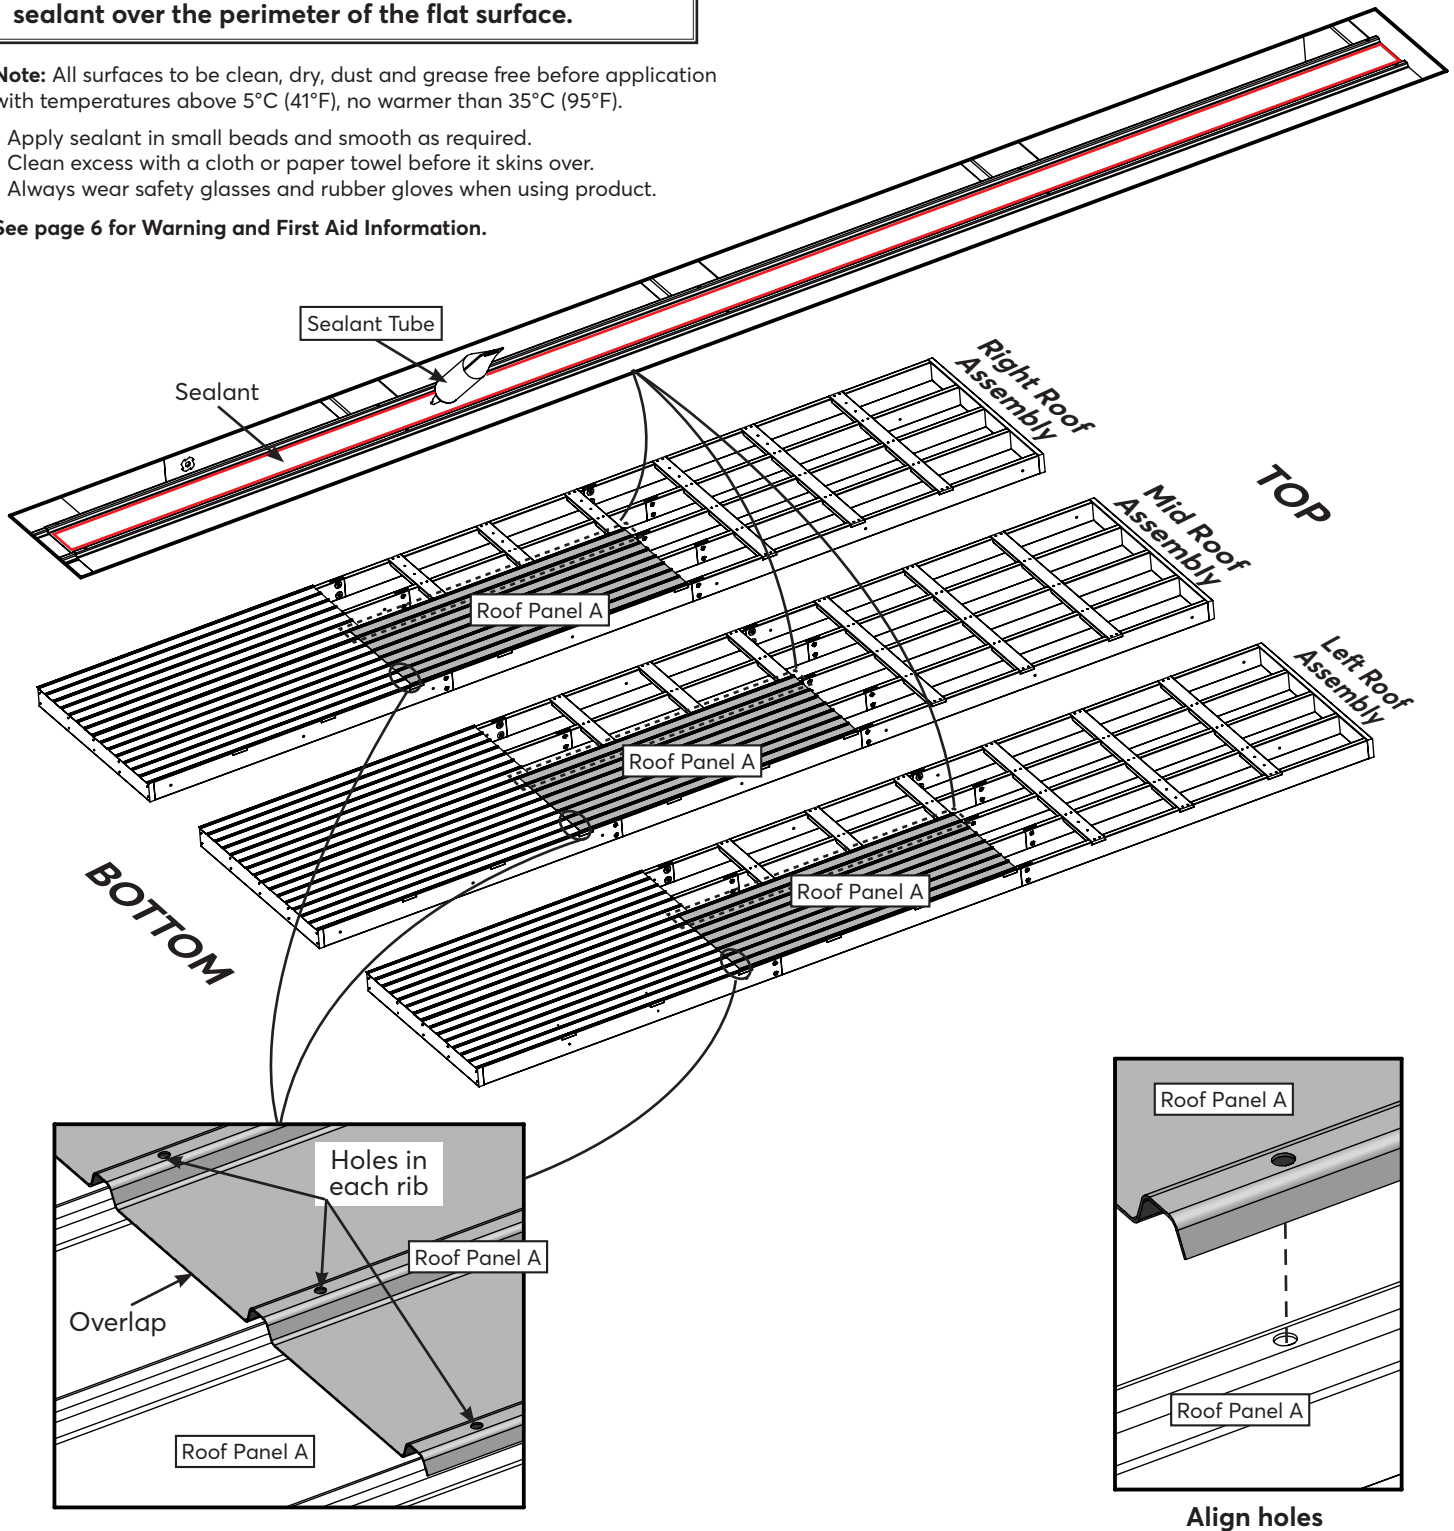

Components

3 x Roof Panel A




Refer to pages 95/96 for Roof Panel Identification.

Across the top of Roof Panel A and Roof Panel B apply two small, evenly distributed beads of sealant 1-1/2 in apart.

Note: All surfaces to be clean, dry, dust and grease free before application with temperatures above 5°C (41°F), no warmer than 35°C (95°F).

- Apply sealant in small beads and smooth as required.
- Clean excess with a cloth or paper towel before it skins over.
- Always wear safety glasses and rubber gloves when using product.

See page 6 for Warning and First Aid Information.

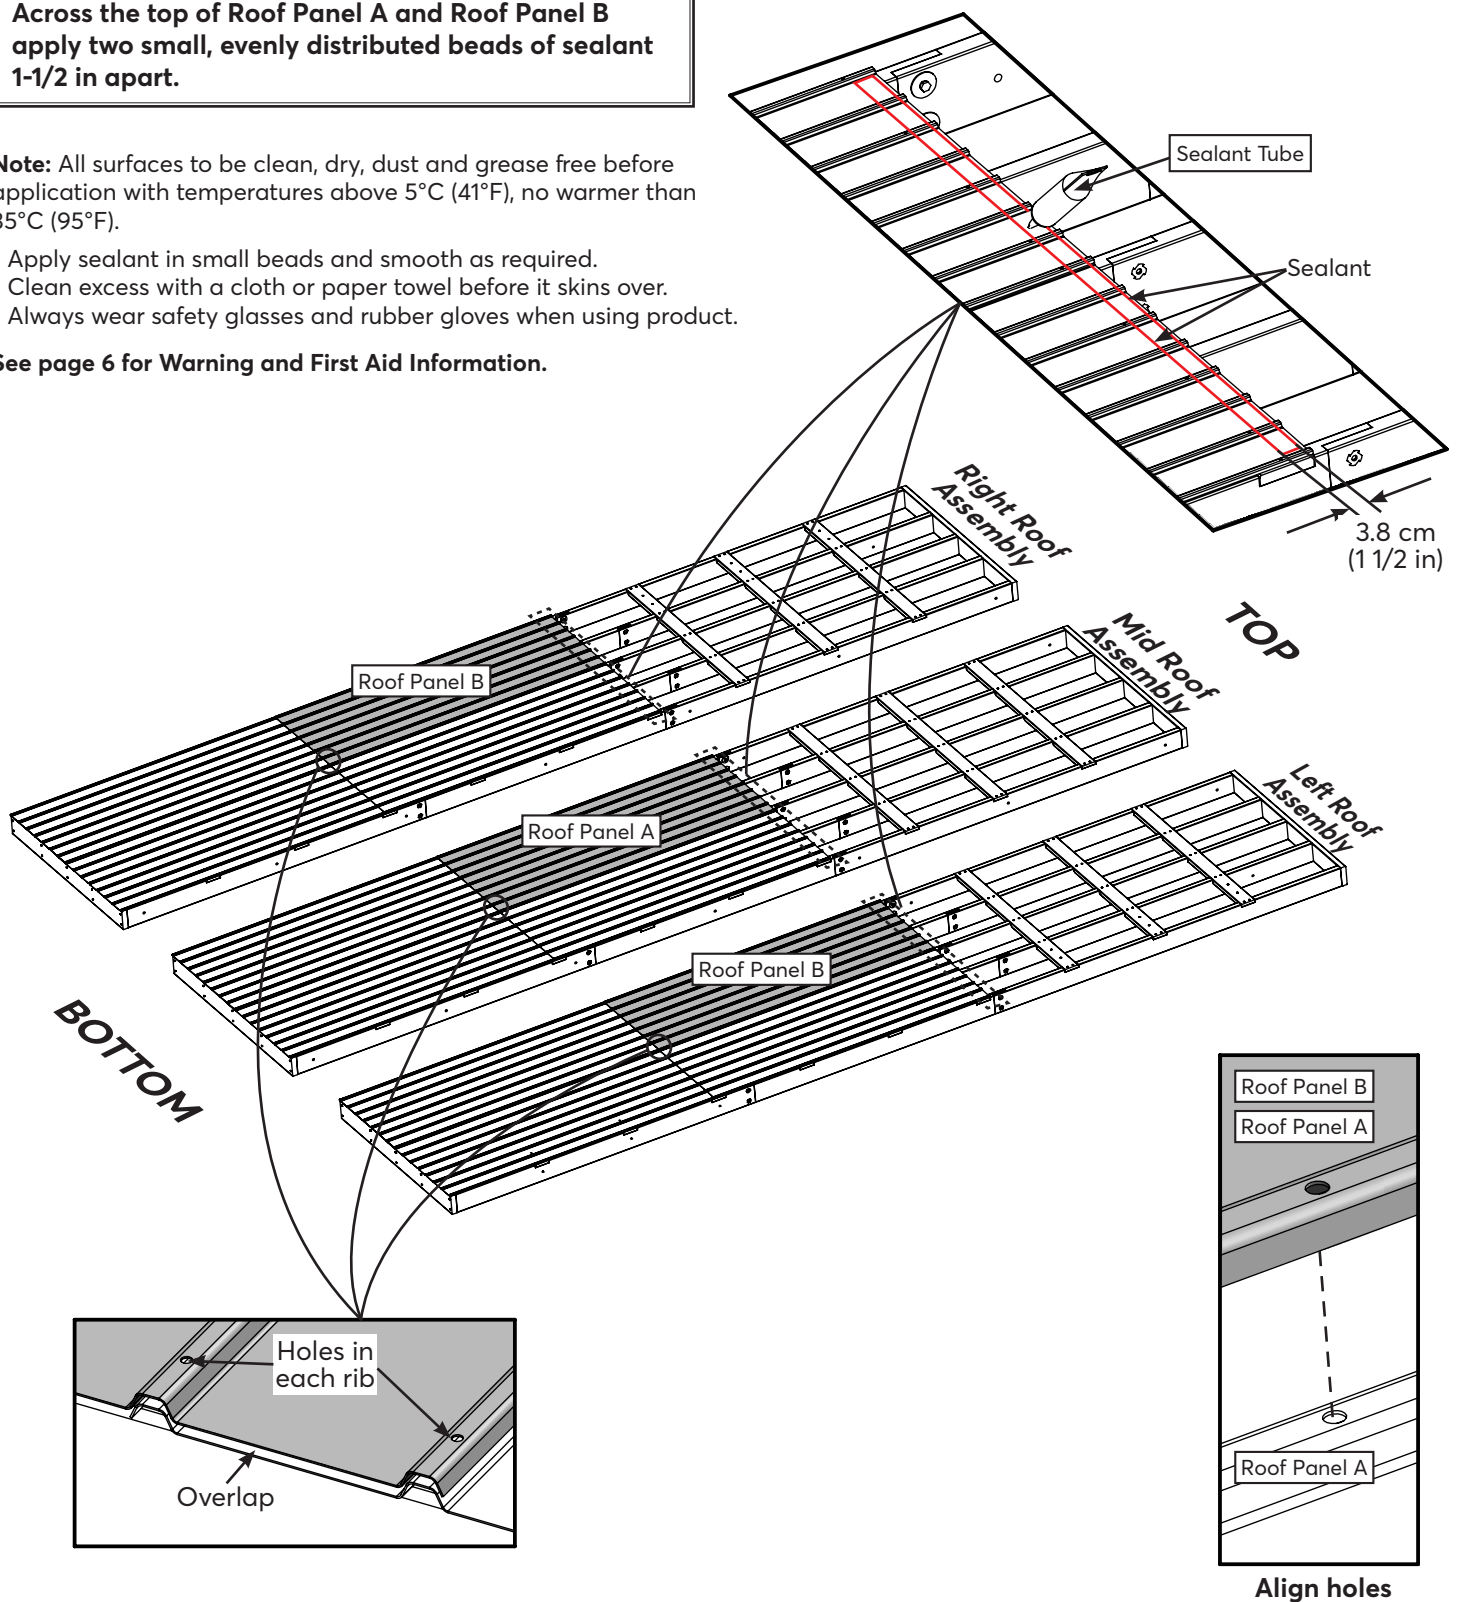

Components

2 x Roof Panel B
1 x Roof Panel A


Refer to pages 95/96 for Roof Panel Identification.

On the left side of Flat Roof Panel C between the first two ribs apply a small, evenly distributed bead of sealant over the perimeter of the flat surface.

Note: All surfaces to be clean, dry, dust and grease free before application with temperatures above 5°C (41°F), no warmer than 35°C (95°F).

- Apply sealant in small beads and smooth as required.
- Clean excess with a cloth or paper towel before it skins over.
- Always wear safety glasses and rubber gloves when using product.


See page 6 for Warning and First Aid Information.

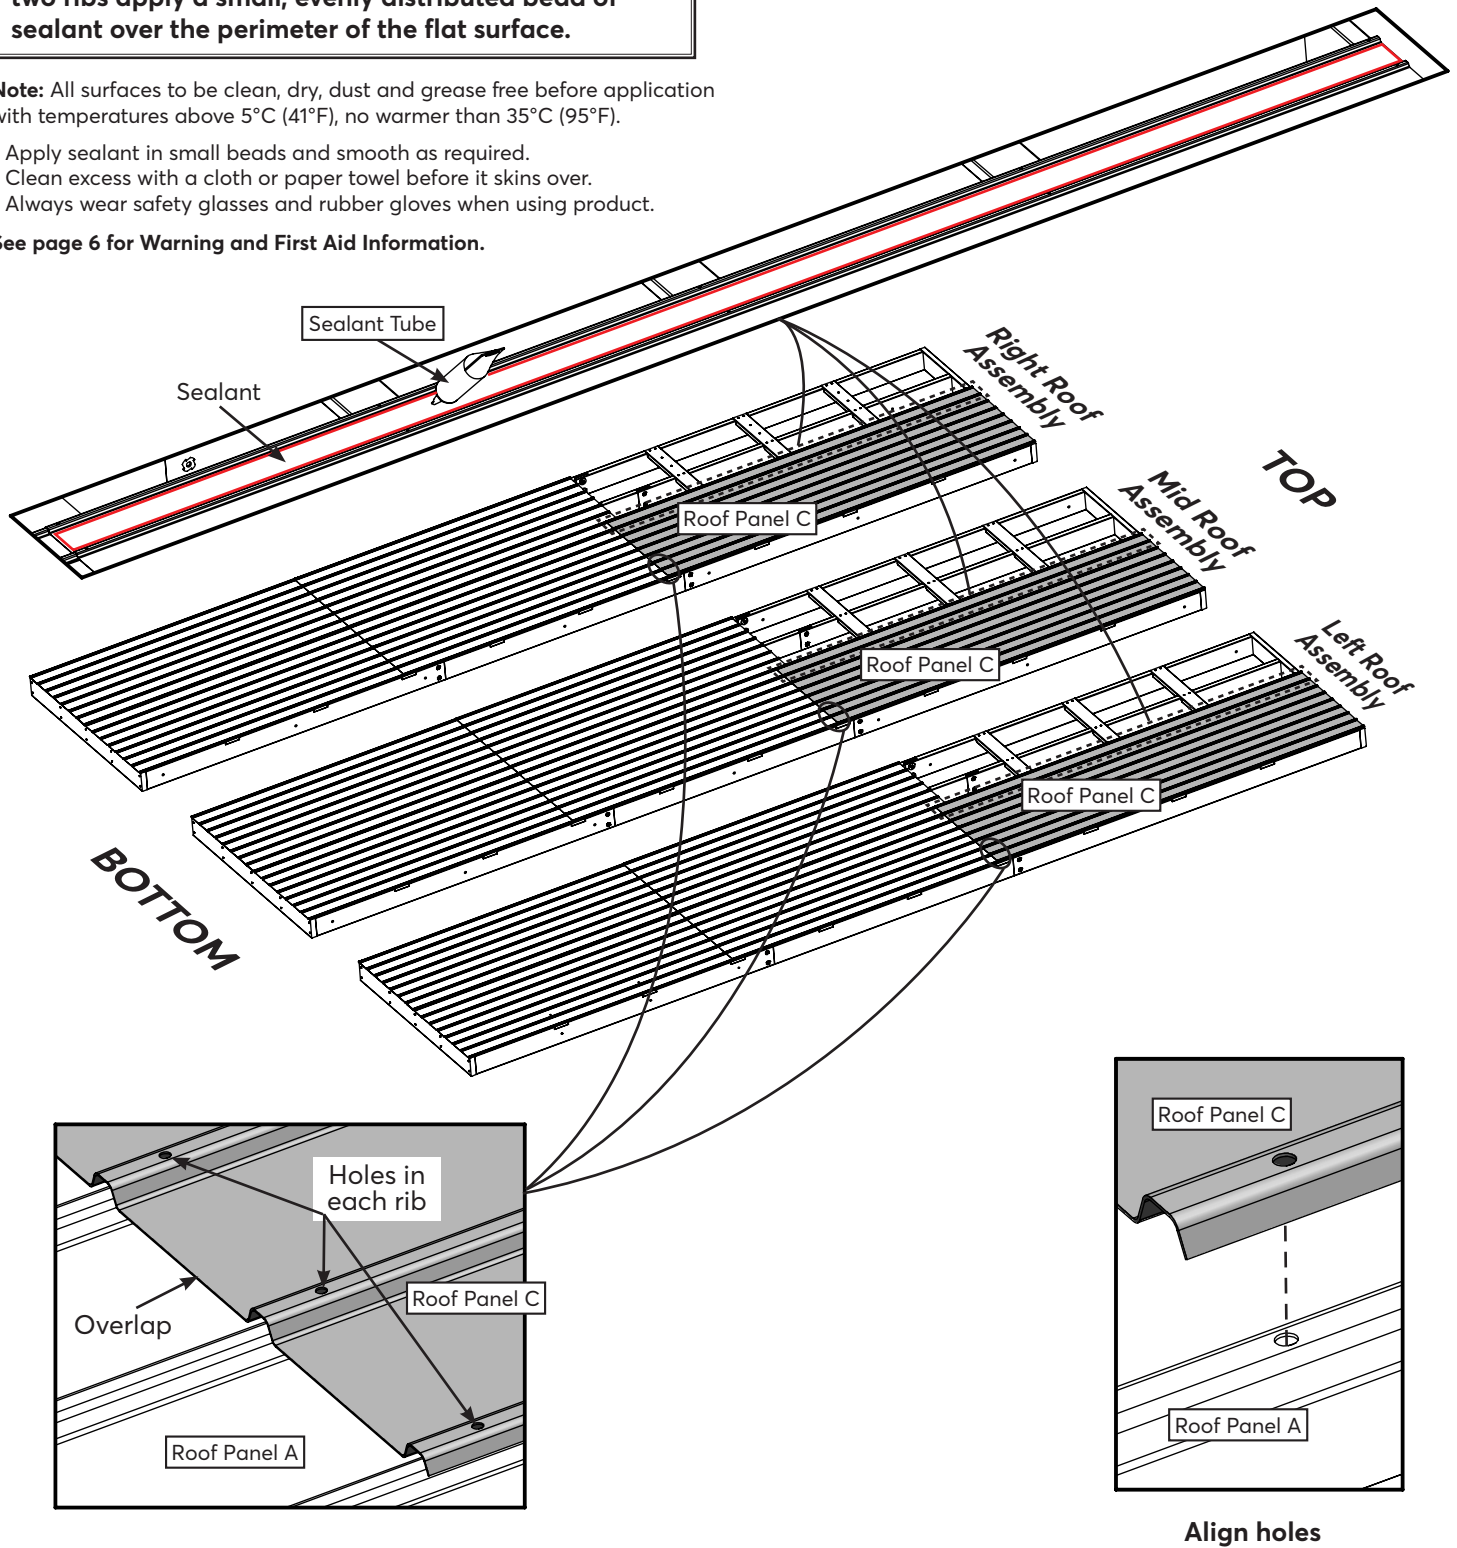

Components

3 x Roof Panel C

Refer to pages 95/96 for Roof Panel Identification

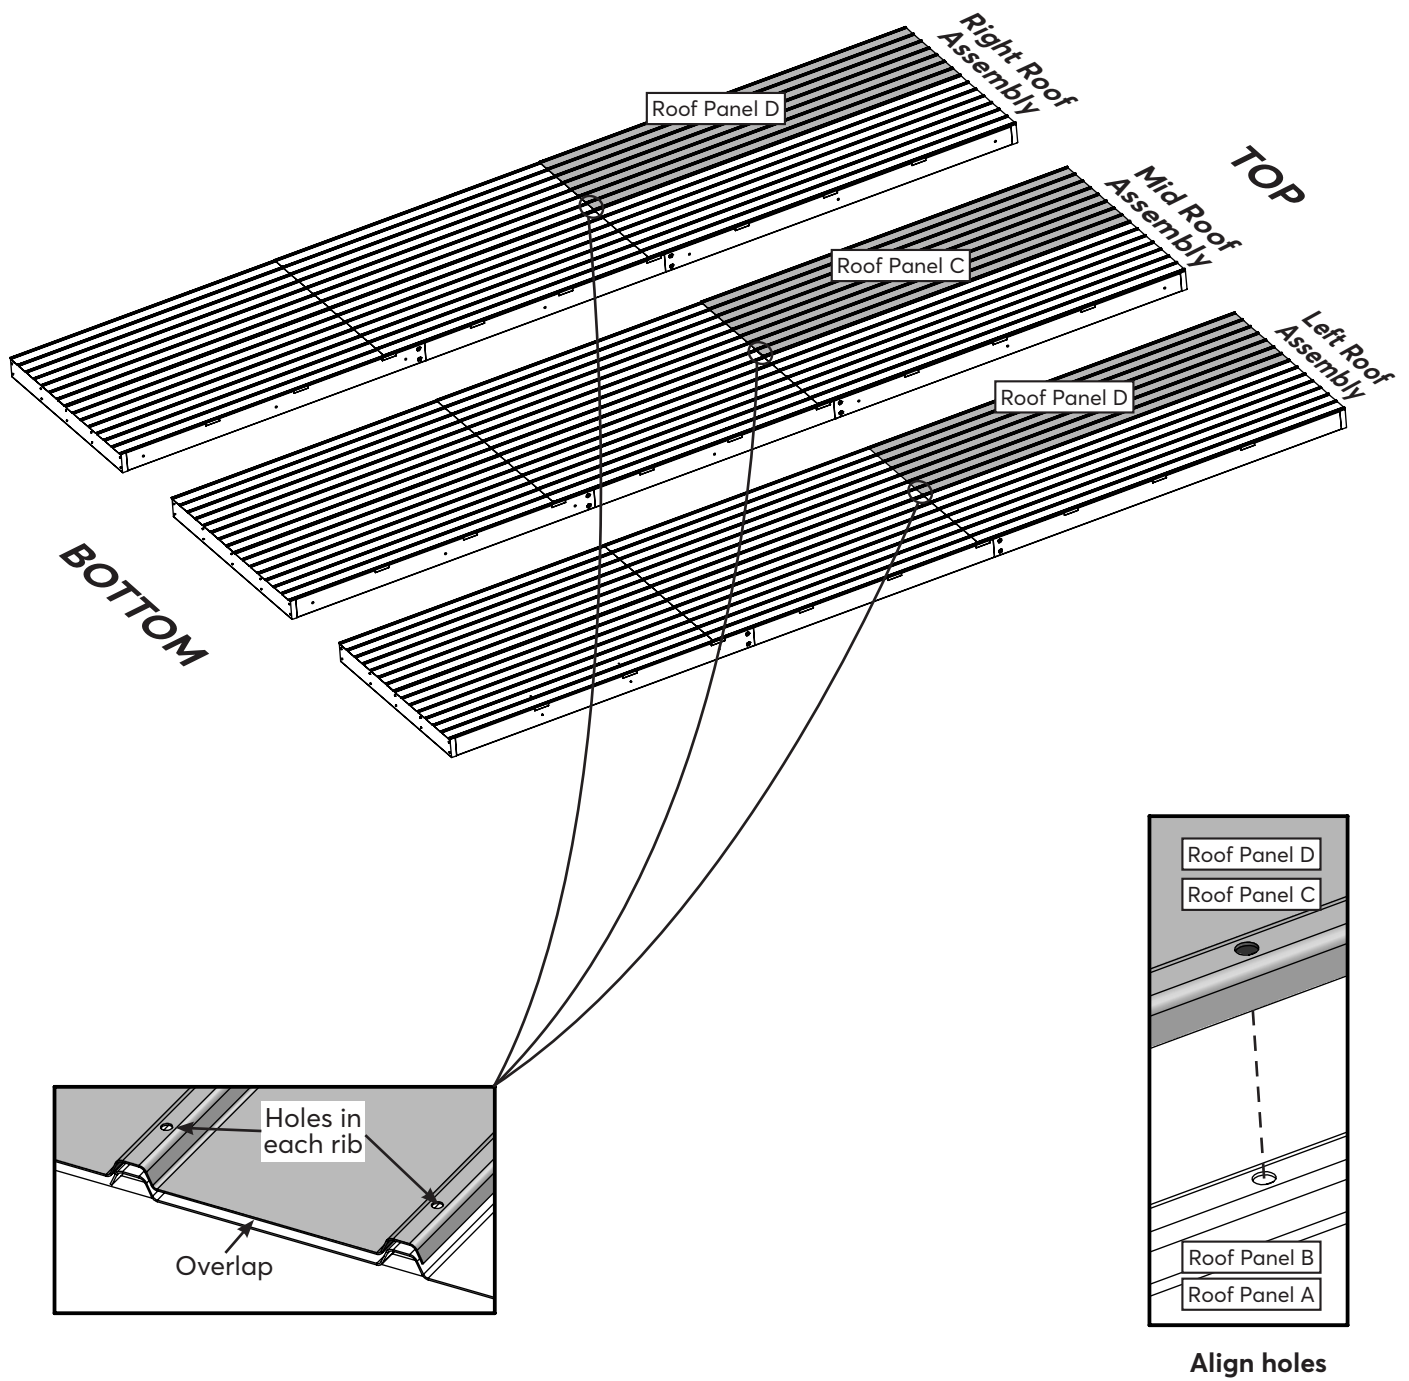


Components

2 x Roof Panel D
1 x Roof Panel C

81

Top View




DO NOT overtighten screws, could cause damage to roofing material

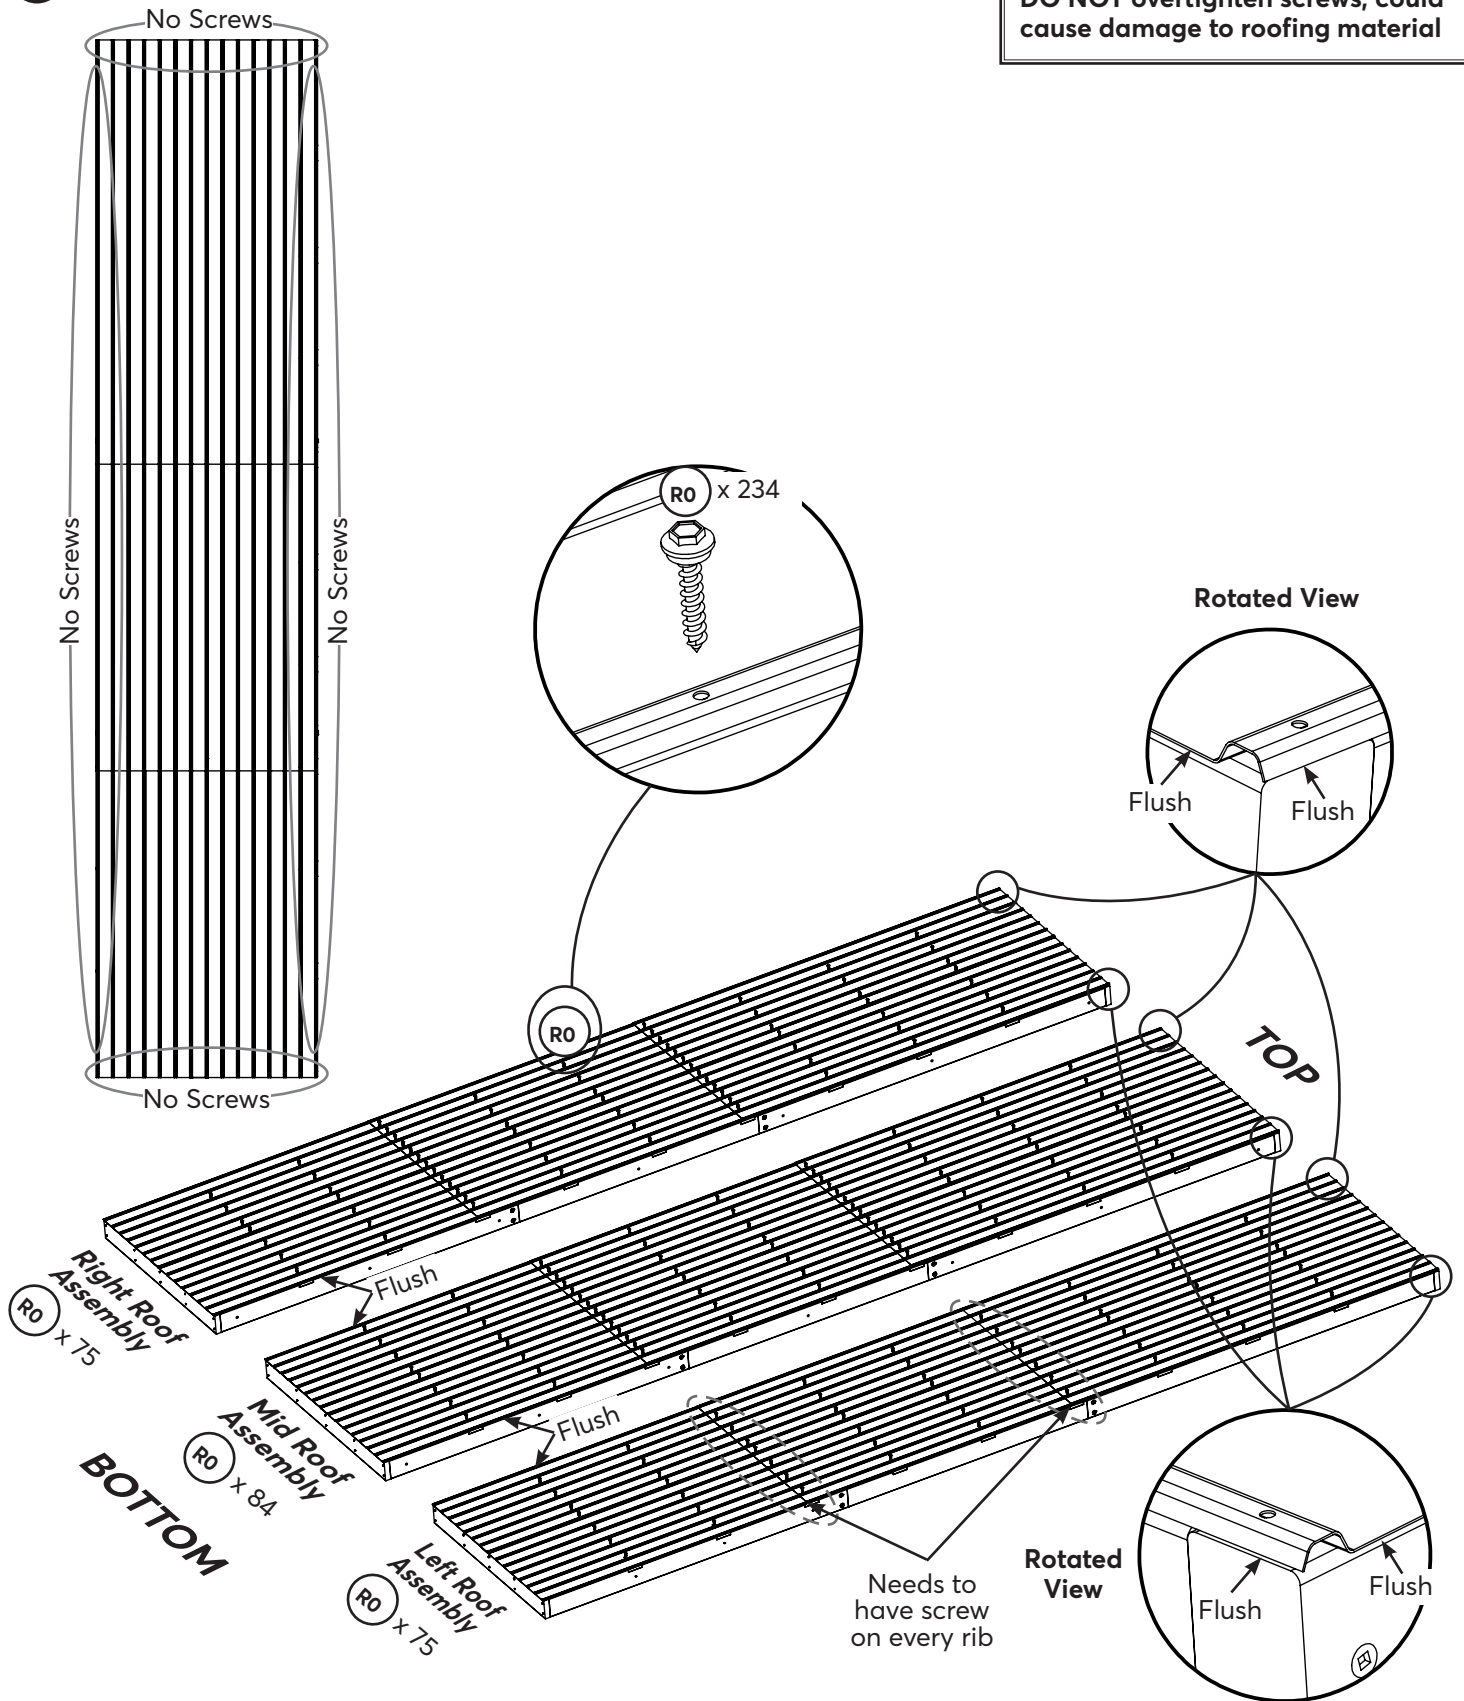

Hardware

234 x (R0)


Apply sealant to the inside groove of Flat Roof Clip.

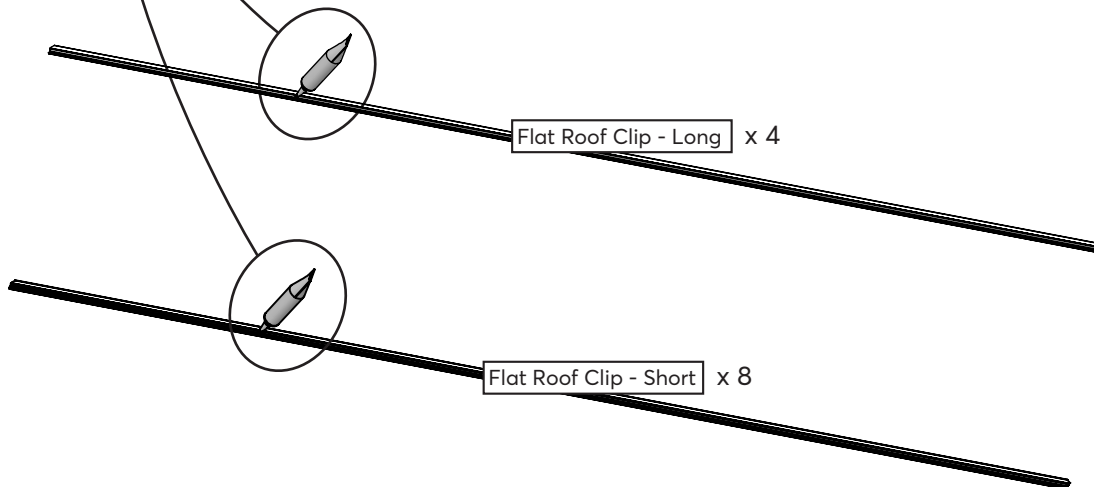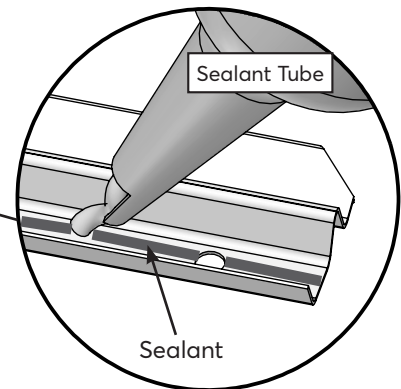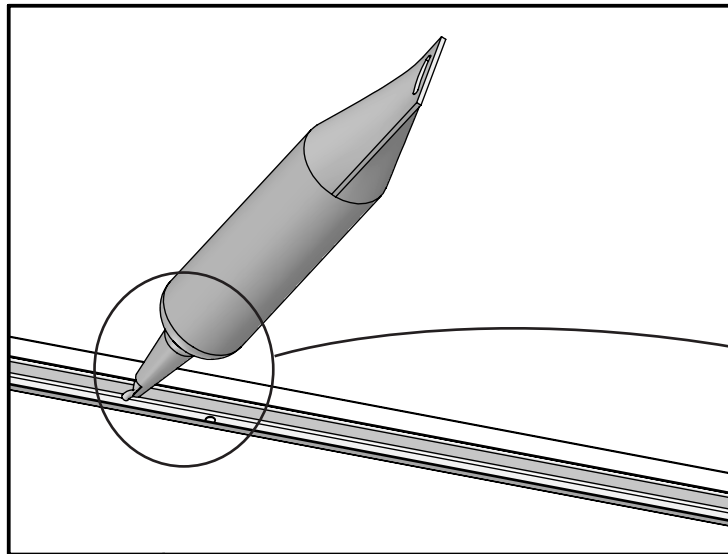**Components**

4 x Flat Roof Clip - Long

8 x Flat Roof Clip - Short

DO NOT overtighten screws, could cause damage to roofing material

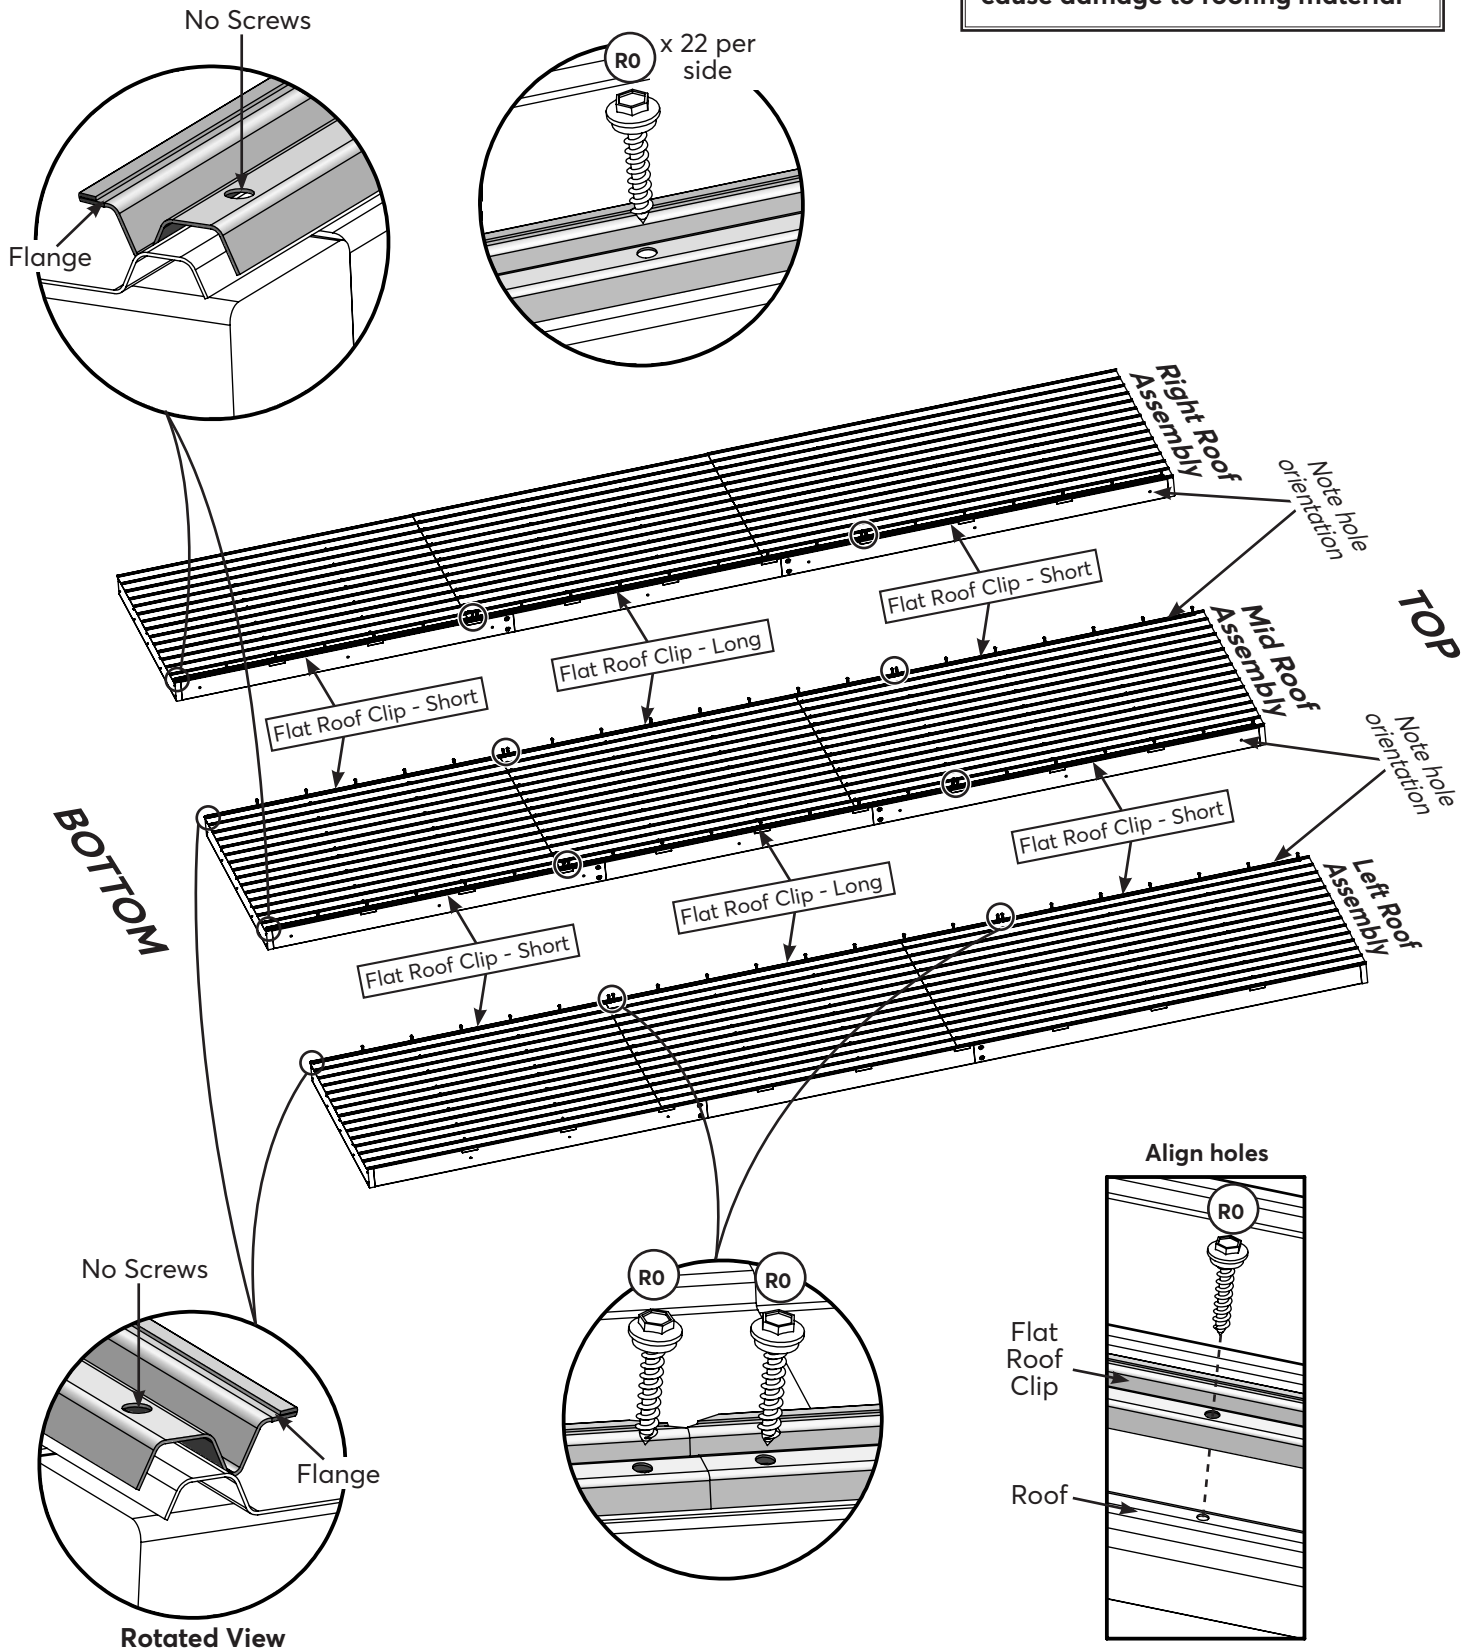


Hardware

88 x (R0)

84

DO NOT overtighten screws, could cause damage to roofing material

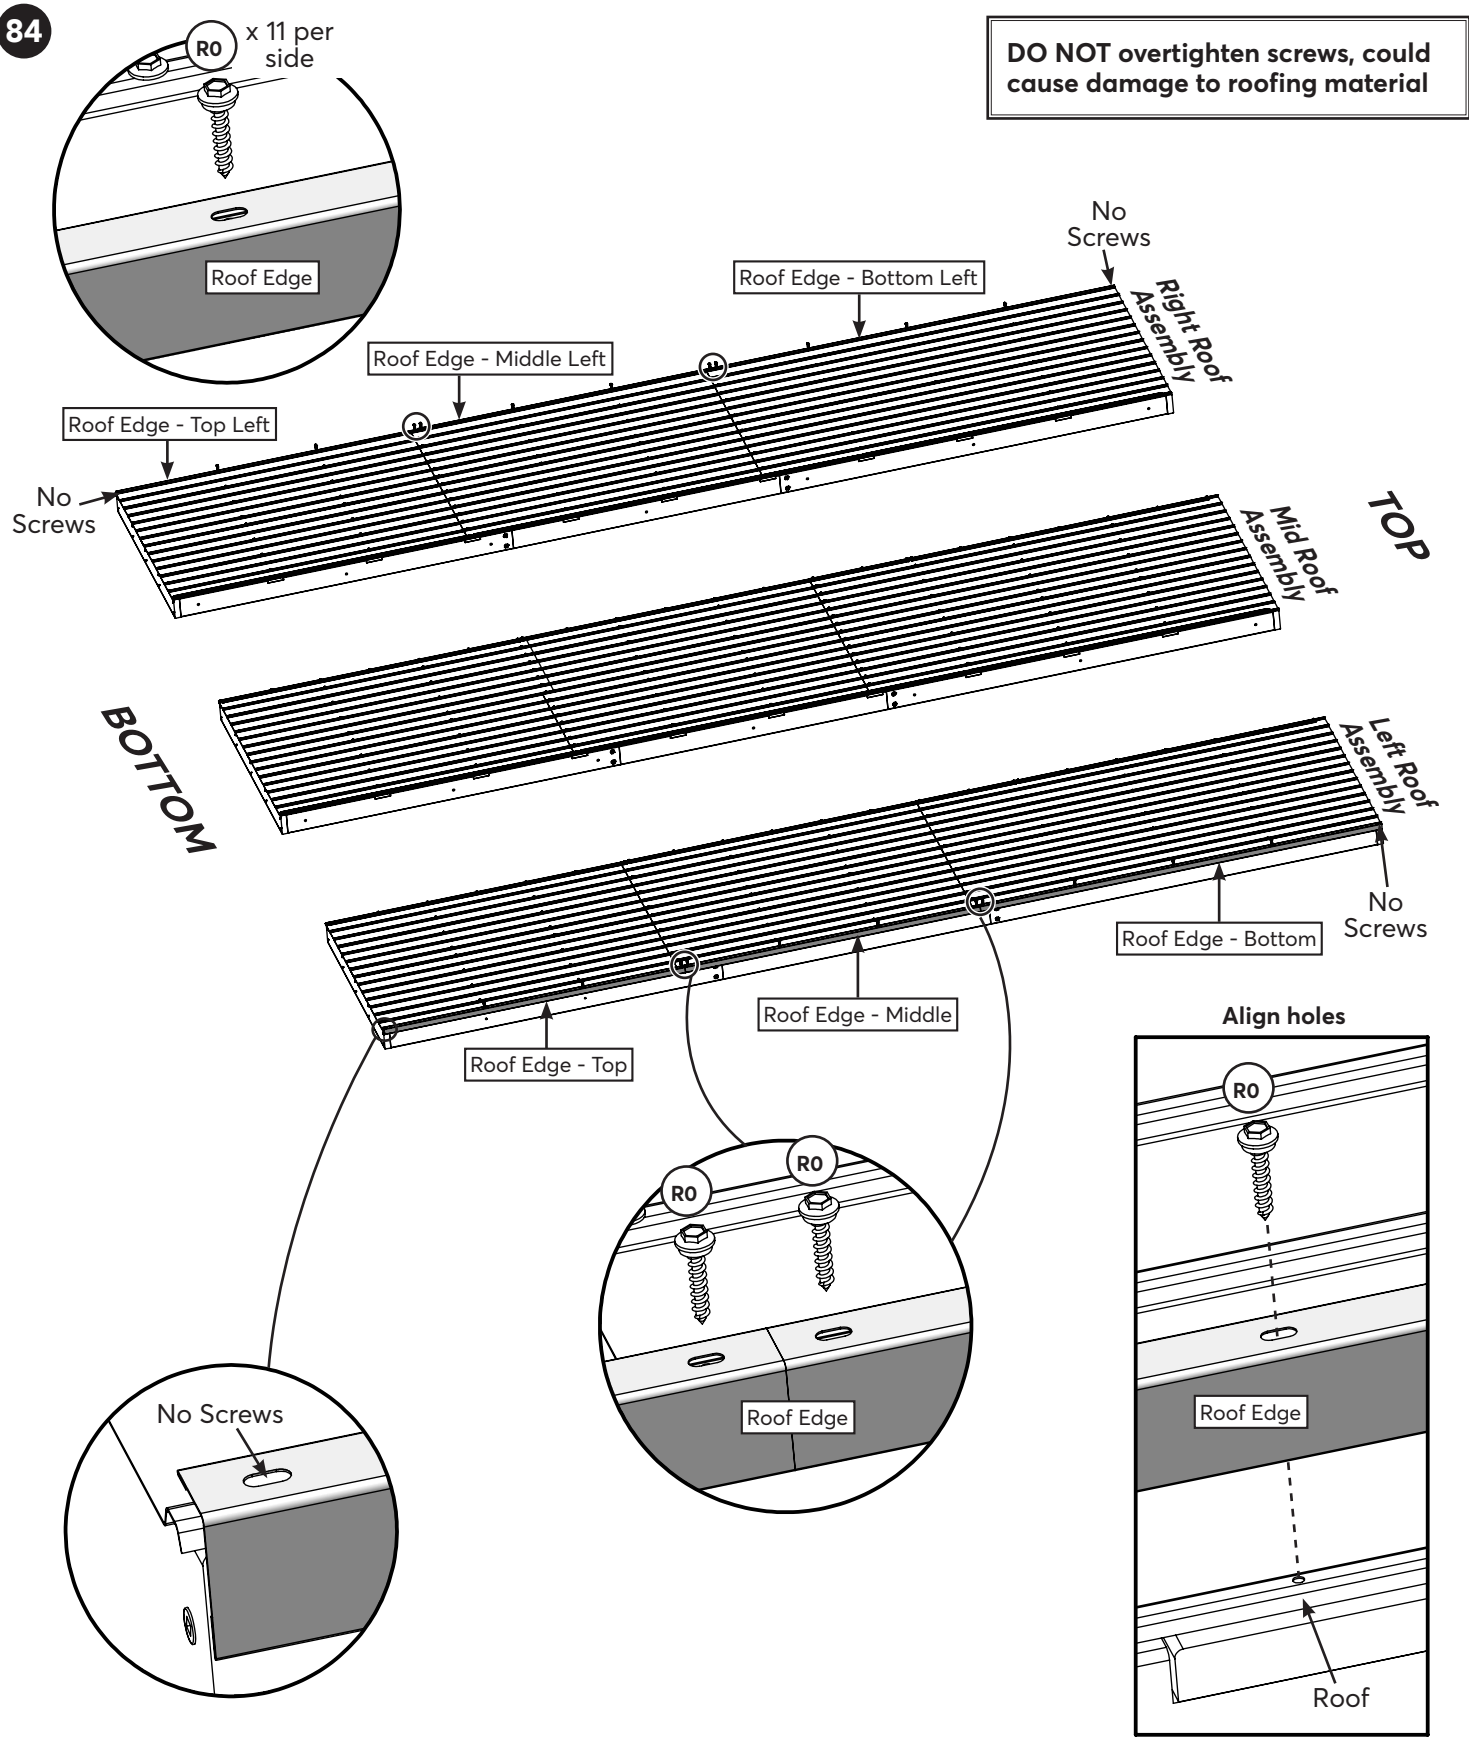




Hardware

22 x (R0)


Components



1 x Roof Edge - Bottom
1 x Roof Edge - Middle
1 x Roof Edge - Top

1 x Roof Edge -Bottom Left
1 x Roof Edge -Middle Left
1 x Roof Edge -Top Left

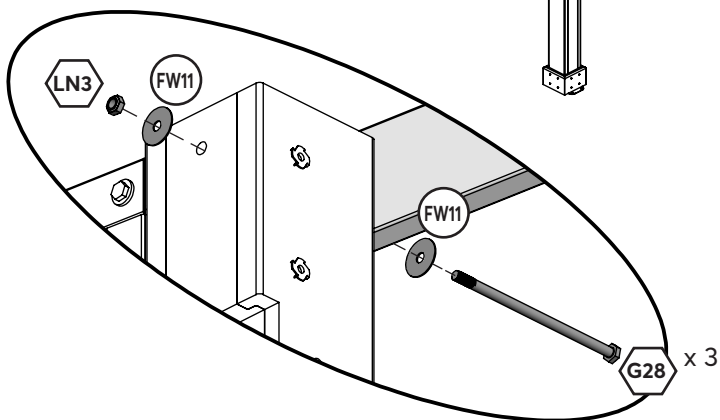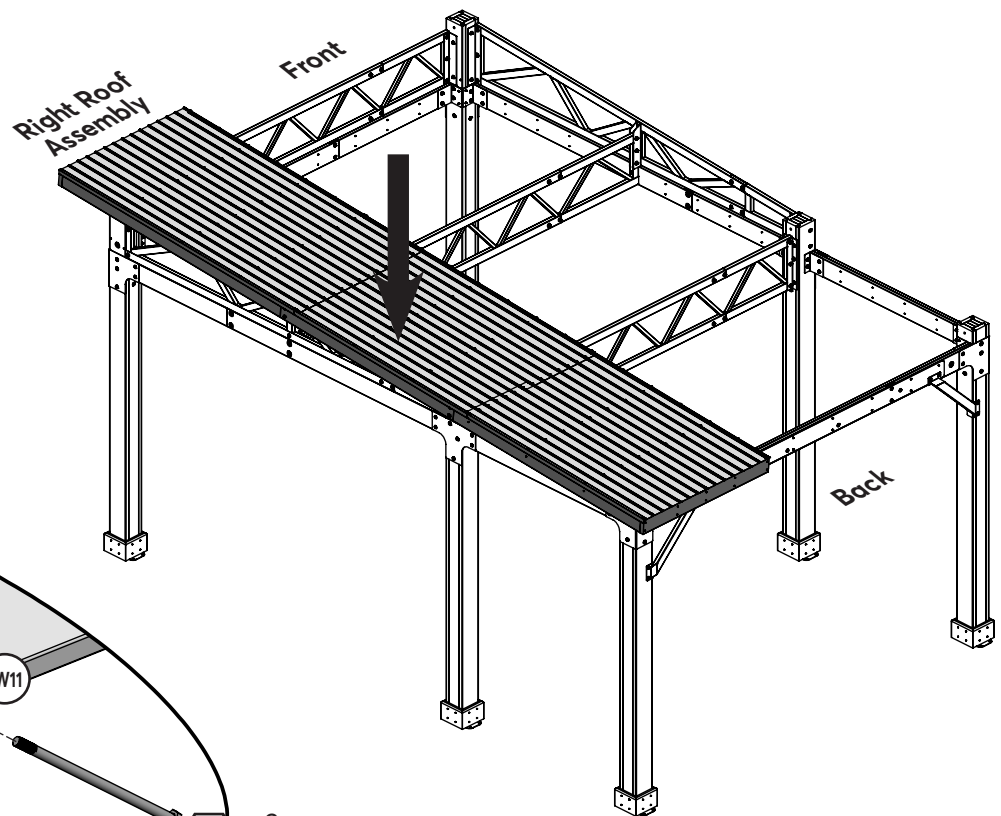
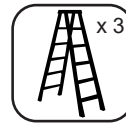


Underneath View

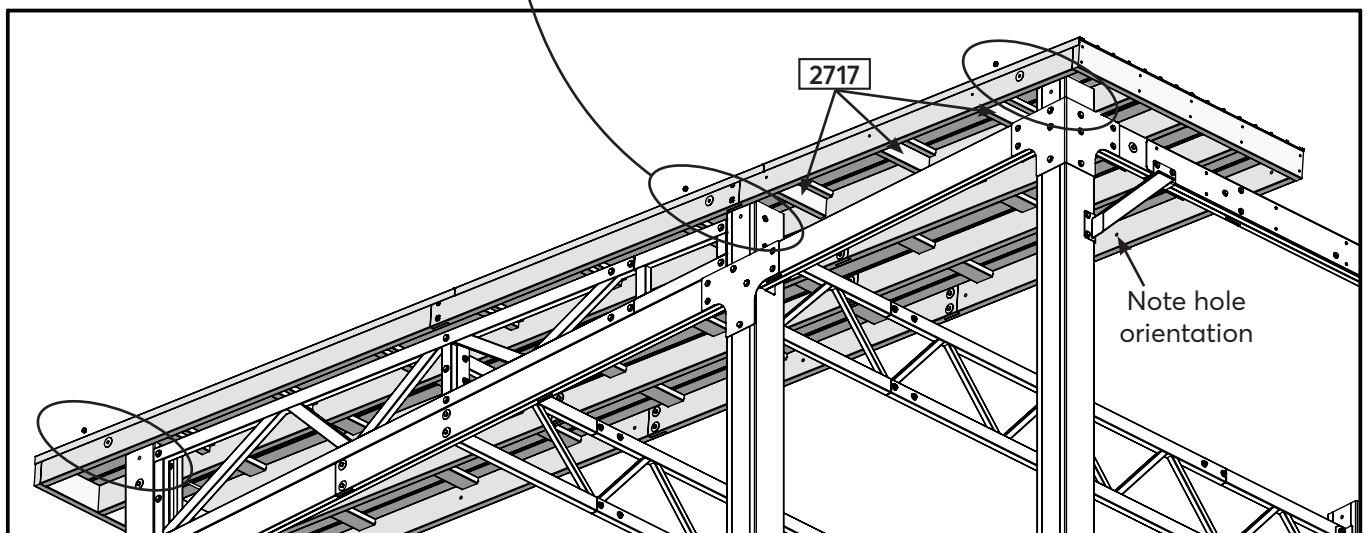**Hardware**3 x  (FW11 x 2, LN3)


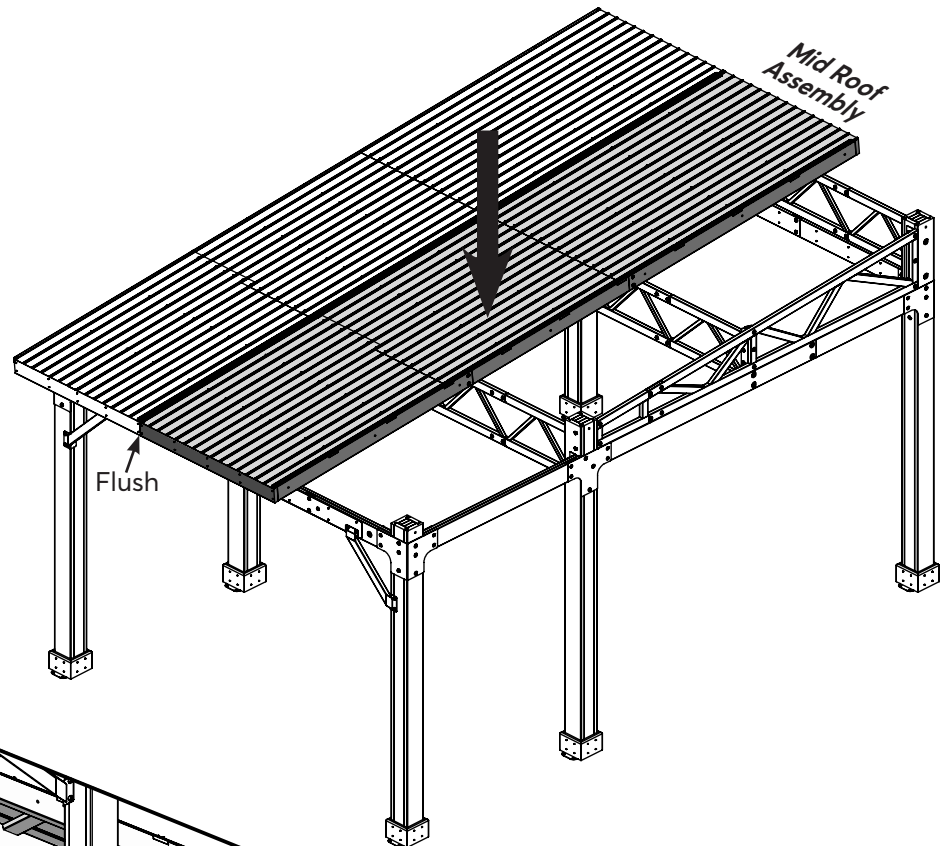
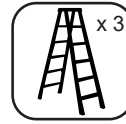


Rotated &
Underneath View

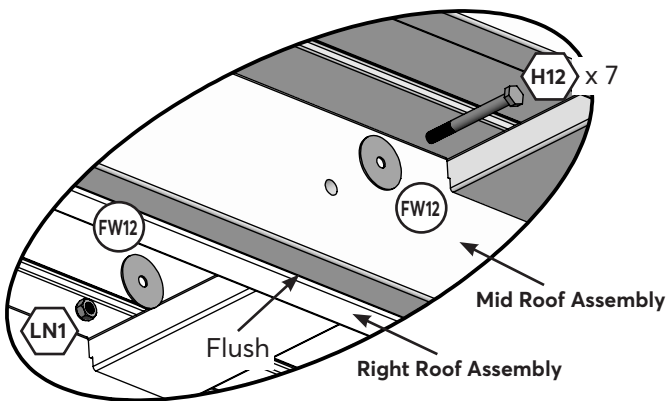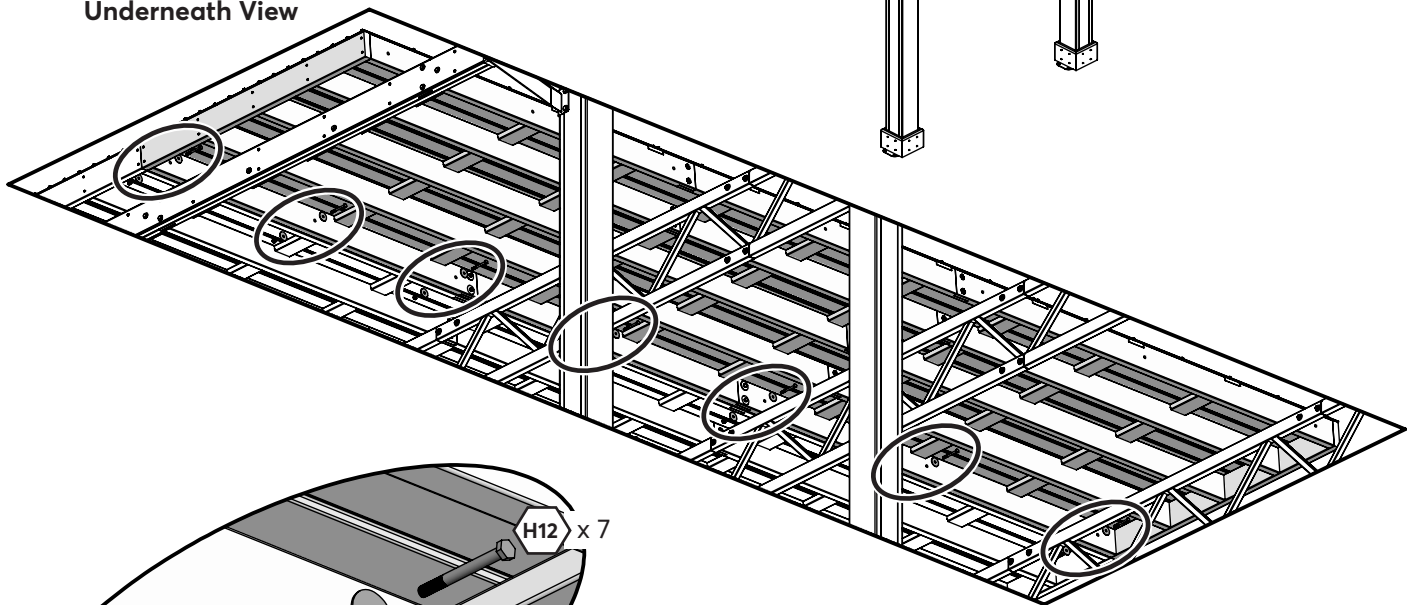


Hardware



7 x  (FW12 x 2, LN1)

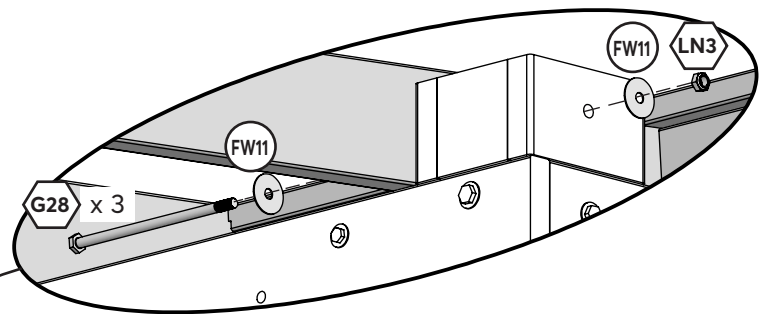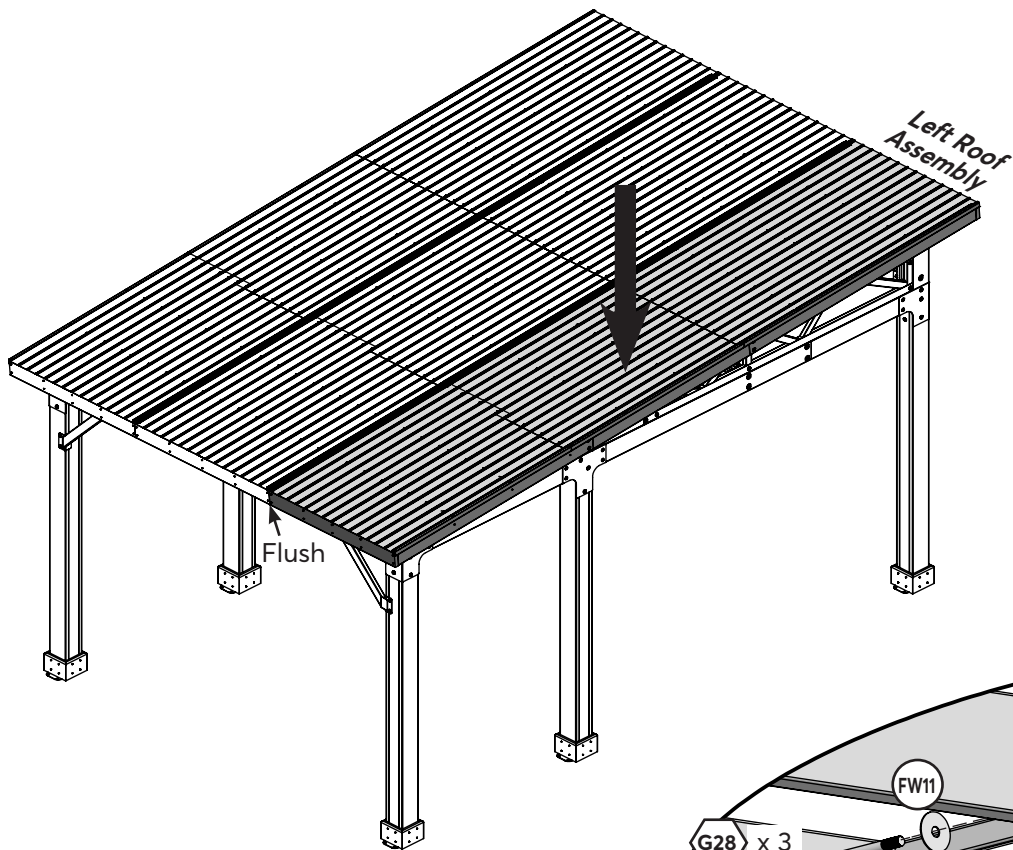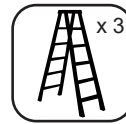

Underneath View


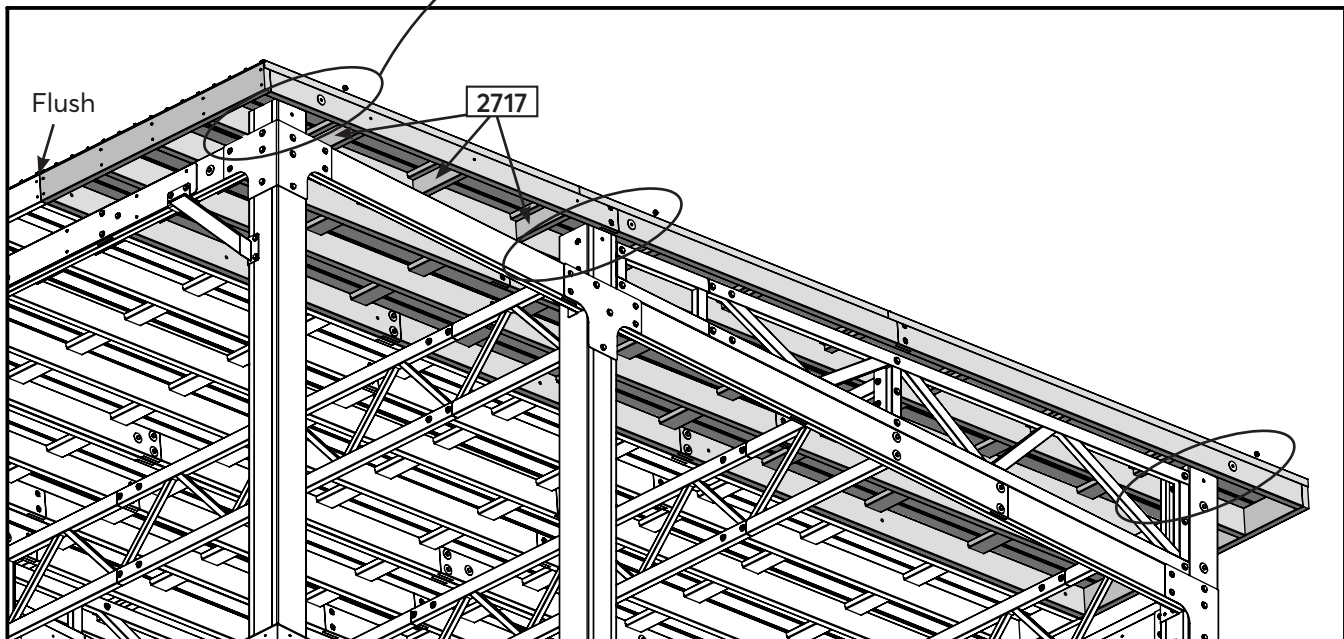
**Hardware**

3 x  (FW11 x 2, LN3)

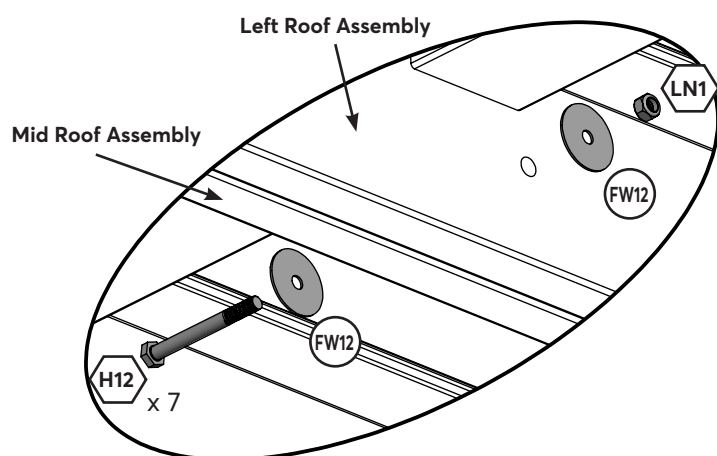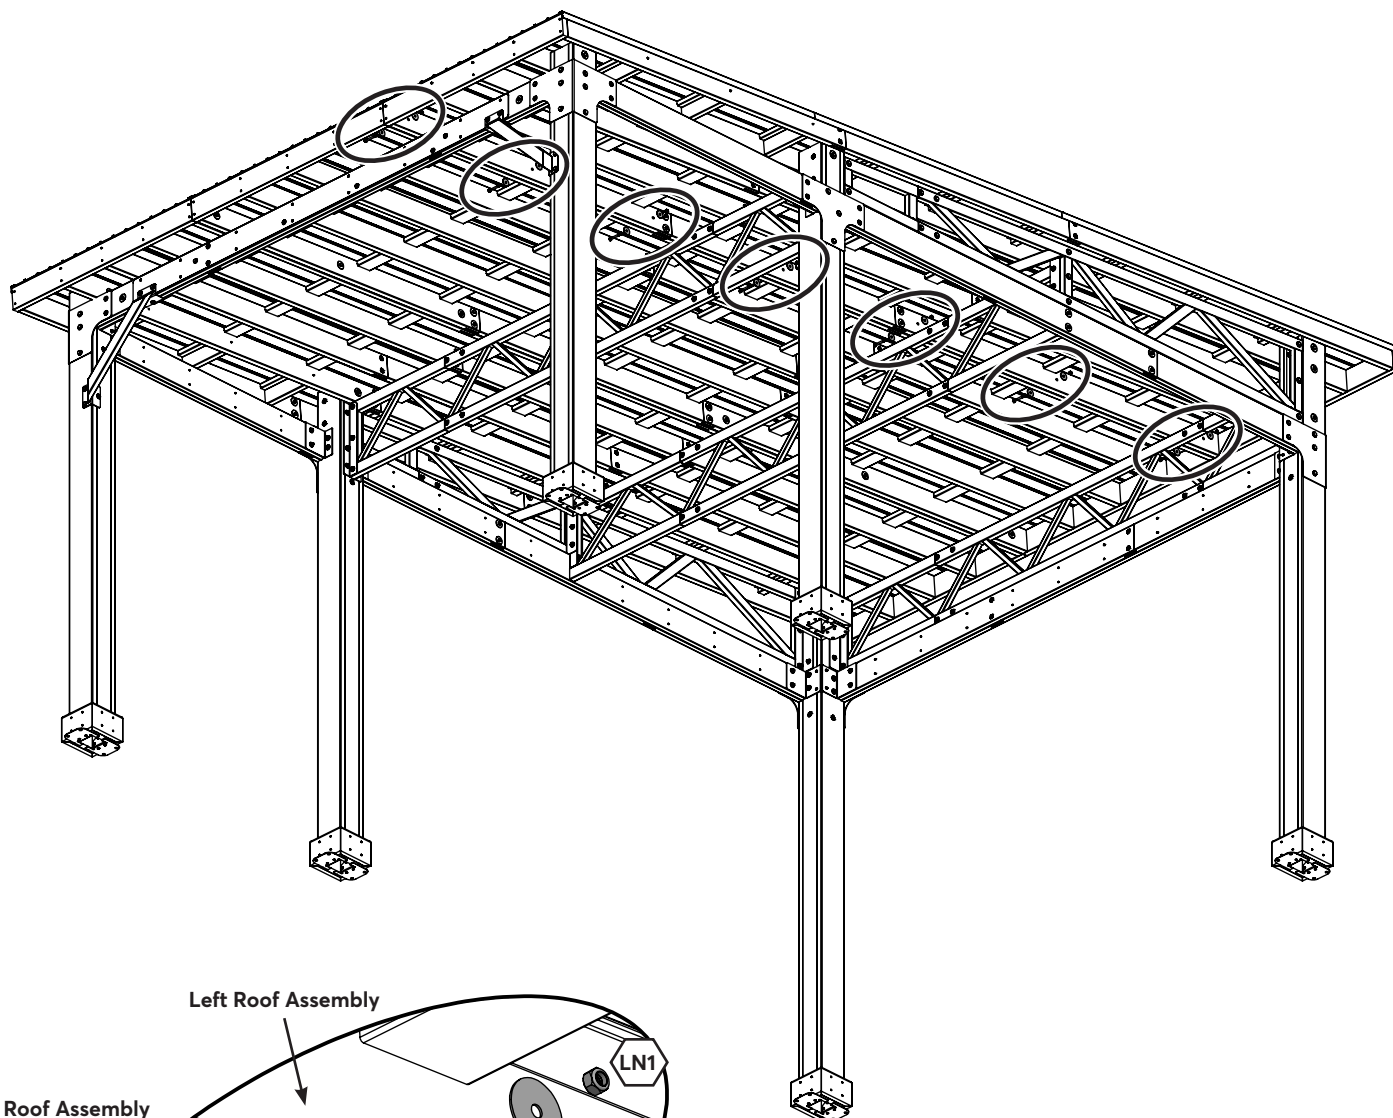

Hardware

7 x  (FW12 x 2, LN1)

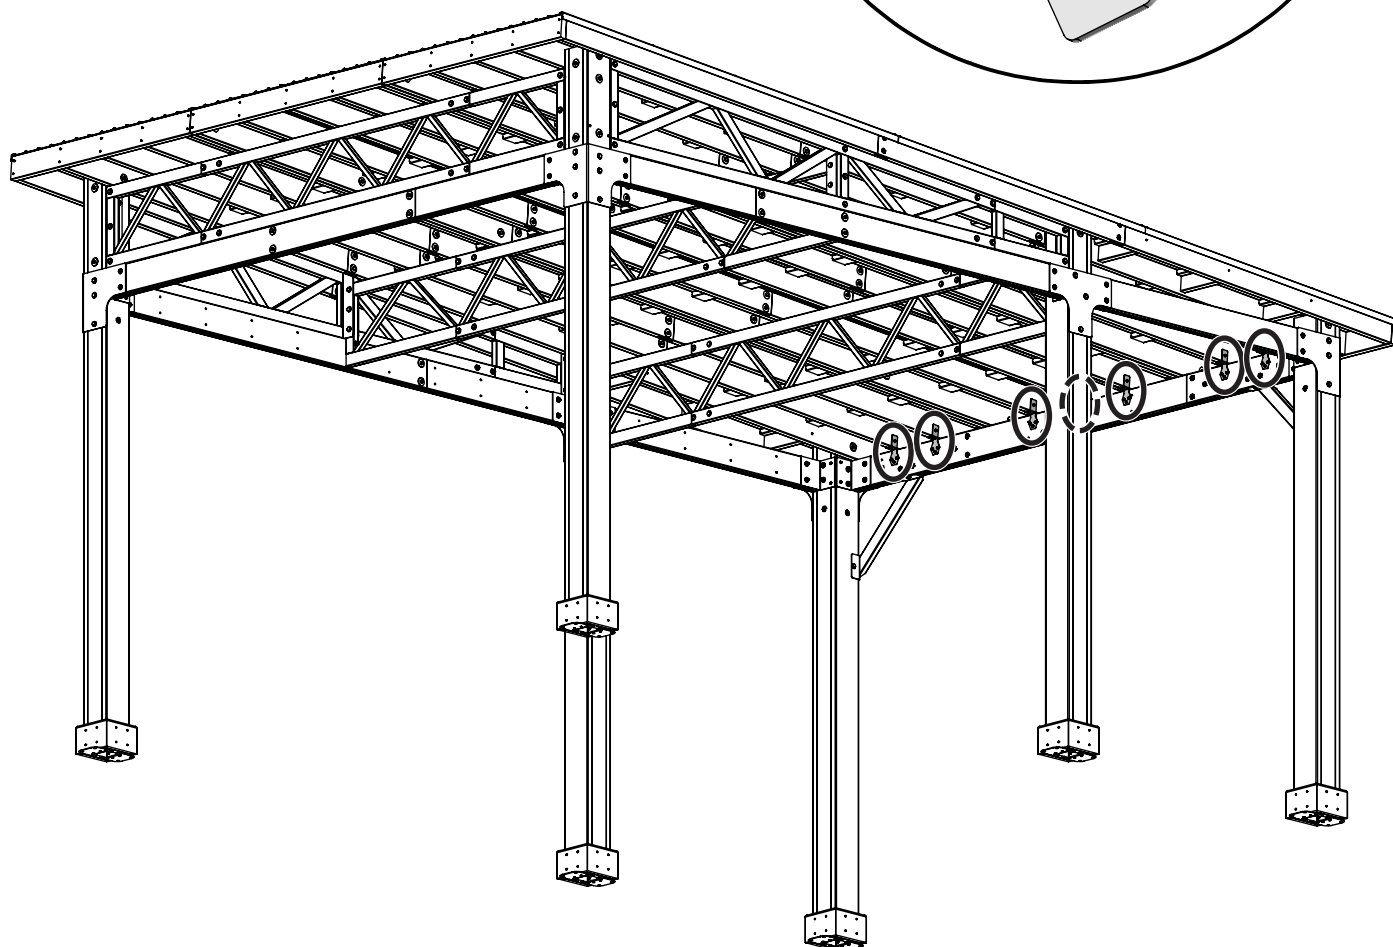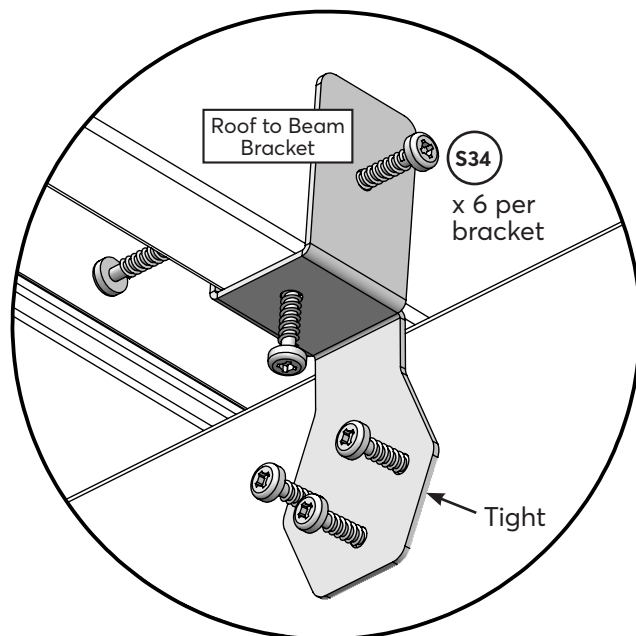

Hardware



42 x S34

Components


7 x Roof to Beam Bracket



Roof removed
for clarity

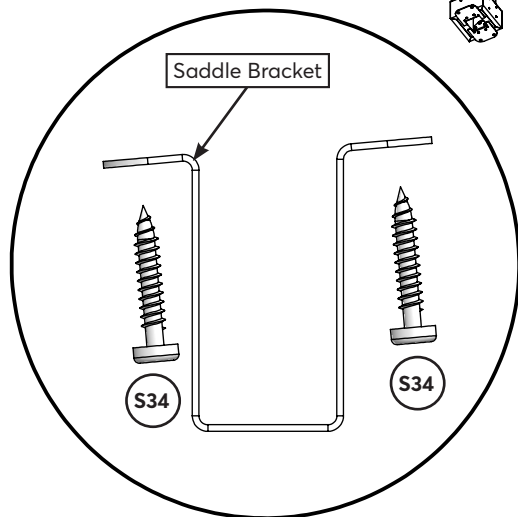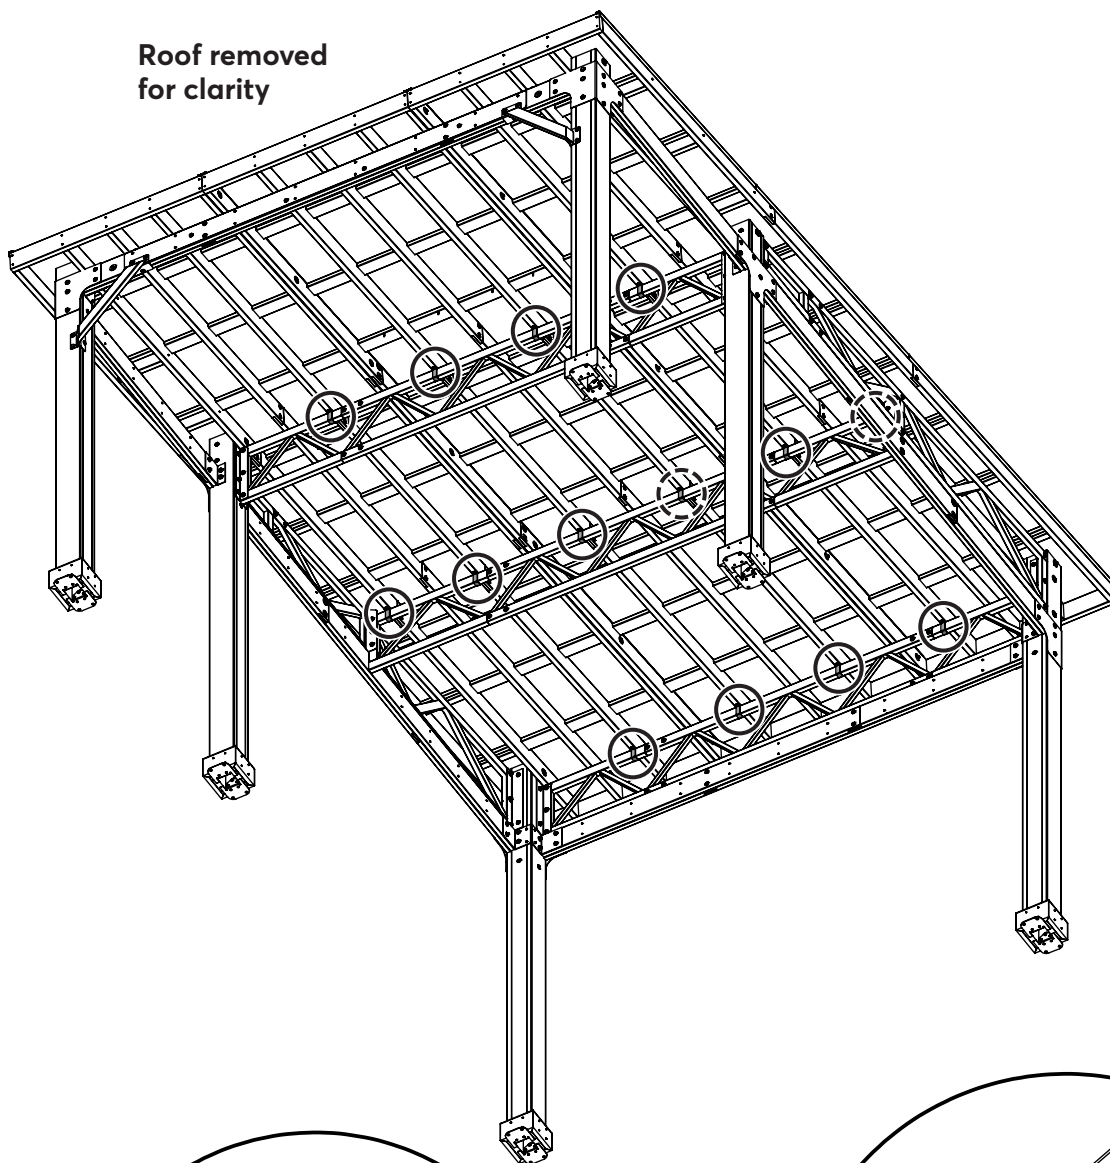

Side View


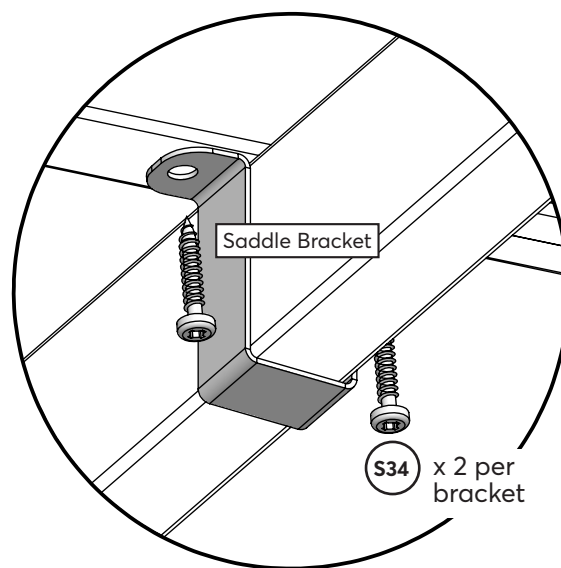


Hardware

28 x S34

Components


14 x Saddle Bracket

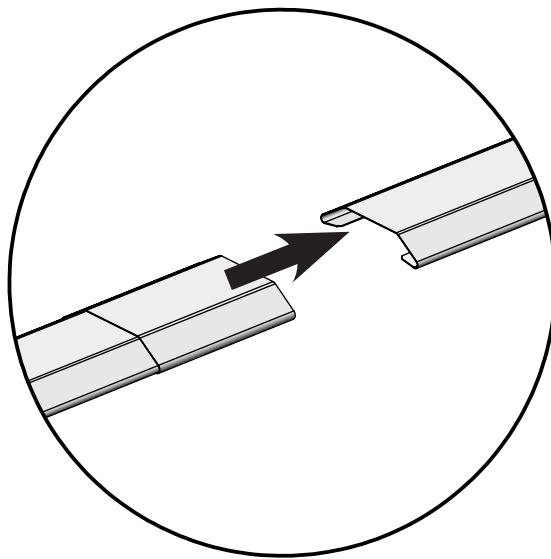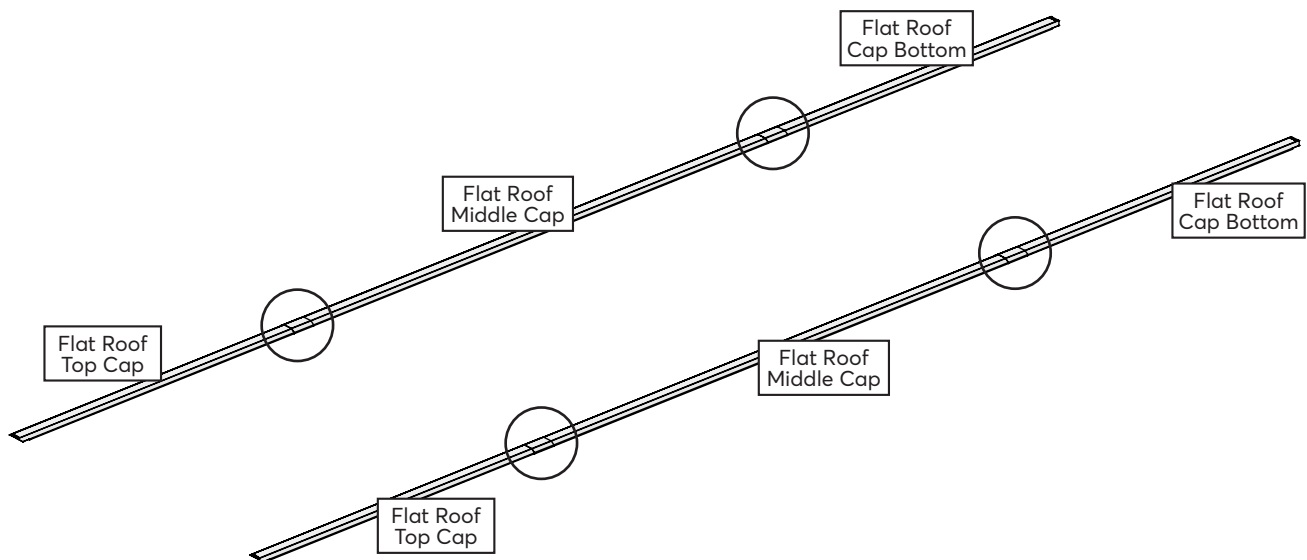**Components**

2 x Flat Roof Top Cap
2 x Flat Roof Middle Cap
2 x Flat Roof Cap Bottom




Slide from top down.

Note: To help Roof Edges slide on easier use a lubricant such as liquid soap.



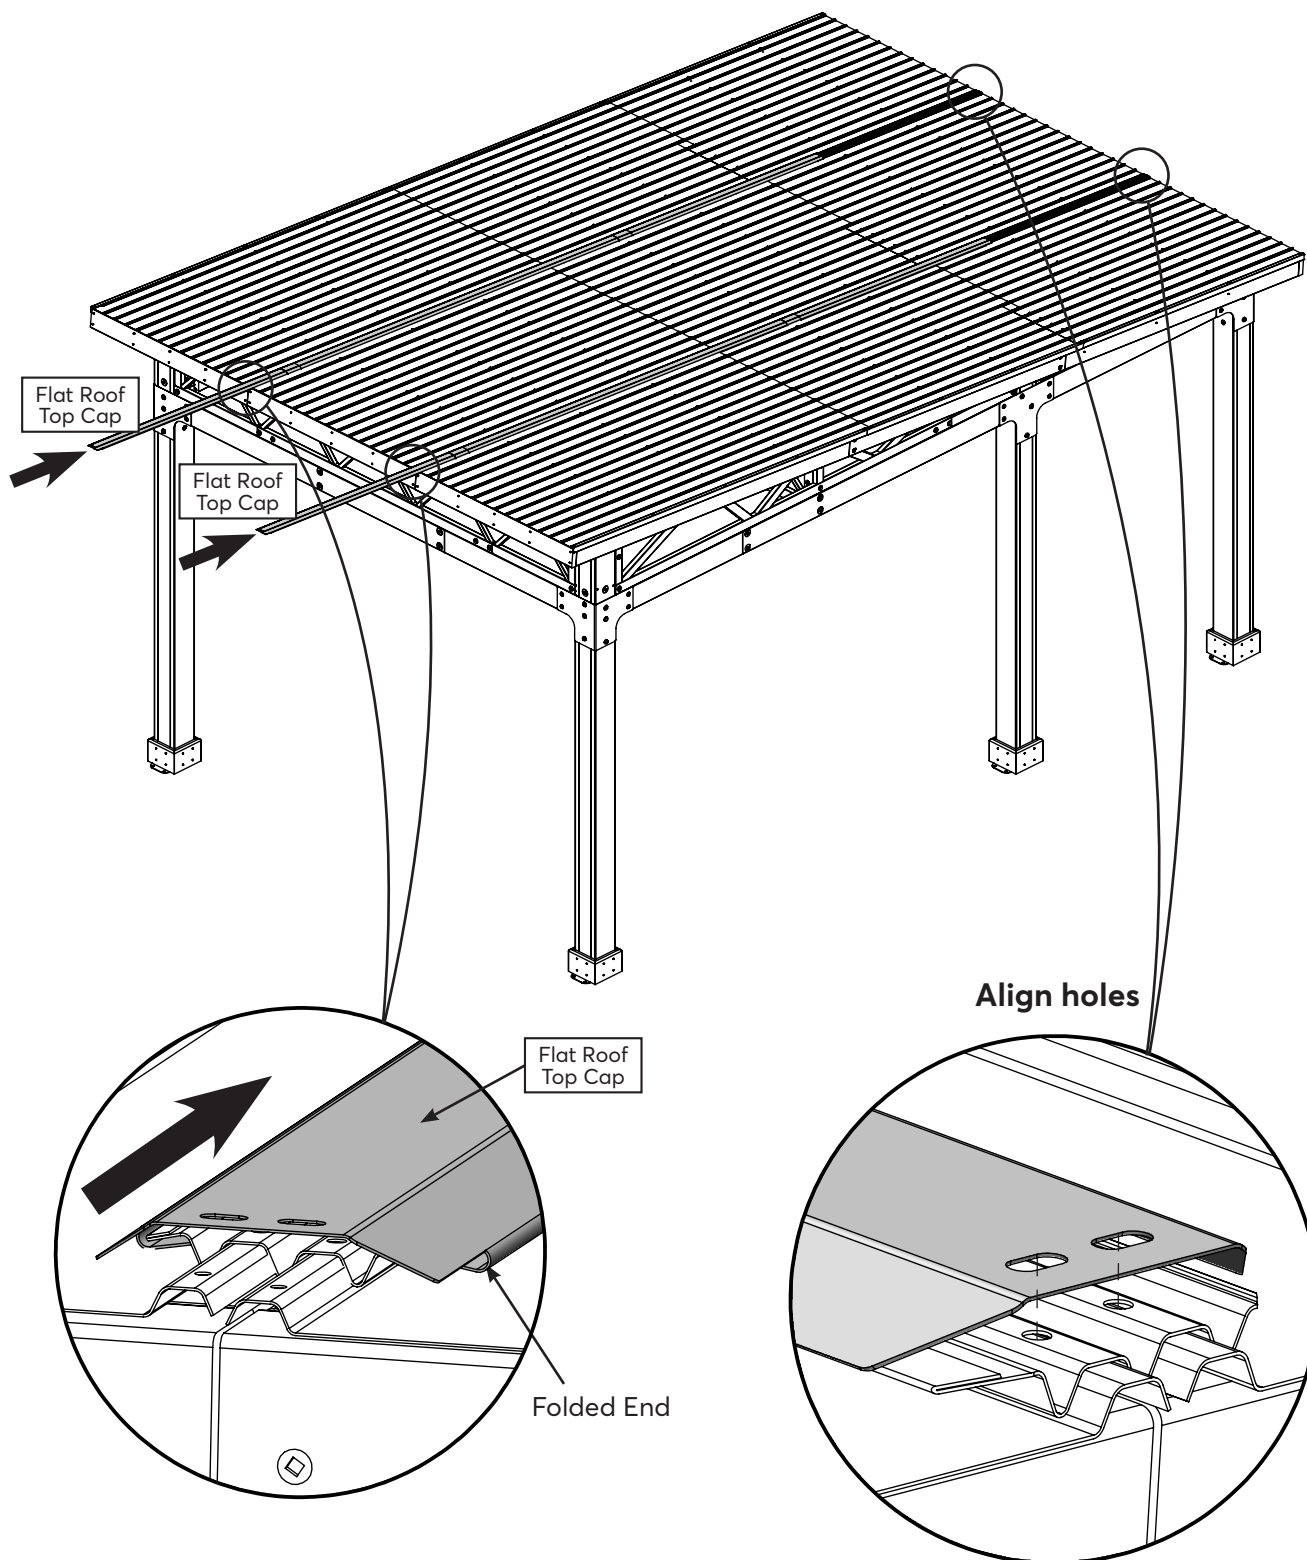




DO NOT overtighten screws, could cause damage to roofing material

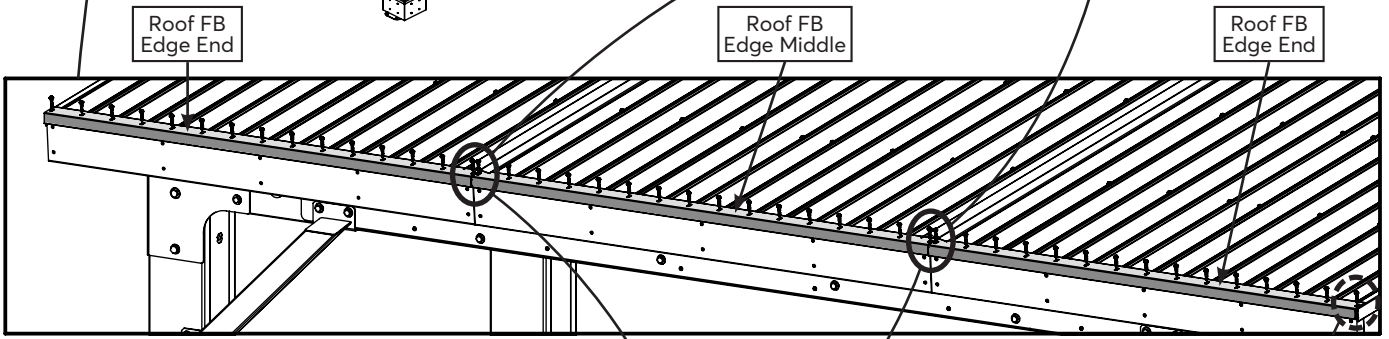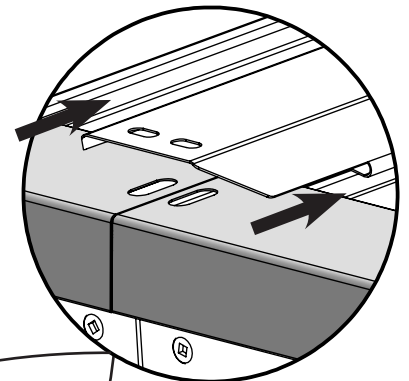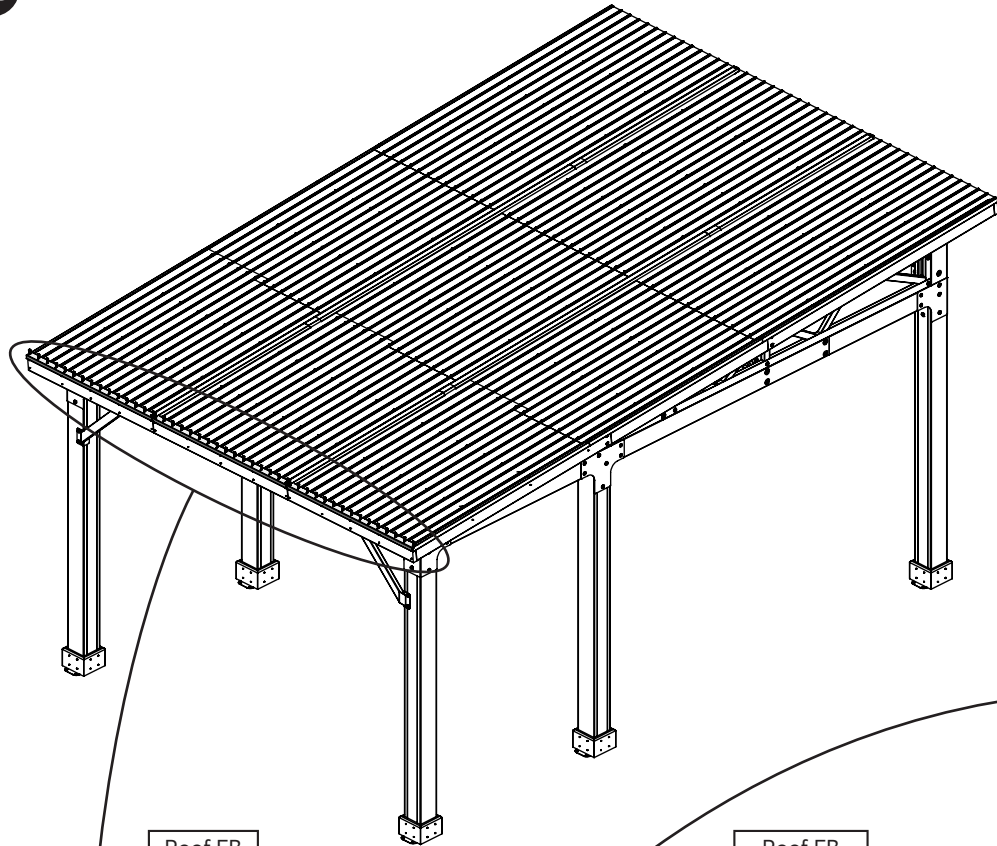

Align holes

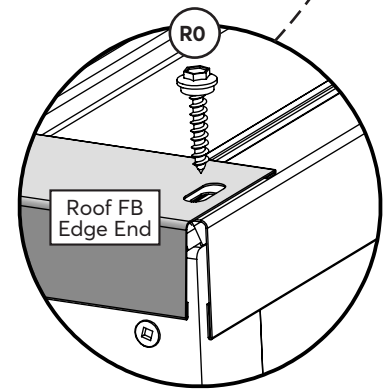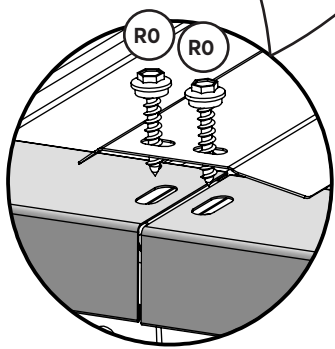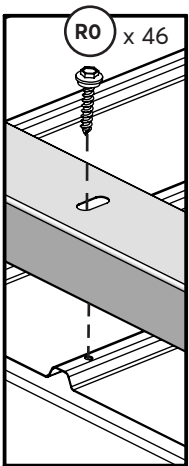



Hardware

46 x (R0)



Components

1 x Roof FB Edge Middle
2 x Roof FB Edge End


Side View

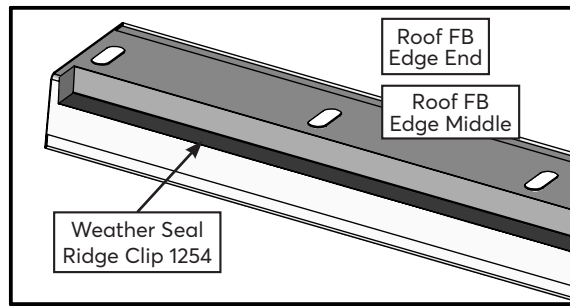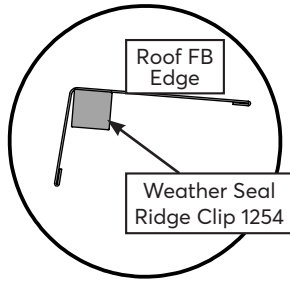


Align holes

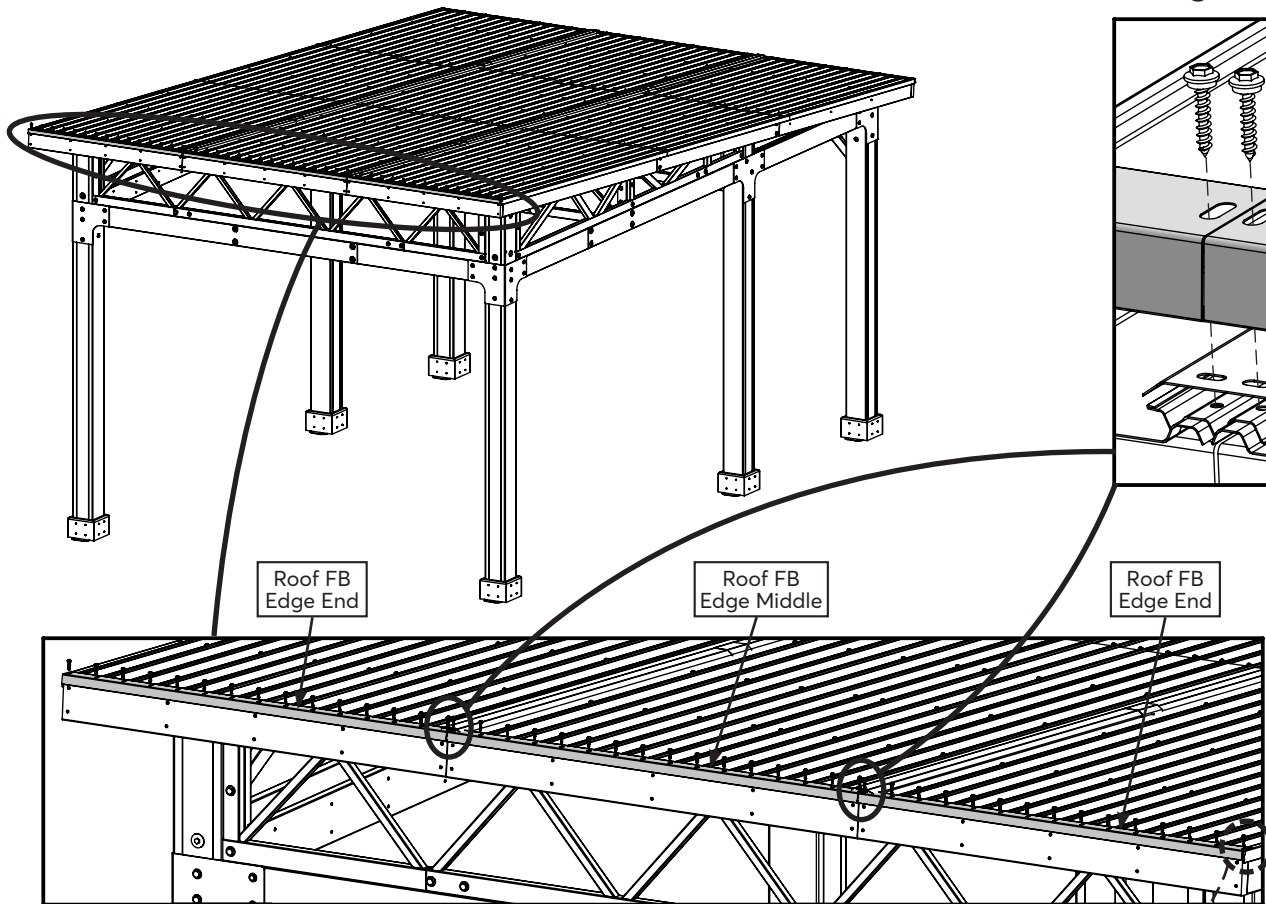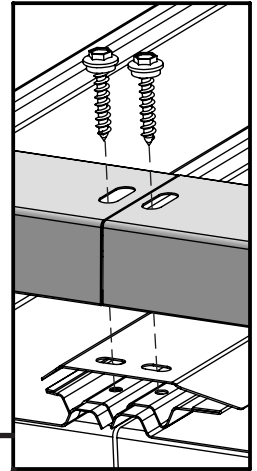

Align holes

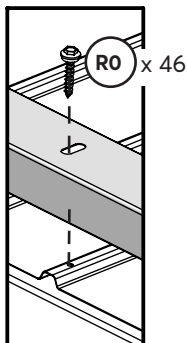

DO NOT overtighten screws,
could cause damage to
roofing material

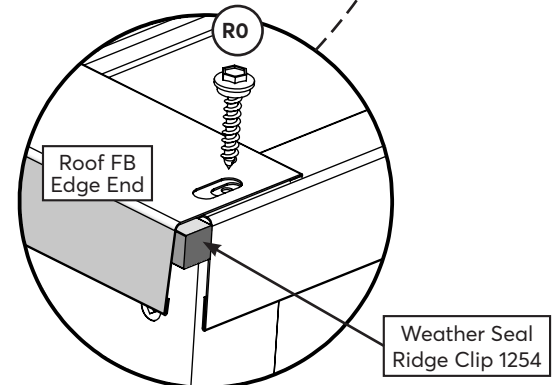



Hardware

46 x R0

Components

1 x Roof FB Edge Middle
2 x Roof FB Edge End
3 x Weather Seal Ridge Clip 1254

Attach Gazebo ID Plaque to a prominent location on your gazebo with two S12. This provides warnings concerning safety and important contact information.

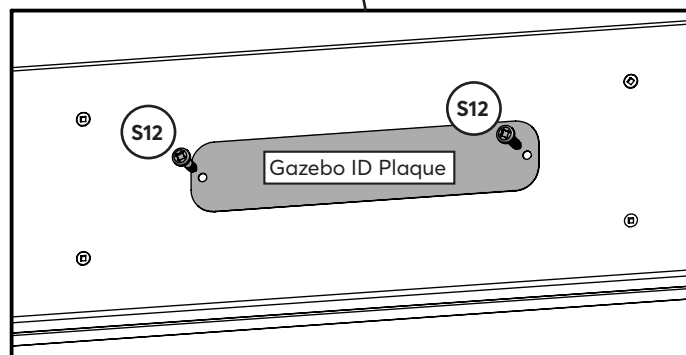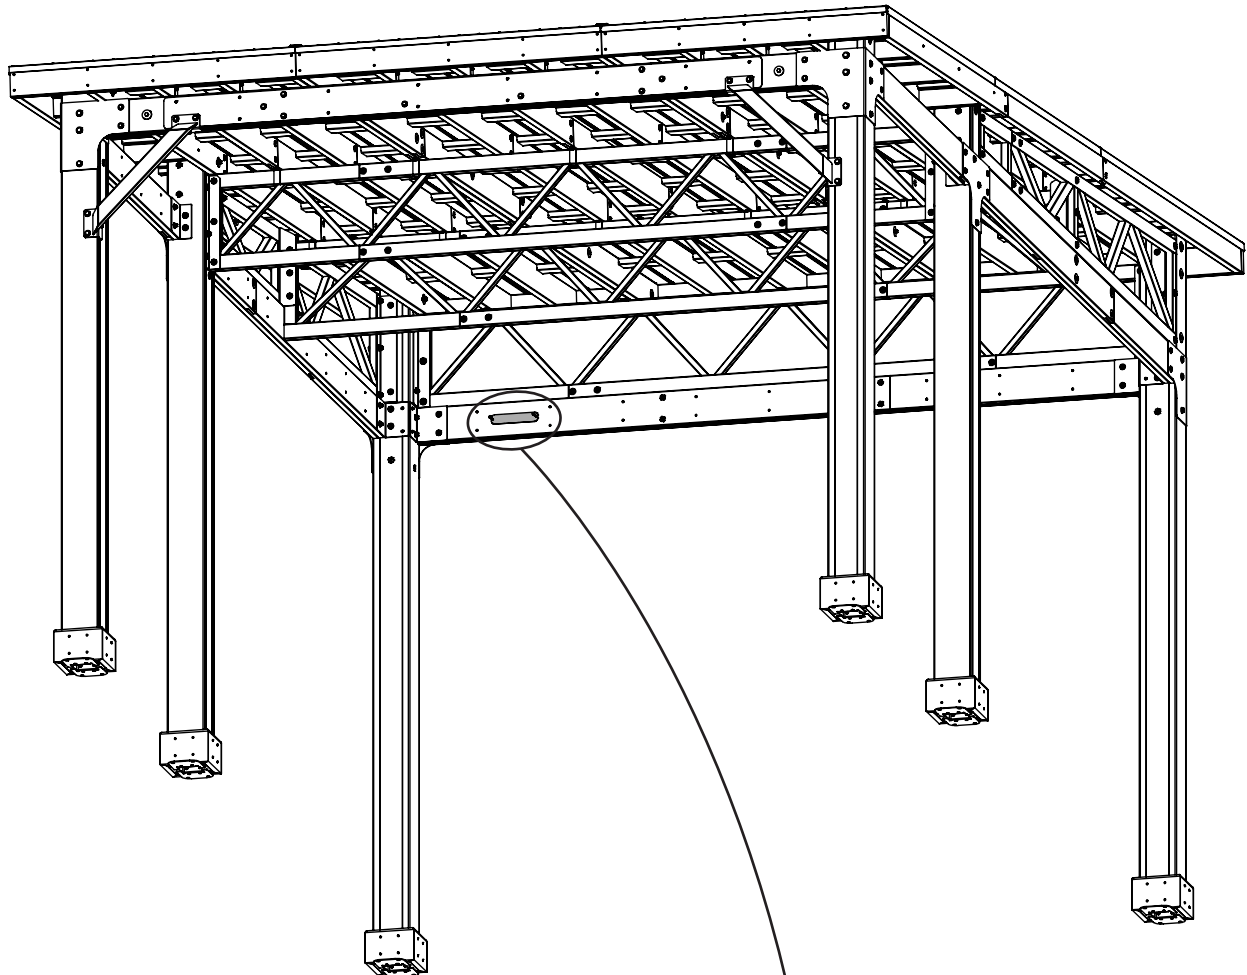

Hardware

2 x S12

Components

1 x Gazebo ID Plaque

[illegible]

[illegible]



Customer Registration Card - Carte d'inscription du client - Tarjeta de Registro del Cliente

First Name - Prénom - Primer Nombre	Initial - Initiale - Inicial	Last Name - Nom de famille - Apellido

Street - Rue - Calle	PO Box - Boîte postale - Casilla postal	Apt. No. - App.

City - Ville - Ciudad	State/Province - État/Province - Estado/Provincia

ZIP/Postal Code - ZIP/Code postal - Código Postal	Country - Pays - País

E-mail Address - Adresse courriel - Dirección de E-mail	Telephone Number - N° de téléphone - No. de Teléfono

Model Name - Nom du modèle - Nombre del Modelo	Model Number (from front cover) - N° du modèle (page de couverture) - Número de Modelo (de la portada)

Date of Purchase - Date d'achat - Fecha de Compra (mm/dd/yyyy) (mm/jj/aaaa) (mm/dd/aaaa)	Place of Purchase - Lieu d'achat - Comprado a

Comments - Commentaires - Comentarios :

Mail To - Envoyer par courrier à - Enviar por Correo a:

Yardistry
375 Sligo Road West, PO Box 10
Mount Forest, Ontario, Canada, N0G 2L0
Attention: Consumer Relations
À l'attention de : Service à la clientèle
Atención a: Servicio de Atención al Cliente

Online Registration - Enregistrement en ligne - Registro online:

www.yardistrystructures.com/warranty

1.888.509.4382

Hours/ Heures/ Horas: 8:30 am - 5:00 pm EST
(excl. holidays/ hors jours fériés/ excepto los días festivos)

English and French Spoken / Anglais et français parlés / Inglés y francés hablado

Yardistry would like to say "Thank you" for your time and feedback.
Yardistry aimerait vous remercier d'avoir pris le temps de répondre au sondage.
Yardistry quiere "Agradecerle" por su tiempo y su opinión.